

# GABARIT DE MOUVEMENT

## Notice de montage



### Liste des pièces

Références LEGO®

**A** Accroche verticale (Dark grey) x2  
Ref. 63868

**B** Accroche horizontale (Dark grey) x2  
Ref. 60478

**C** Plate 1x4 (Dark grey) x2  
Ref. 3710

**D** Tile 1x4 (Dark grey) x2  
Ref. 2431

**E** Accroche verticale (White) x3  
Ref. 63868

**F** Accroche horizontal (White) x2  
Ref. 60478

**G** Plate 1x2 (White) x3  
Ref. 3710

**H** Tile 1x4 (White) x3  
Ref. 2431

**I** Plate 1x2 (White) x1  
Ref. 3023

**J** Accroche verticale (Black) x1  
Ref. 63868

 
**K** Accroche horizontal (White) x2  
Ref. 60478

**L** Plate 1x4 (Black) x2  
Ref. 3710

**M** Tile 1x4 (Black) x2  
Ref. 2431

**N** Plate 1x2 (White) x1  
Ref. 3023

# Etape 1



3x **E**



2x **F**



3x **G**



 
3x **H**




1x **I**





1

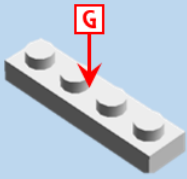

2

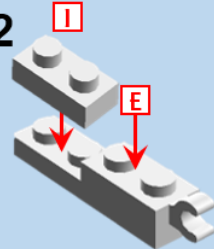 


3

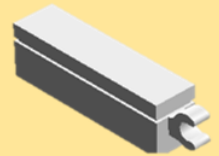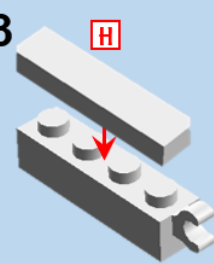  


x1


 
4

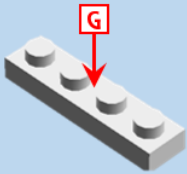

5

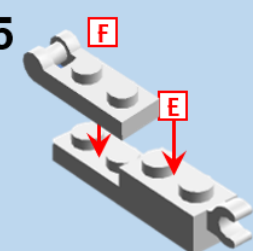 


6

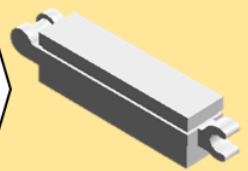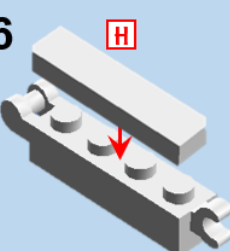  

x3



 Assemblage

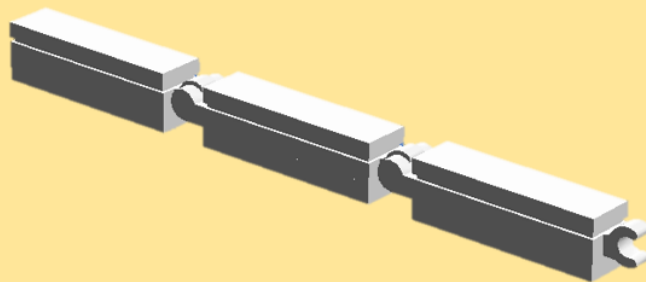

# Etape 2



2x **A**



 
2x **B**




2x **C**




2x **D**




1

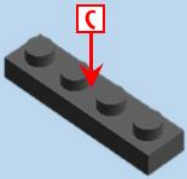 

2

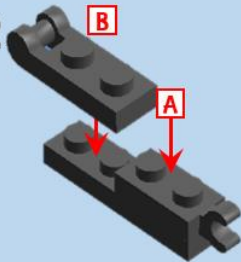 




3

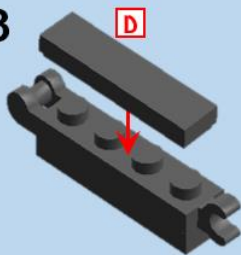 


x2



   Assemblage

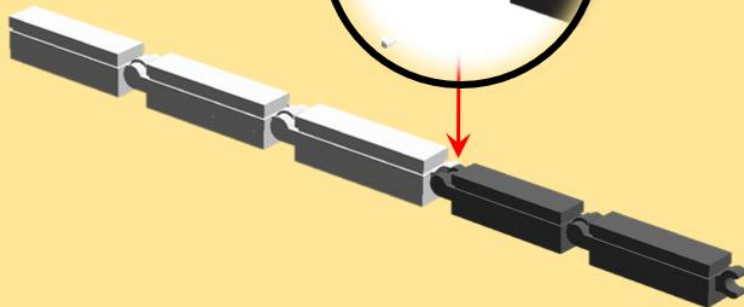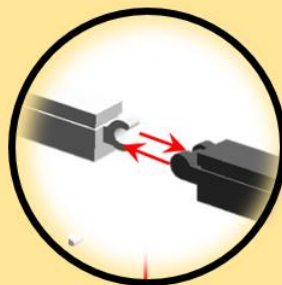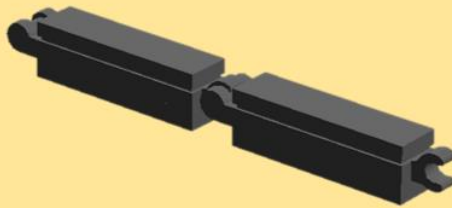

# Etape 3

 

1x **J**



2x **K**



 
2x **L**




2x **M**




1x **N**





1

 

2

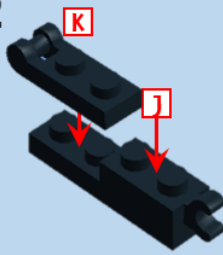 


3

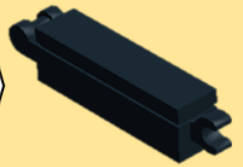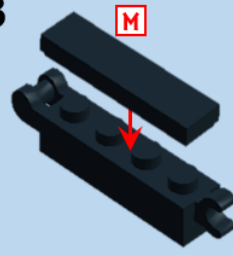  


x1


 
4

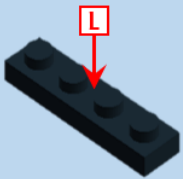

5

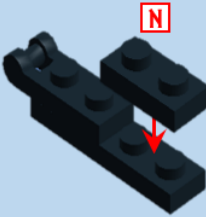 

6

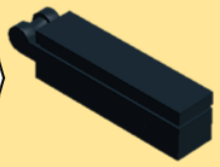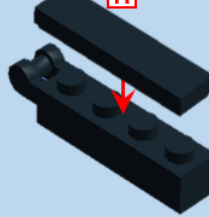  

x1

Assemblage

