

Power Feed to Loom.
(Not Always Fitted, Other
wires may be fitted)

From Battery



Starter Motor

Trigger Wire

