

IRIS R & X 78 BOARD SETTING :

Insert position rule : The 1st insert is the most forward

Mast base position : + - 1cm



IRIS R & X 85 BOARD SETTING :

Insert position rule : The 1st insert is the most forward

Mast base position : + - 1cm



IRIS R91 BOARD SETTING :

Insert position rule : The 1st insert is the most forward

Mast base position : + - 1cm



IRIS R100 BOARD SETTING :

Insert position rule : The 1st insert is the most forward

Mast base position : + - 1cm

