

≡ Browse

Fuse box diagram

Locate fuses and relays



Fuses and relay Corsa B




For the Opel/Vauxhall Corsa B 1993, 1994, 1995, 1996, 1997, 1998, 1999, 2000 model year.

Fuse box located.





Engine bay with AC (since 1995).

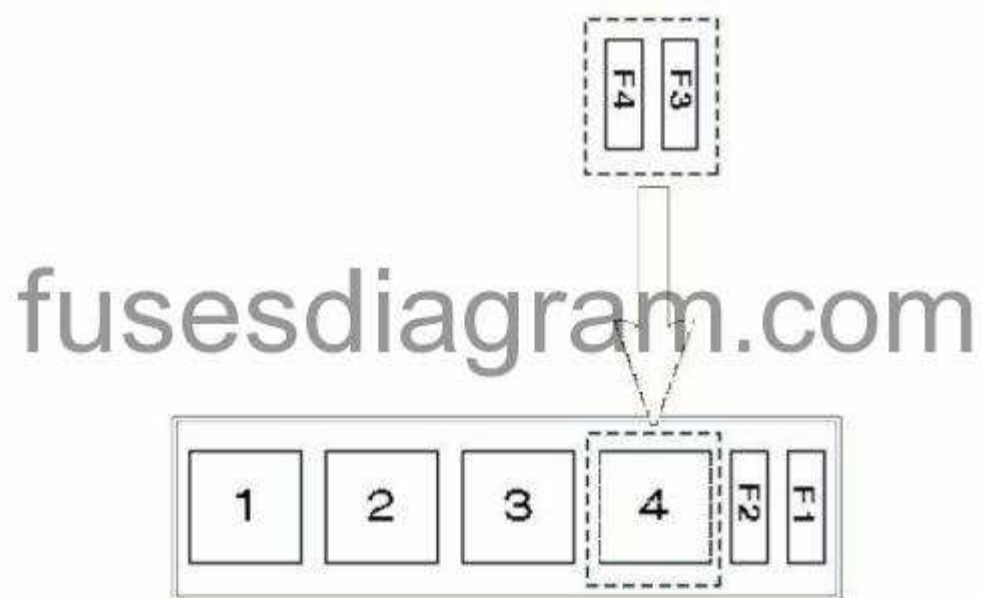

1	Air conditioning compressor clutch relay
2	Air conditioning condenser blower motor relay 1
3	Air conditioning condenser blower motor relay 2



4	Air conditioning condenser blower motor relay3
F1	
F2	(50A) Exhaust air pump
F3	(30A) Fuel filter heating-diesel
F4	(80A) Glow plugs-diesel

Engine bay without AC (since 1995).



F1	—
F2	(50A) Exhaust air pump
F3	(30A) Fuel filter heating-diesel
F4	(80A) Glow plugs-diesel

Fuses in the vehicle passenger compartment Corsa B.

Fuse box located.





fuse box diagram.





legend.

R1	Door mirror heater relay (-95)
R2	Indicator relay
R3	Rear screen intermittent wiper relay
R4	Fog lamps relay
R5	Rear fog lamp relay
R6	Horn relay (-96)
R7	Windscreen wiper motor relay
R8	Heated rear window relay (-95)
R9	Headlamps ON warning buzzer
R10	Alarm system relay



R11	Headlamp washer pump delay relay
R12	Starter relay – alarm system (-95)
14	Datalink connector
F1	(20A) Interior lamp, boot lamp, horn, audio unit, hazard warning lamps, alarm system
F2	(10A) AT
F3	(30A) Heated rear window
F4	–
F5	(10A) AT
F6	(10A) Rear fog lamp
F7	(30A) AC
F8	(10A) LH side and tail lamps, headlamp adjuster unit switch illumination
F9	(20A) Fog lamps



F10	(10A) LH head lamp main beam
F11	(30A) Head lamp washers
F12	(10A) LH head lamp dipped beam, head lamp adjuster units
F13	(20A) Central locking
F14	—
F15	(30A) Heater blower motor, engine coolant blower motor, AC system
F16	(30A) Wind screen wipers
F17	(10A) Audio unit, information display, warning lamps, glove box lamp, electric windows, electric door mirrors, electric door mirror heaters
F18	(20A) Cigarette lighter, central locking, reversing lamp, automatic transmission
F19	(10A) Switch illumination(94 on), lights on warning buzzer and headlamp washers (95on)
F20	(30A) Engine coolant blower motor, AC relay
F21	(15A) Stop lamps, hazard warning, ABS




F22	(10A)ABS
F23	(10A) RH side and tail lamps, license plate lamps
F24	(30A) Electric sunroof
F25	(10A) RH head lamp main beam
F26	(20A) Fuel injection system
F27	(10A) RH head lamp dipped beam
F28	(30A) Electric windows

Relay over the glove compartment Corsa B.

pre 1994.



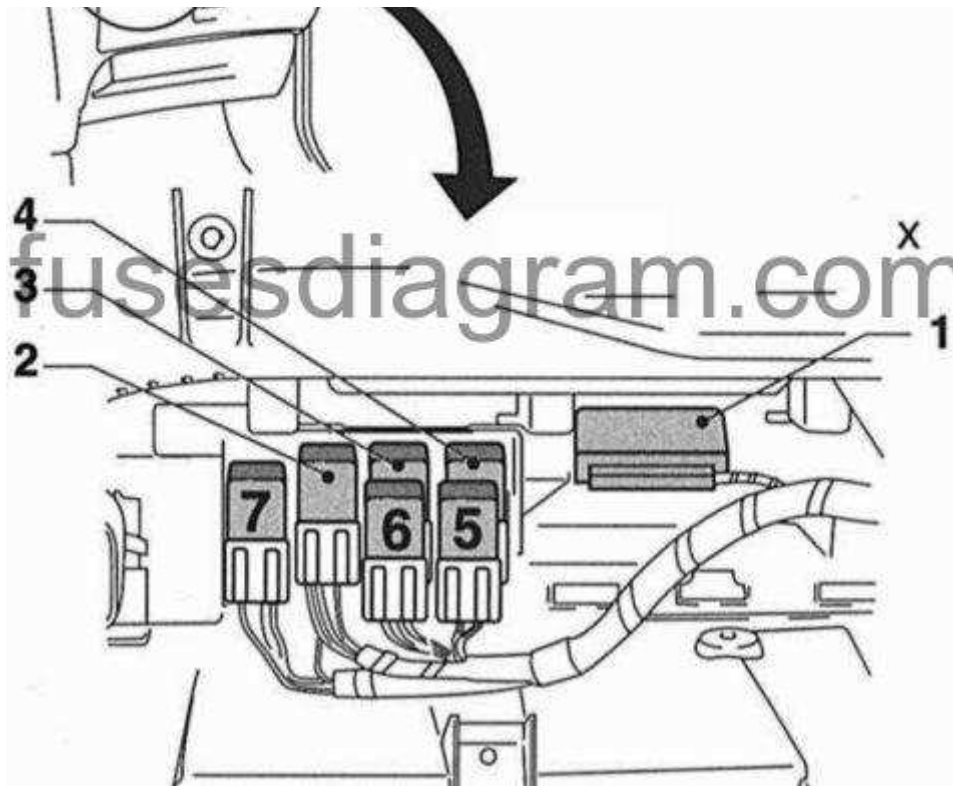

Relay are coded as follows.


2	Air conditioning condenser blower motor relay 1
3	Air conditioning condenser blower motor relay 2
4	Air conditioning condenser blower motor relay 3
5	Air conditioning relay



6	Heater blower relay – full speed
7	Air conditioning condenser blower motor relay 4

Relays for the lining of the right post.

Identifying.

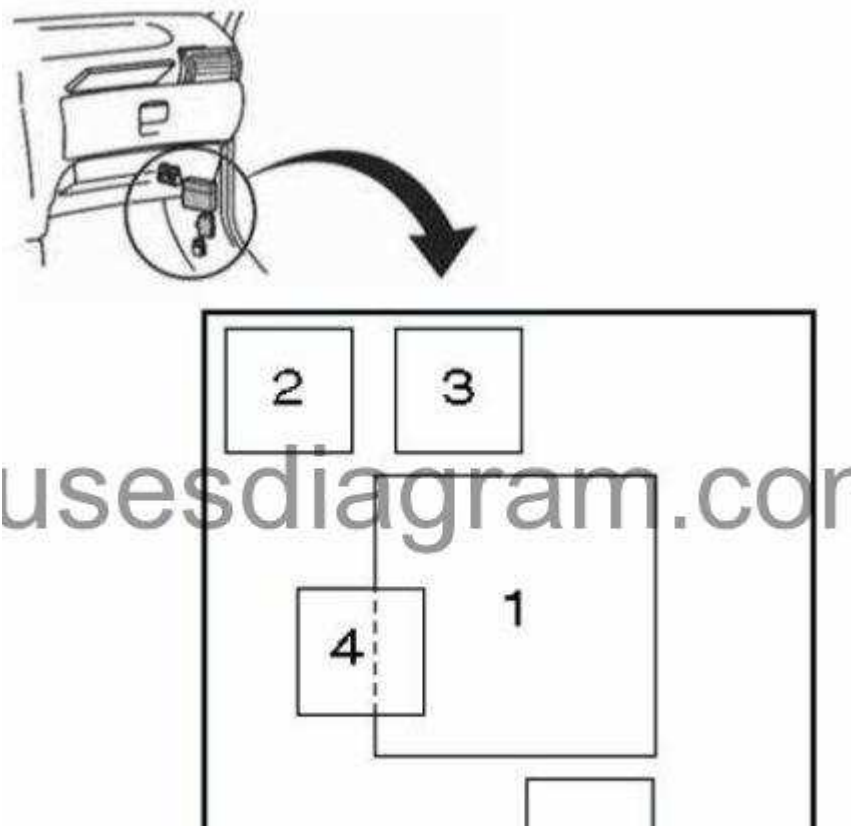



1	Engine control module
2	Fuel pump relay
3	Exhaust air pump relay
5	Central locking control module
6	Fuel pump relay



Posted in [Opel/Vauxhall](#) Tagged [Fuse box diagram Opel/Vauxhall](#)

[« FUSE BOX DIAGRAM ASTRA G](#)

[FUSES AND RELAY OPEL/VAUXHALL CORSA](#)

[D »](#)

Ads

Categories

[Alfa Romeo](#)

[Audi](#)

[BMW](#)



Chevrolet

Chrysler

Dodge

Fiat

Ford

Honda

Hyundai

Jeep

Kia

Land Rover

Mazda

Mercedes

Mercury

Nissan

Opel/Vauxhall

Peugeot



[Range Rover](#)

[Renault](#)

[Toyota](#)

[Volkswagen](#)

Recent Posts

[Fuses and relay Toyota Corolla 2007-2013](#)

[Fuses and relay Toyota Rav4 2005-2012](#)

[Fuses and relay Toyota Rav4 2000-2005](#)

[Fuses and relay Jeep Grand Cherokee
2005-2011](#)

[Fuses and relay Honda CR-V 1997-2001](#)

[Fuses and relay Honda Accord 2008-2012](#)

[Fuses and relay Renault Megane 2](#)

[Fuses and relay Mazda 3 2008-2013](#)

[Fuses and relay Mazda 3 2003-2009](#)

[Fuses and relay Ford Focus MK2](#)



You may also enjoy...



Fuses and relay Opel/Vauxha...



Fuses and relay Opel/Vauxha...



Fuses and relay Opel/Vauxha...



Fuses and relay Opel/Vauxha...



