

Service  
Service  
**Service**



# Service Manual

Chassis name	Platform	Model name
TPM17.3E LA	MTK5596+333/334	43PUS6412/05
		49PUS6412/05
		49PUS6482/05
		49PUS7502/05
		55POS9002/05
		55PUS7502/05
		65PUS6412/05
		65PUS7502/05

<b>1.Product inforamtion.....</b>	<b>3</b>
<b>2.Connections overview.....</b>	<b>4</b>
<b>3.Mechanical Instructions.....</b>	<b>5</b>
Cable dressing (43" 6412 series).....	5
Cable dressing (49" 6412 series).....	5
Cable dressing (65" 6412 series).....	6
Cable dressing (49" 6482 series).....	6
Cable dressing (49"/55"/65" 7502 series).....	7
Cable dressing (55" 9002 series).....	7
Assembly/Panel Removal .....	8
<b>4.Service Modes.....</b>	<b>13</b>
<b>5.Software upgrading, Error Code and Panel Code.....</b>	<b>17</b>
<b>6.Circuit Descriptions.....</b>	<b>22</b>
<b>7.IC Data Sheet.....</b>	<b>30</b>
<b>8.Circuit Diagrams.....</b>	<b>33</b>
8.1 715G8620 PSU.....	33
8.2 715G8672 PSU.....	37
8.3 715G8682 PSU.....	41
8.4 715G8886 PSU.....	45
8.5 715G8579 SSB.....	49
8.6 715G8465 SSB.....	72
8.7 715G8694 IR/LED Panel.....	97
8.8 715G8623 IR/LED Panel.....	98
8.9 715G8555 Keyboard control panel.....	99
8.10 715G7088 Keyboard control panel.....	100
<b>9.Styling Sheet.....</b>	<b>101</b>
6412 series 43".....	101
6412 series 49".....	102
6412 series 65".....	103
6482 series 49".....	104
7502 series 49"/55".....	105
7502 series 65".....	106
9002 series 55".....	107

# 1. Product information

22.5

## Display Type

### Diagonal screen size

- 108 cm / 43 inch
- 123 cm / 49 inch
- 126 cm / 50 inch
- 139 cm / 55 inch
- 164 cm / 65 inch

### Display resolution

- 3840 x 2160

22.6

## Display Input Resolution

### Video formats

#### Resolution — Refresh rate

- 480i - 60 Hz
- 480p - 60 Hz
- 576i - 50 Hz
- 576p - 50 Hz
- 720p - 50 Hz, 60 Hz
- 1080i - 50 Hz, 60 Hz
- 1080p - 24 Hz, 25 Hz, 30 Hz
- 2160p - 24 Hz, 25 Hz, 30 Hz, 50 Hz, 60 Hz

### Computer formats

#### Resolutions (amongst others)

- 640 x 480p - 60 Hz
- 800 x 600p - 60 Hz
- 1024 x 768p - 60 Hz
- 1280 x 768p - 60 Hz
- 1360 x 765p - 60 Hz
- 1360 x 768p - 60 Hz
- 1280 x 1024p - 60 Hz
- 1920 x 1080p - 60 Hz
- 3840 x 2160p - 24 Hz, 25 Hz, 30 Hz, 50 Hz, 60 Hz

22.7

## Connectivity

### TV Side

- Common Interface slot: CI+/CAM
- USB 1 - USB 2.0
- USB 2 - USB 3.0
- Headphones - Stereo mini-jack 3.5mm
- HDMI 1 in - ARC - MHL - Ultra HD - HDR
- HDMI 2 in - ARC - Ultra HD - HDR

### TV Bottom

- Audio out - Optical Toslink
- Network LAN - RJ45
- YPbPr, L/R
- HDMI 4 in - ARC
- HDMI 3 in - ARC

- Antenna (75 ohm)
- YPbPr, L/R
- Satellite tuner

22.8

## Sound

- Output power (RMS) : 20W
- Dolby Audio
- DTS Premium Sound™

22.9

## Multimedia

### Connections

- USB 2.0 / USB 3.0
- Ethernet LAN RJ-45
- Wi-Fi 802.11a/b/g/n/ac (built-in)
- BT.2.1 with EDR & BT4.0 with BLE (\* Your TV doesn't support Bluetooth subwoofer and Bluetooth speakers)

### Supported USB file systems

- FAT 16, FAT 32, NTFS

### Playback formats

- Video Codecs : AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, HEVC
- Audio Codecs : AAC, MP3, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10)
- Subtitles :
  - Formats : SRT, SUB, TXT, SMI
  - Character encodings : UTF-8, Central Europe and Eastern Europe (Windows-1250), Cyrillic (Windows-1251), Greek (Windows-1253), Turkish (Windows-1254), Western Europe (Windows-1252)

### Image Codecs : JPEG

#### Limitations :


- Maximum supported total bit rate for a media file is 30Mbps.
- Maximum supported video bit rate for a media file is 20Mbps.
- MPEG-4 AVC (H.264) is supported up to High Profile @ L5.1.
- H.265 (HEVC) is supported upto Main / Main 10 Profile up to Level 5.1
- VC-1 is supported up to Advanced Profile @ L3.

### Supported media server software (DMS)

- You can use any DLNA V1.5 certified media server software (DMS class).
- You can use the Philips TV Remote app (iOS and Android) on mobile devices.


Performance may vary, depending on the capabilities of the mobile device and the software used.

## 2. Connections Overview

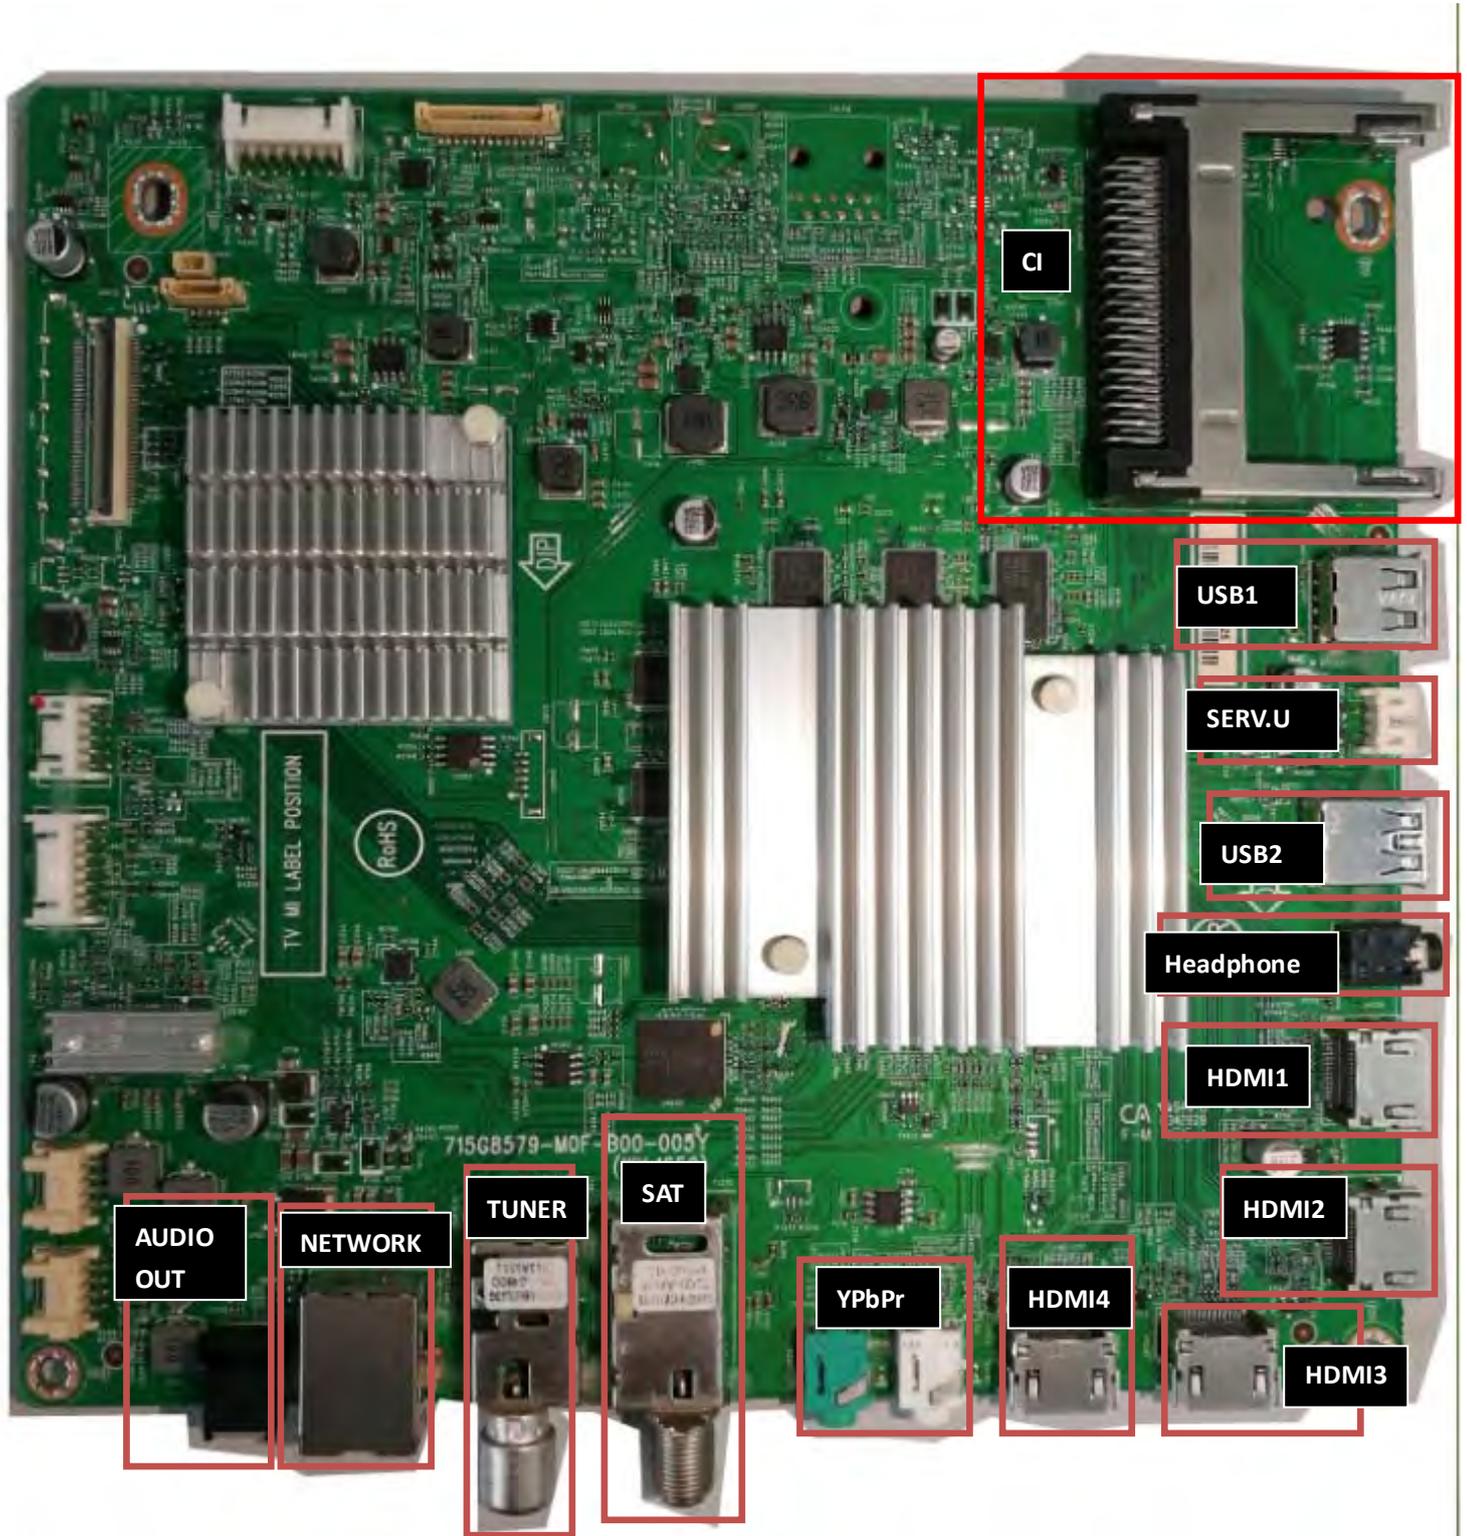


### 3. Mechanical Instructions

#### 3.1 Cable Dressing

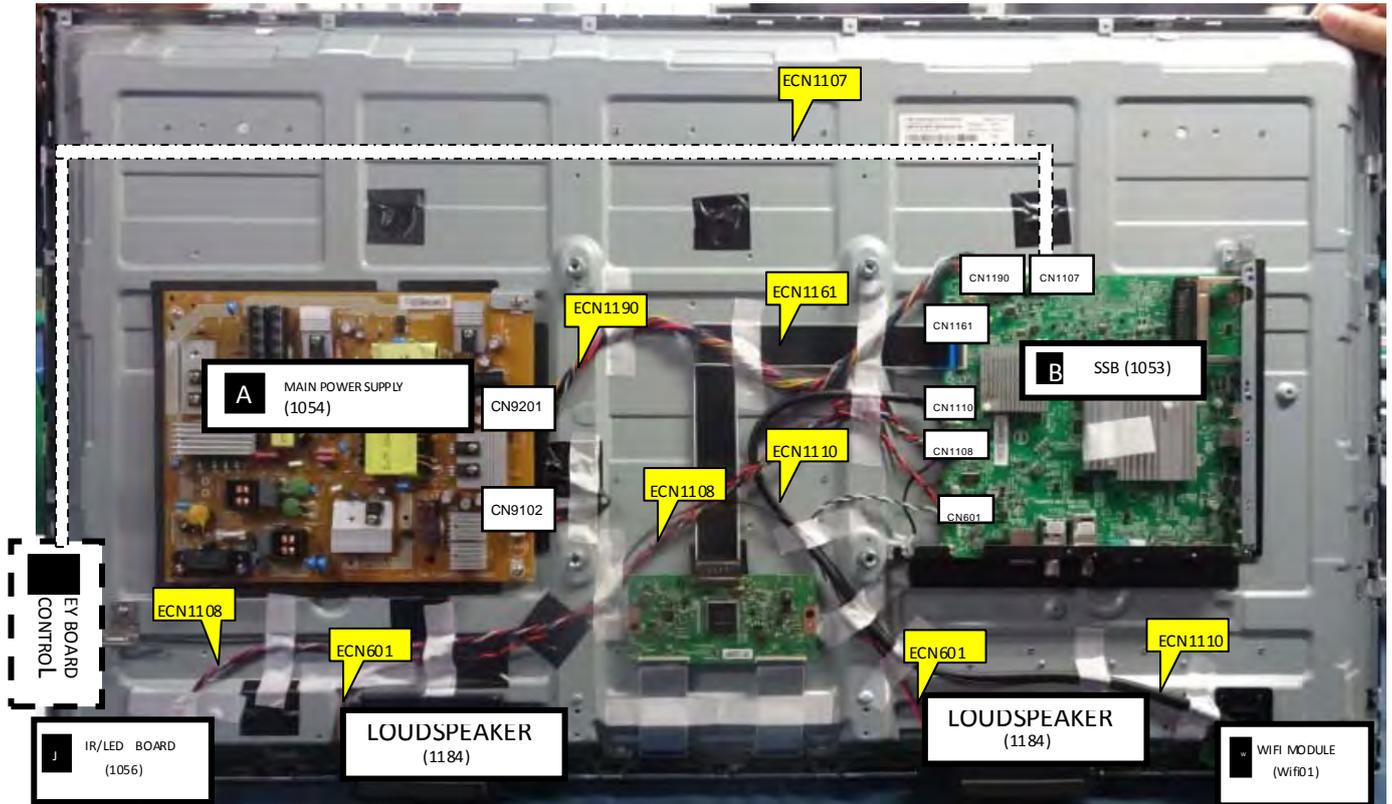

Cable dressing (43" 6412 series)

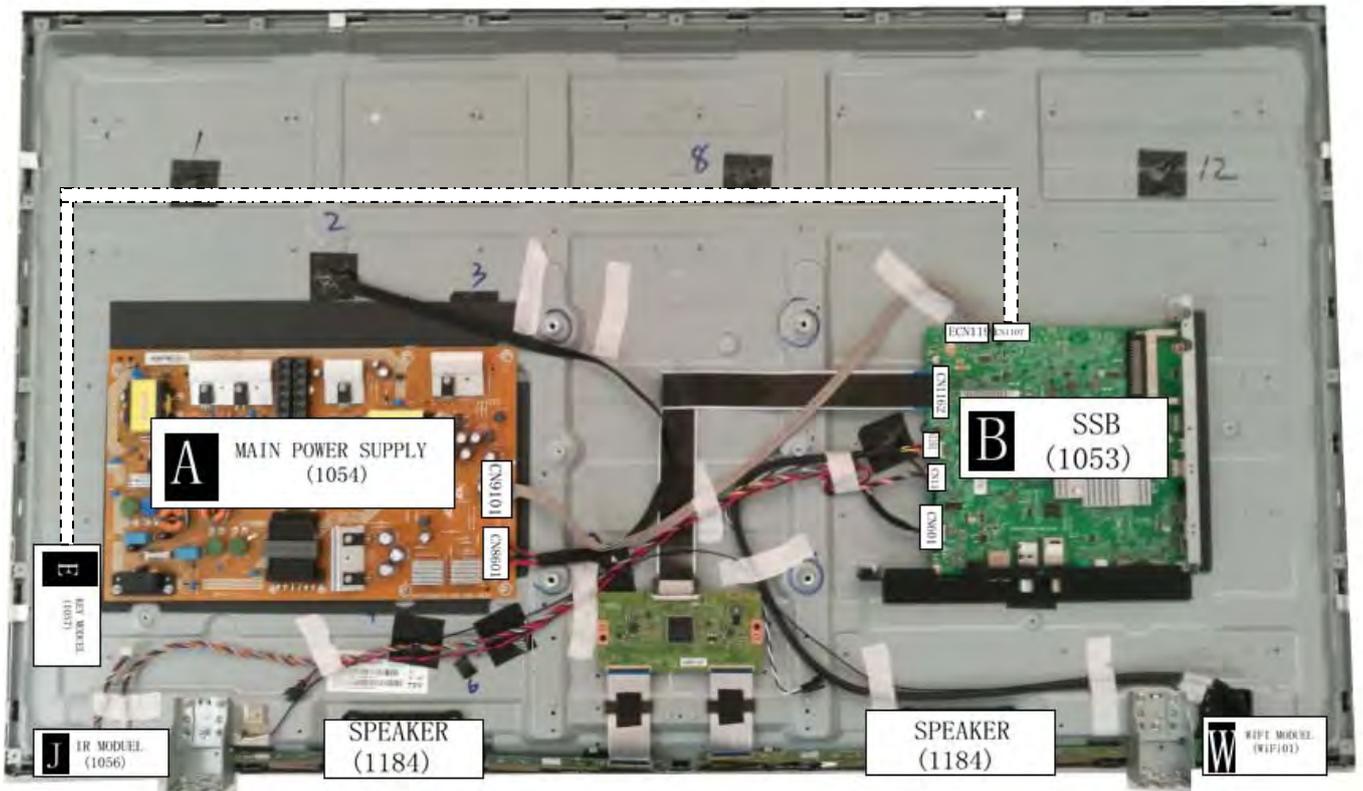

Cable dressing (49" 6412 series)





## 3.2 Assembly/Panel Removal

### 3.2.1 Stand removal

1. Remove the fixation screws [1] that secure the stand
2. Take the stand bracket out from the set.



### 3.2.2 IR board Control Unit

1. Unplug the connector from the SSB.

**Caution:** be careful, as these are very fragile connectors!

1. Remove all the fixation screws [1] and connector from the IR board control unit.
3. Remove the IR lens, IR board from the DECO\_REAR\_COVER.

When defective, replace the whole unit.



### 3.2.3 Rear Cover

**Warning:** Disconnect the mains power cord before removing the rear cover.

1. Remove fixation screws [2] and [3] that secure the base assy..
2. Gently lift the rear cover from the TV. Make sure that wires and cables are not damaged while lifting the rear cover from the set.



( 64x2 series)



(7502 series)


### 3.2.4 Keyboard Control Unit

1. Release the connector from the SSB Board.


**Caution:** be careful, the Keyboard is catch on the Back cover, please be careful to avoid damage the fragile connectors!

2. Remove all the fixation screws from the keyboard control panel [1] and take it out from the Back cover

When defective, replace the whole unit.

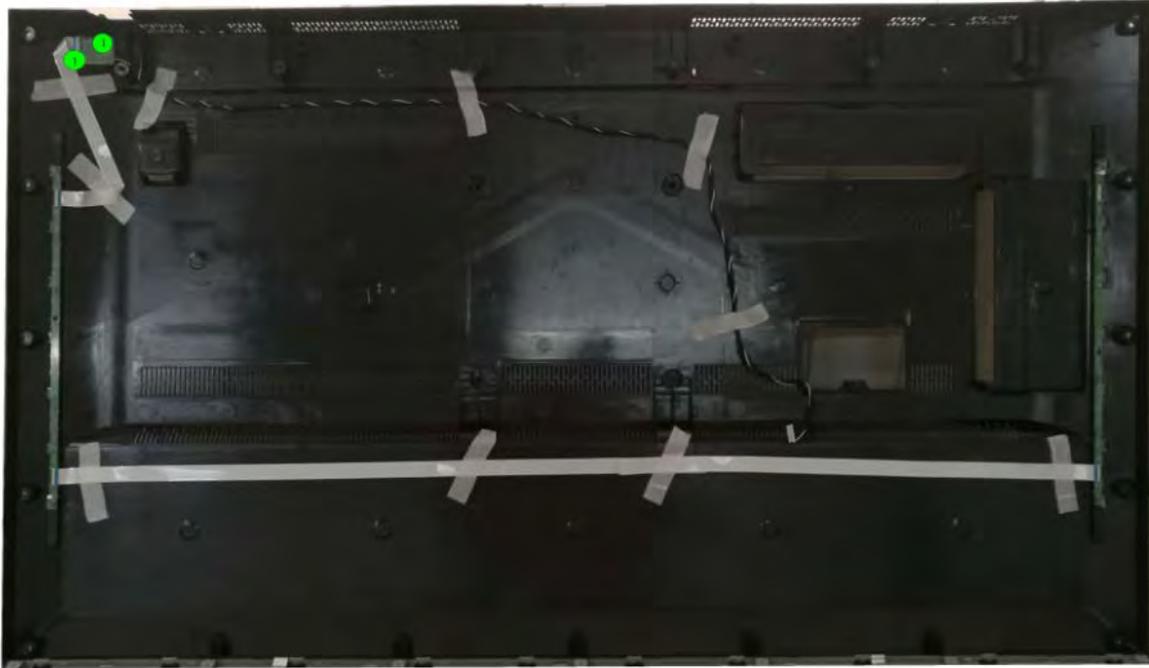

(49" 64x2 series)

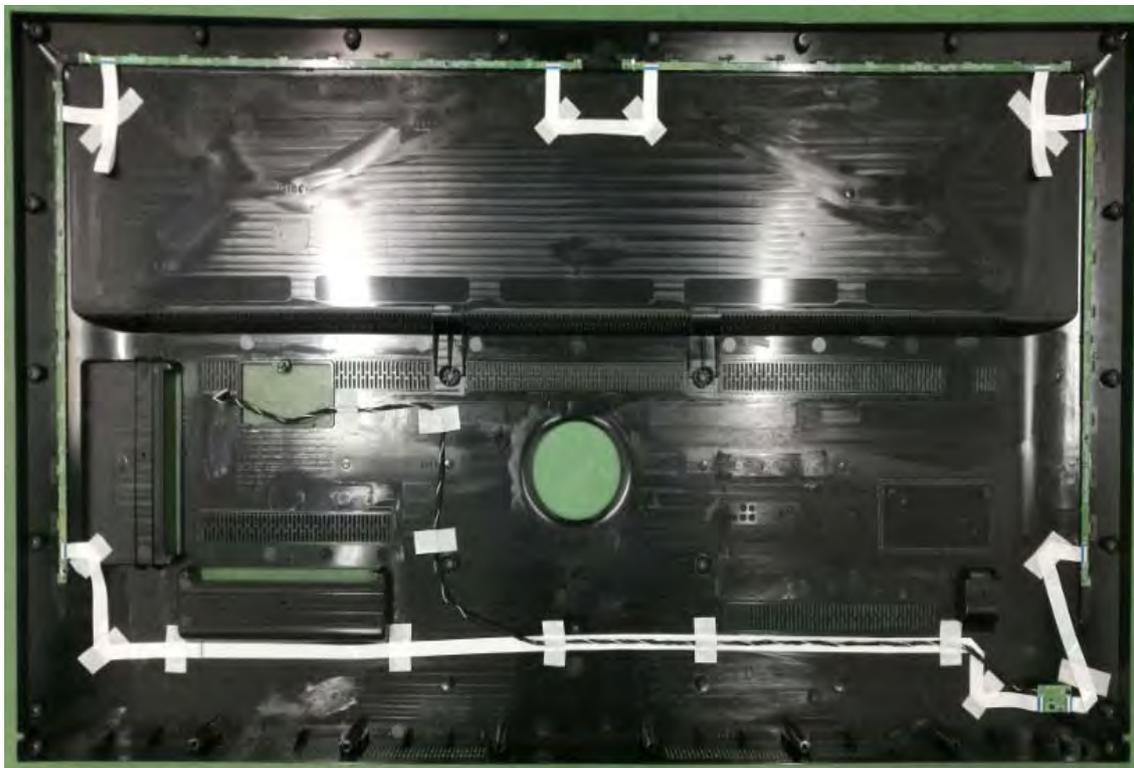

(55" 64x2 series)



(55" 9002 series)


### 3.2.5 Small Signal Board (SSB)

**Caution:** it is mandatory to remount all different screws at their original position during re-assembly. Failure to do so may result in damaging the SSB.

1. Release the clips from the LVDS connector that connect with the SSB[1].

**Caution:** be careful, as these are very fragile connectors!

2. Unplug all other connectors [2] .
3. Remove all the fixation screws from the SSB [3].
4. The SSB can now be shifted from side connector cover, then lifted and taken out of the I/O bracket.

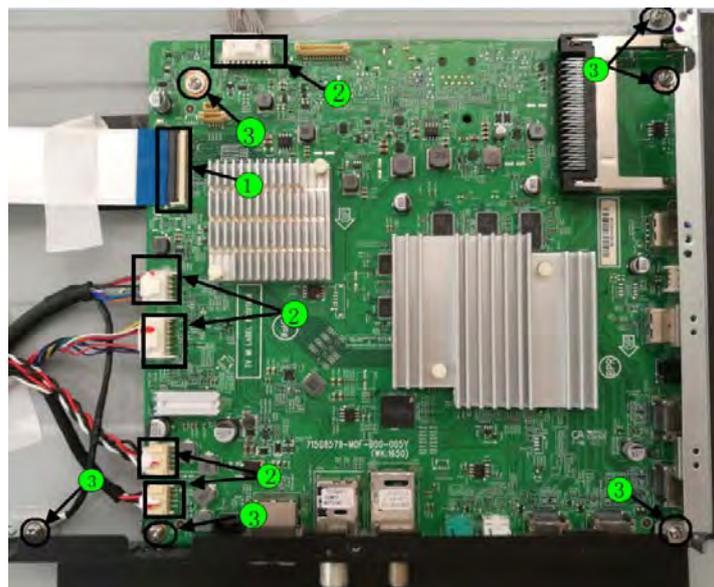

### 3.2.6 Power Supply Unit (PSU)

**Caution:** it is mandatory to remount all different screws at their original position during re-assembly. Failure to do so may result in damaging the PSU.

1. Gently unplug all connectors from the PSU.

3. Remove all fixation screws from the PSU.
3. The PSU can be taken out of the set now.

### 3.2.7 Speakers

1. Gently release the tapes that secure the speaker cables.
2. Unplug the speaker connector from the SSB.
3. Take the speakers out.

When defective, replace the both units.

### 3.2.8 WIFI module

1. Unplug the connector from the SSB..
2. Remove fixation screw that secure the WIFI module,

When defective, replace the whole unit.



### 3.2.9 LCD Panel

1. Remove the SSB as described earlier.
2. Remove the PSU as described earlier.
3. Remove the keyboard control panel as described earlier.
4. Remove the stand bracket as described earlier.
5. Remove the IR/LED as described earlier.
6. Remove the fixations screws that fix the metal clamps to the front bezel. Take out those clamps.
7. Remove all other metal parts not belonging to the panel.
8. Lift the LCD Panel from the bezel.

When defective, replace the whole unit.

## 4. Service Modes

### 4.1 Service Modes

The Service Mode feature is split into following parts:

- Service Alignment Mode (SAM).
- Factory Mode.
- Customer Service Mode (CSM). SAM and the Factory mode offer features, which can be used by the Service engineer to repair/align a TV set.

SAM and the Factory mode offer features, which can be used by the Service engineer to repair/align a TV set. Some features are:

- Make alignments (e.g. White Tone), reset the error buffer(SAM and Factory Mode).
- Display information ("SAM" indication in upper right corner of screen, error buffer, software version, operating hours,options and option codes, sub menus).

The CSM is a Service Mode that can be enabled by the consumer. The CSM displays diagnosis information, which the customer can forward to the dealer or call centre. In CSM mode, "CSM", is displayed in the top right corner of the screen. The information provided in CSM and the purpose of CSM is to:

- Increase the home repair hit rate.
- Decrease the number of nuisance calls.
- Solved customers' problem without home visit.

**Note:** For the new model range, a new remote control (RC) is used with some renamed buttons. This has an impact on the activation of the Service modes. For instance the old "MENU" button is now called "HOME" (or is indicated by a "house" icon).

### 4.2 Service Alignment Mode (SAM)

#### **Purpose**

- To modify the NVM.
- To display/clear the error code buffer.
- To perform alignments.

#### **Specifications**

- Operation hours counter (maximum five digits displayed).
- Software version, error codes, and option settings display.
- Error buffer clearing.
- Option settings.
- Software alignments (White Tone).
- NVM Editor.
- Set screen mode to full screen (all content is visible).

#### **How to Activate SAM**

To activate SAM, use one of the following methods:

- Press the following key sequence on the remote control transmitter: "**062596**", directly followed by the "**INFO/OK**" button. Do not allow the display to time out between entries while keying the sequence.
- Or via ComPair.

After entering SAM, the following items are displayed,

with "SAM" in the upper right corner of the screen to indicate that the television is in Service Alignment Mode.

#### **How to Navigate**

- In the SAM menu, select menu items with the UP/DOWN keys on the remote control transmitter. The selected item will be indicated. When not all menu items fit on the screen, use the **UP/DOWN keys** to display the next/previous menu items.

- With the “LEFT/RIGHT” keys, it is possible to:
  - (De) activate the selected menu item.
  - (De) activate the selected sub menu.
  - Change the value of the selected menu item.
- When you press the MENU button once while in top level SAM, the set will switch to the normal user menu (with the SAM mode still active in the background).

#### **How to Store SAM Settings**

To store the settings changed in SAM mode (except the RGB Align settings), leave the top level SAM menu by using the POWER button on the remote control transmitter or the television set. The mentioned exceptions must be stored separately via the STORE button.


#### **How to Exit SAM**

Use one of the following methods:

- Switch the set to STANDBY by pressing the mains button on the remote control transmitter or the television set.
- Via a standard RC-transmitter, key in “00” sequence.

**Note:** When the TV is switched “off” by a power interrupt while in SAM, the TV will show up in “normal operation mode” as soon as the power is supplied again. The error buffer will not be cleared.

#### **SAM mode overview**

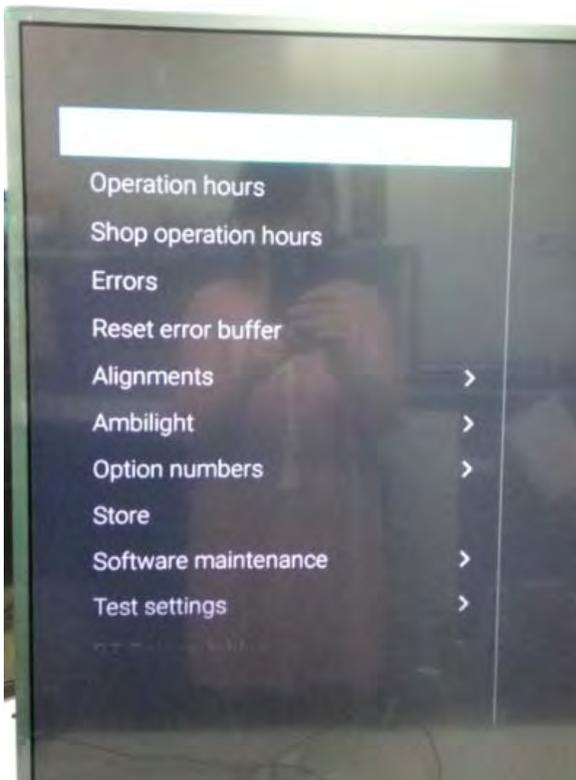

### **4.3 Factory mode:**

#### **Purpose**

- To perform extended alignments.

#### **Specifications**

- Displaying and or changing Panel ID information.
- Displaying and or changing Tuner ID information.
- Error buffer clearing.
- Various software alignment settings.
- Testpattern displaying.

- Public Broadcasting Service password Reset.
- etc.


#### **How to Activate the Factory mode**

To activate the Factory mode, use the following method:

- Press the following key sequence on the remote control transmitter: from the “**menu/home**” press “**1999**”, directly followed by the “**Back/Return**” button. Do not allow the display to time out between entries while keying the sequence.

After entering the Factory mode, we can see many items displayed, use the **UP/DOWN** keys to display the next/previous menu items

#### **Factory mode overview**

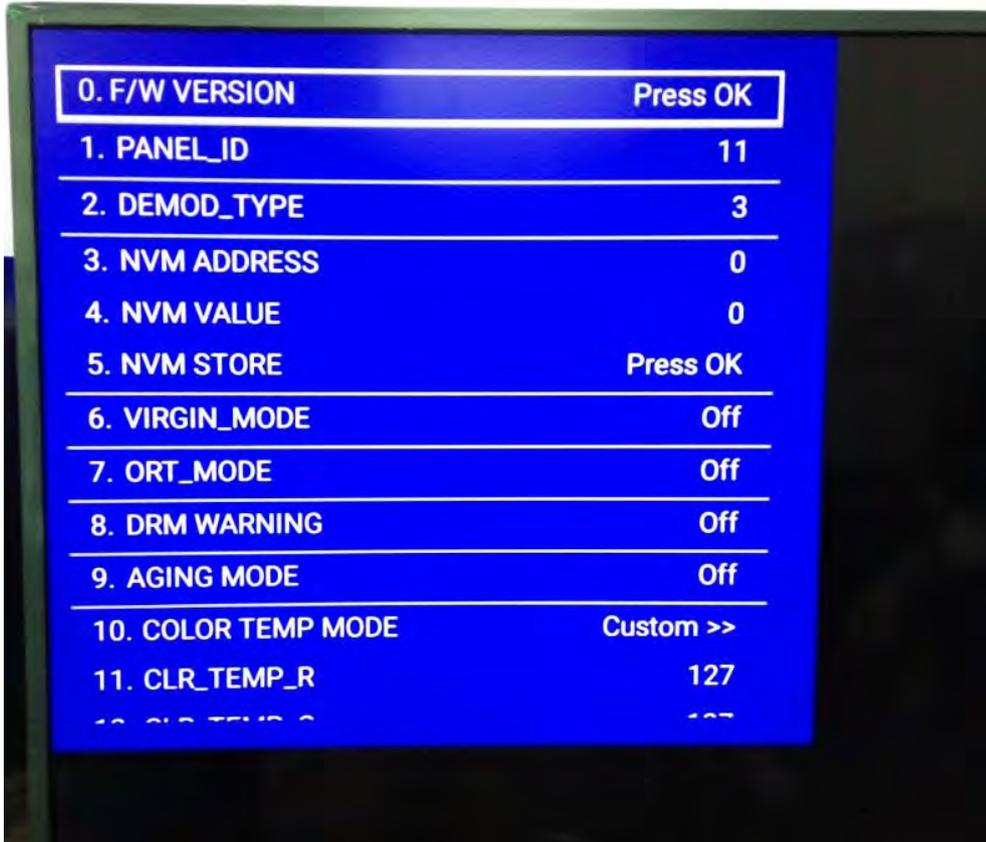

#### **How to Exit the Factory mode**

Use one of the following methods:

- Select EXIT\_FACTORY from the menu and press the “OK” button.

**Note:** When the TV is switched “off” by a power interrupt, or normal switch to “stand-by” while in the factory mode, the TV will show up in “normal operation mode” as soon as the power is supplied again. The error buffer will not be cleared.

## **4.4 Customer Service Mode (CSM)**

### **Purpose**

The Customer Service Mode shows error codes and information on the TVs operation settings. The call centre can instruct the customer (by telephone) to enter CSM in order to identify the status of the set. This helps the call centre to diagnose problems and failures in the TV set before making a service call.

The CSM is a read-only mode; therefore, modifications are not possible in this mode.

### **Specifications**

- Ignore “Service unfriendly modes”.


- Line number for every line (to make CSM language independent).
- Set the screen mode to full screen (all contents on screen is visible).
- After leaving the Customer Service Mode, the original settings are restored.
- Possibility to use “CH+” or “CH-” for channel surfing, or enter the specific channel number on the RC.

### **How to Activate CSM**

To activate CSM, press the following key sequence on a standard remote control transmitter: “123654” (do not allow the display to time out between entries while keying the sequence). After entering the Customer Service Mode, the following items are displayed. use the **Right/Left** keys to display the next/previous menu items

**Note:** Activation of the CSM is only possible if there is no (user) menu on the screen!

### **CSM Overview**

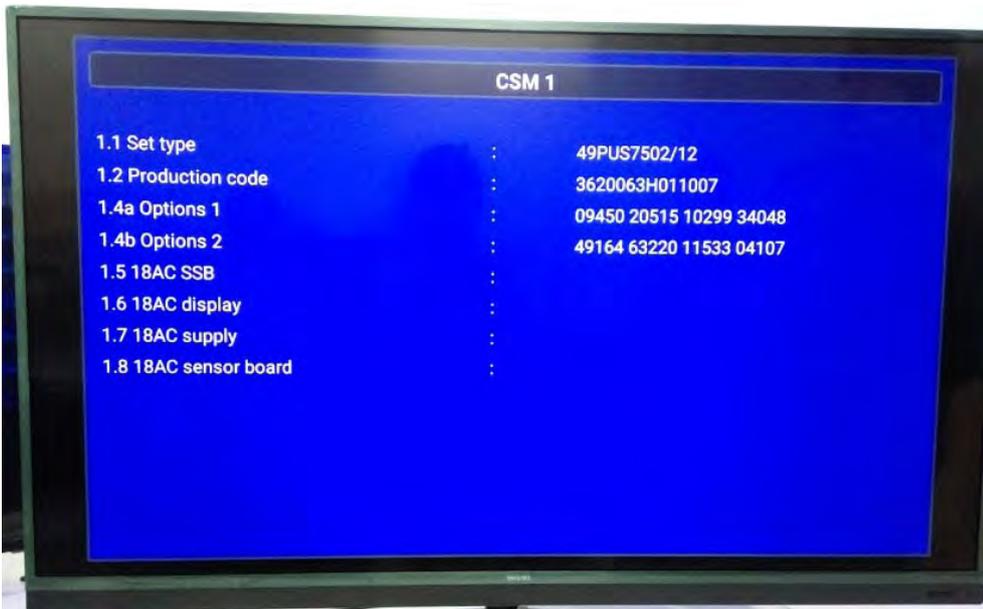

### **How to Navigate**

By means of the “CURSOR-DOWN/UP” knob (or the scroll wheel) on the RC-transmitter, can be navigated through the menus.

### **How to Exit CSM**

To exit CSM, use one of the following methods.

- Press the MENU/HOME button on the remote control transmitter.
- Press the POWER button on the remote control transmitter.
- Press the POWER button on the television set.

## 5. Software Upgrading, Error code and Panel Code

### 5.1 Software Upgrading

#### Step 1: Ready for F/W Upgrade

1. Rename the software as "autorun.upg"
2. Prepare a USB memory.
3. Copy the software to USB flash disk(root directory).

Note the version of this F/W before you change the software file name.




#### Step 2: F/W Upgrade



1. Plug the USB memory on the USB port on the side I/O port of TV (Please connect to USB 2.0 port, not recommend USB3.0 port)
2. AC on (Power plug)
3. TV will take a few minutes the downloading to detect the software, and then upgrade automatically as detect the software



4. Press OK to start software upgrade

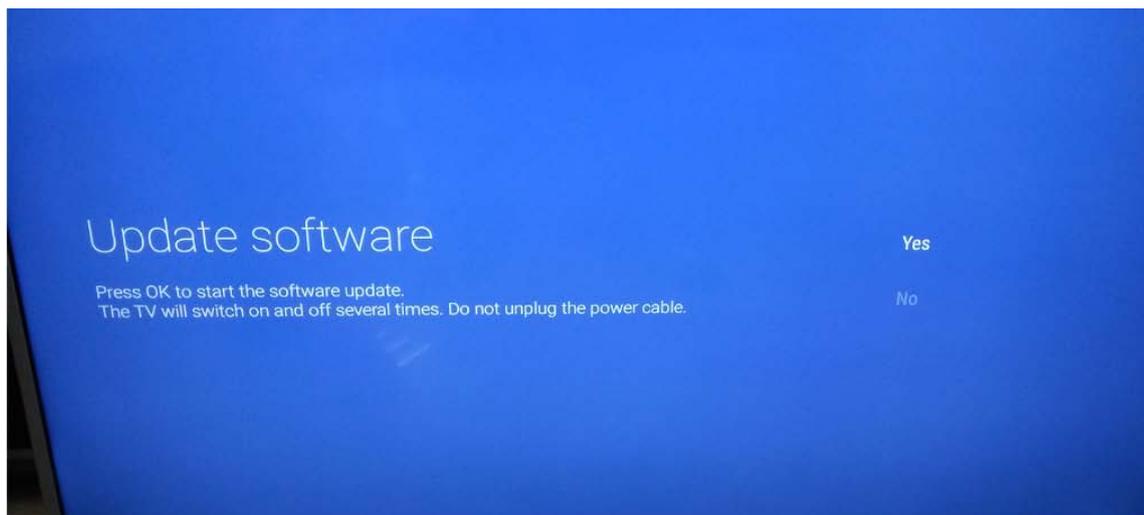


5. Upgrade in progress

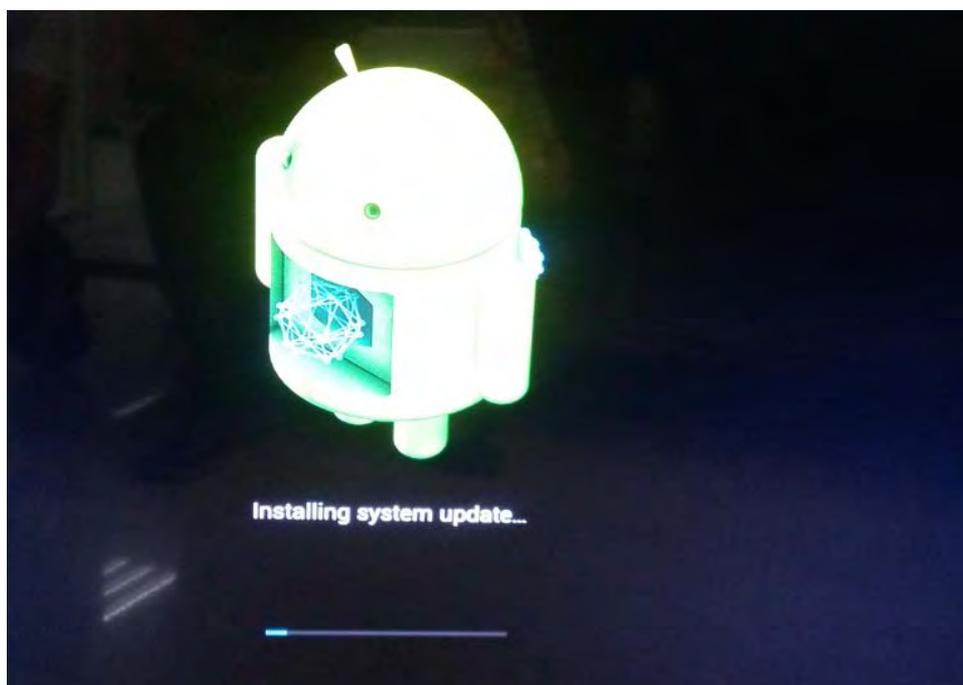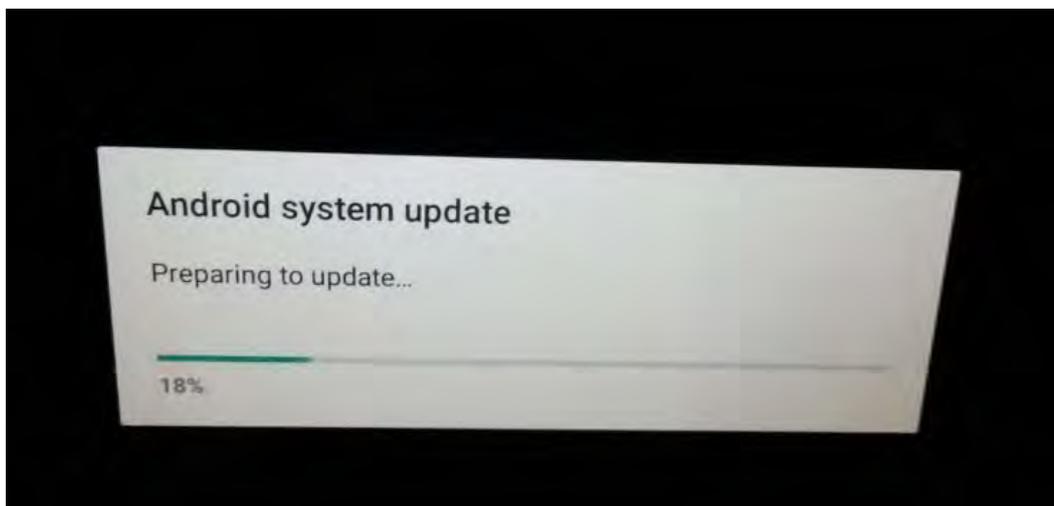

### Step 3: Check the SW version

1. After burning software, TV will restart
2. Press "Menu+1999+back", enter Factory mode to check if the software version is correct

Caution: Please make sure that software upgrade is finished before unplug the USB and AC power!

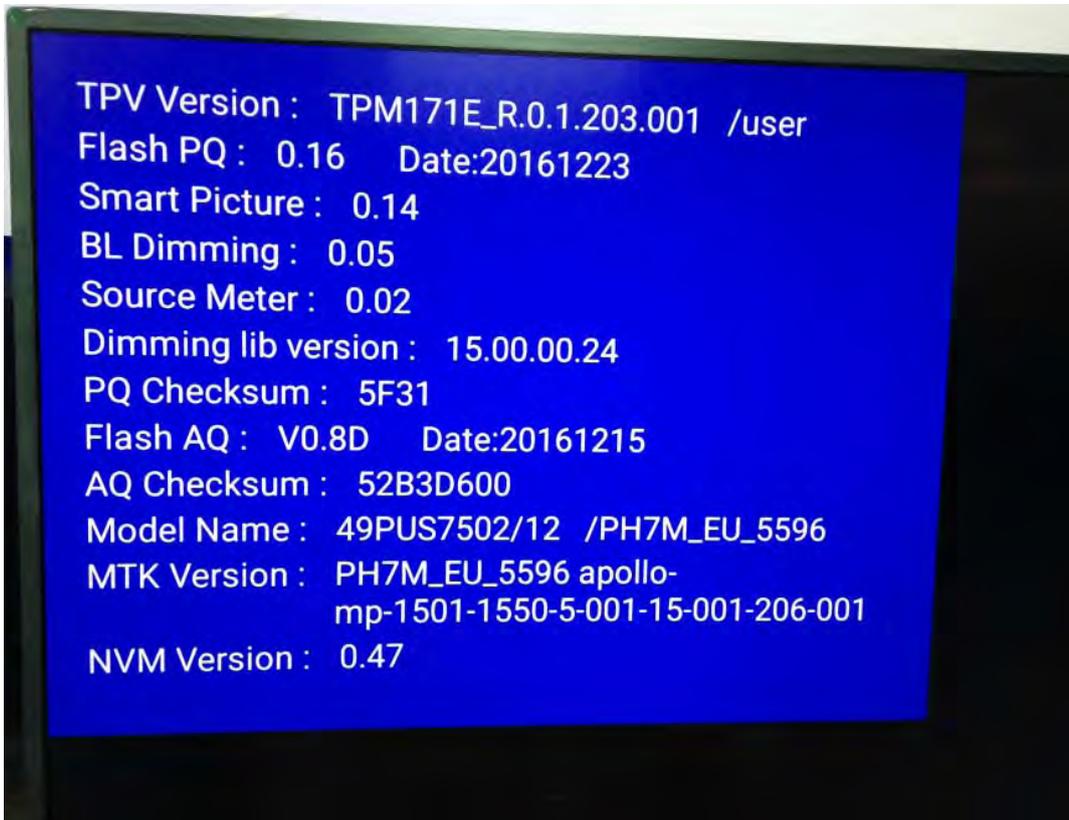

## 5.2 Error Code

### 5.2.1 Introduction

Error codes are required to indicate failures in the TV set. In principle a unique error code is available for every:

- Activated (SW) protection.
- Failing I2C device.
- General I2C error.

The last five errors, stored in the NVM, are shown in the Service menu's. This is called the error buffer.

The error code buffer contains all errors detected since the last time the buffer was erased. The buffer is written from left to right. When an error occurs that is not yet in the error code buffer, it is displayed at the left side and all other errors shift one position to the right.

An error will be added to the buffer if this error differs from any error in the buffer. The last found error is displayed on the left.

An error with a designated error code never leads to a deadlock situation. It must always be diagnosable (e.g. error buffer via OSD or blinking LED).

In case a failure identified by an error code automatically results in other error codes (cause and effect), only the error code of the MAIN failure is displayed.

### 5.2.2 How to Read the Error Buffer

You can read the error buffer in three ways:

- On screen via the SAM/CSM (if you have a picture).

Example:

– **ERROR: 000 000 000 000 000**: No errors detected

– **ERROR: 013 000 000 000 000**: Error code 13 is the last and only detected error

– **ERROR: 034 013 000 000 000**: Error code 13 was detected first and error code 34 is the last detected (newest) error

- Via the blinking LED procedure (when you have no picture).

### 5.2.3 Error codes overview

In this chassis only “layer 2” error codes are available and point to problems on the SSB. They are triggered by LED blinking when CSM is activated. Only the following layer 2 errors are defined:

Description	LAYER 1 error	LAYER 2 error	Monitored	Error	I <sup>2</sup> C address	EB: in error buffer	Device	Defective board
				Prot.		BL: Blinking LED		
<b>I<sup>2</sup>C BUSES</b>								
DSP bus (00)	2	11	SOC	E	00	BL/EB	SSB	Audio DSP
AMP bus (01)	2	12	SOC	E	01	BL/EB	SSB	Audio DSP
SSB bus (0F)	2	13	SOC	E	0F	BL/EB	SSB	SSB
BE bus (3F)	2	14	SOC	E	3F	BL/EB	SSB	SSB
FE bus (2F)	2	17	SOC	E	2F	BL/EB	SSB	SSB
DISP bus (30)	2	18	SOC	E	30	BL/EB	SSB	Display
AMBI bus (31)	2	19	SOC	E	31	BL/EB	SSB	Proj AL
SOC doesn't boot (HW cause)	2	15	St-by μP	P	D4	BL	MT5593	SSB
<b>Supply related</b>								
12V	3	16	St-by μP	P		BL		Supply
<b>SSB</b>								
I2C switch (SSB bus)	9	24	SOC	E	E0	EB	PCA9540	Audio DSP
I2C switch (BE bus)	2	25	SOC	E	E0	EB	PCA9540	SSB
Channel dec	2	27	SOC	E	C8-CE	EB	Silab Si216x	SSB
Boston (HDMI2.2)	2	29	SOC	E	40	EB	SIL 9777	SSB
Lnb controler	2	31	SOC	E	10	EB	LNBH 25	SSB
Tuner	2	34	SOC	E	C0	EB	Si2151/AV 2019	SSB
Tuner S2	2	36	SOC	E		EB		
Class - D 3 (DSP bus)	9	35	SOC	E	D8	EB	TAS 5760 LD	Audio DSP
Audio DSP	9	36	SOC	E	70	EB		Audio DSP
Class-D 1	2/9	37	SOC	E	D8	EB	TAS5760LD	SSB/Audio DSP
DSP EEPROM	9	38	SOC	E	A0	EB	Durango	Audio DSP
Class - D 2	2/9	39	SOC	E	DA	EB	TAS 5760 LD	SSB/Audio DSP
T° sensor SSB	2	42	SOC	E	98	EB	LM 75	T° sensor
Light sensor	6	43	SOC	E	52	EB	TSL2571	SET
B&O signal board	4	44	SOC	E		EB		
HDD XFS repair	8	45	SOC	E		EB		
DSP doesn't boot (SW cause)	9	52	SOC	E	70	EB	MT5593	Audio DSP
SOC doesn't boot (SW cause)	2	53	St-by μP	P	D4	BL	MT5593	SSB
FRC	2	61	SOC	E	34	EB	NT72324/72333	SSB
ASIC	2	62	SOC	E	84	EB	ASIC	SSB
Display	5	63	SOC	E	34	EB	Innolux	Display

### 5.2.4 How to Clear the Error Buffer

The error code buffer is cleared in the following cases:

- By using the CLEAR command in the SAM menu
- By using the CLEAR command in the Factory mode:
- By using the following key sequence on the remote control transmitter: “**062599**” directly followed by the **OK** button.
- If the contents of the error buffer have not changed for 50 hours, the error buffer resets automatically.

**Note:** If you exit SAM by disconnecting the mains from the television set, the error buffer is not reset.

### 5.3 Panel Code

Press the following key sequence on a standard RC transmitter: "062598" directly followed by MENU and "xxx", where "xxx" is a 3 digit decimal value of the panel type: see column "Display Code" in below tab. After resetting the Display Code, restart the set immediately.

CTN_ALT BOM#	Panel Type	Display Code	Setting Set Option Code
43PUS6412/05	TPT430U3-EQYSHM.G S1T	005	100
49PUS6412/05	TPT490U2-EQYSHM.G SC1T	006	101
49PUS6482/05	TPT490U2-EQYSHM.G SC1S	009	110
49PUS7502/05	TPT490U2-EQLSJA.G SC4E	011	112
55PUS7502/05	TPT550U2-EQLSKA.G S5A	012	113
55POS9002/05	LC550AQD-GJAB KR LGD	016	117
65PUS6412/05	TPT650UA-QVN06.U S300H	008	120
65PUS6412/05	TPT650U2-FN04.S SG01C	019	132
65PUS7502/05	TPT650UA-EQLSKM.G S5A	013	114

# 6. Circuit Descriptions

## 6.1 Introduction

The TPM17.3E LA is a new chassis launched in EU in 2017. The whole range is covered by MT5596UGIJ+ NT72333/NT72334 platform. The major deltas versus its predecessor support DVB-C, DVB-T, DVB-T2, DVB-S, DVB-S2 with also USB3.0,WIFI/multi-media, Video out

The TPM17.3E LA LA chassis comes with the following stylings:


- series xxPUS64x2/xx
- series xxPUS7x02/xx
- OLED 55POS9002/12

### 6.1.1 Implementation

Key components of this chassis are:


- SCALER MT5596UGIJ HSF BGA-899
- SCALER NT72333TBG/BA TFBGA\_484
- SCALER NT72334TBG/BA HSBGA-670
- DEMODULATOR SI2169-D60-GMR QFN-48
- FLASH MX25L1606EM2I-12G 16Mb SOP-8(200m)
- EMMC THGBMHG7C2LBAIL 16GB BGA-153
- AUDIO TAS5760LDDCAR 20W TSSOP-48
- TUNER EUROPE TDSY-G480D
- TUNER EUROPE TDQS-A701F

### 6.1.2 Block diagram

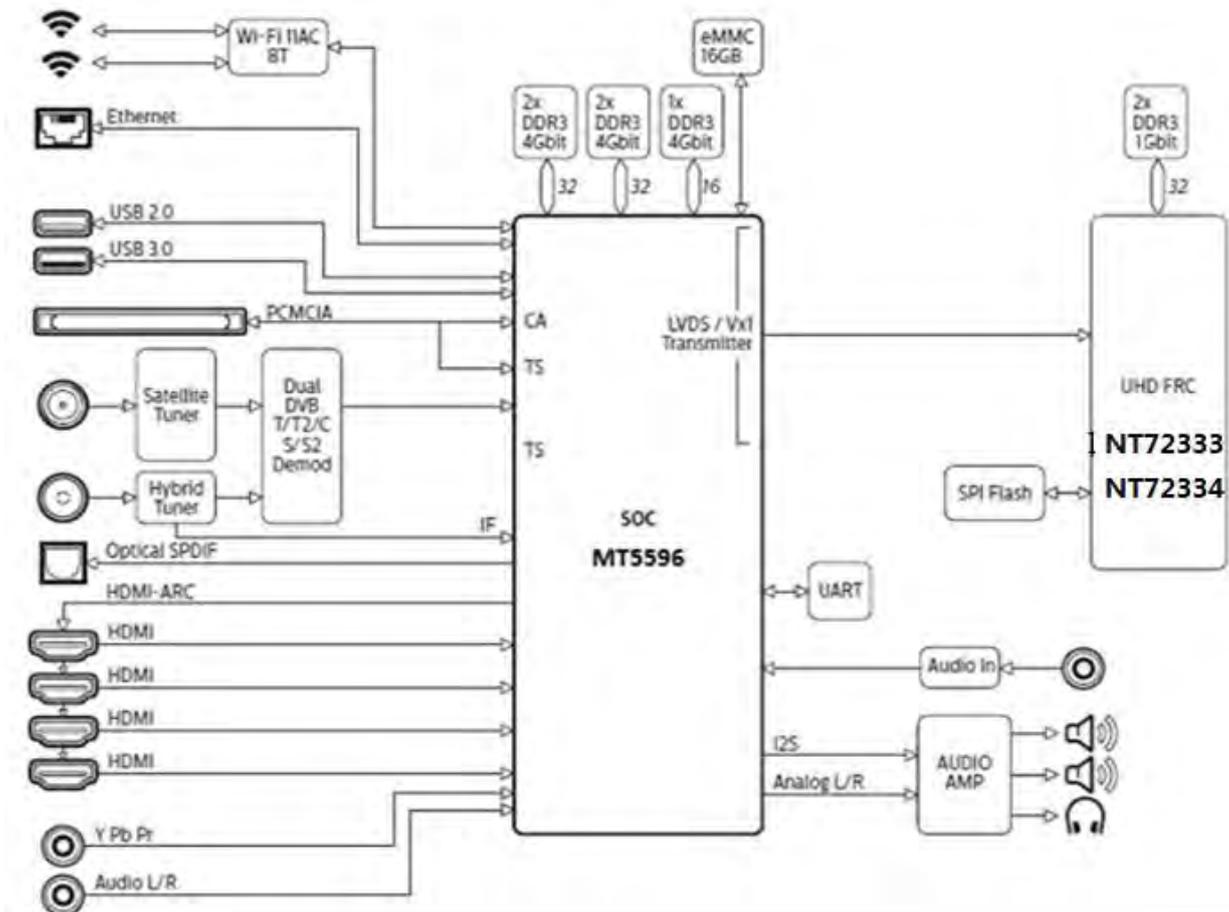

## 6.2 Power Supply

Power architecture of this platform.

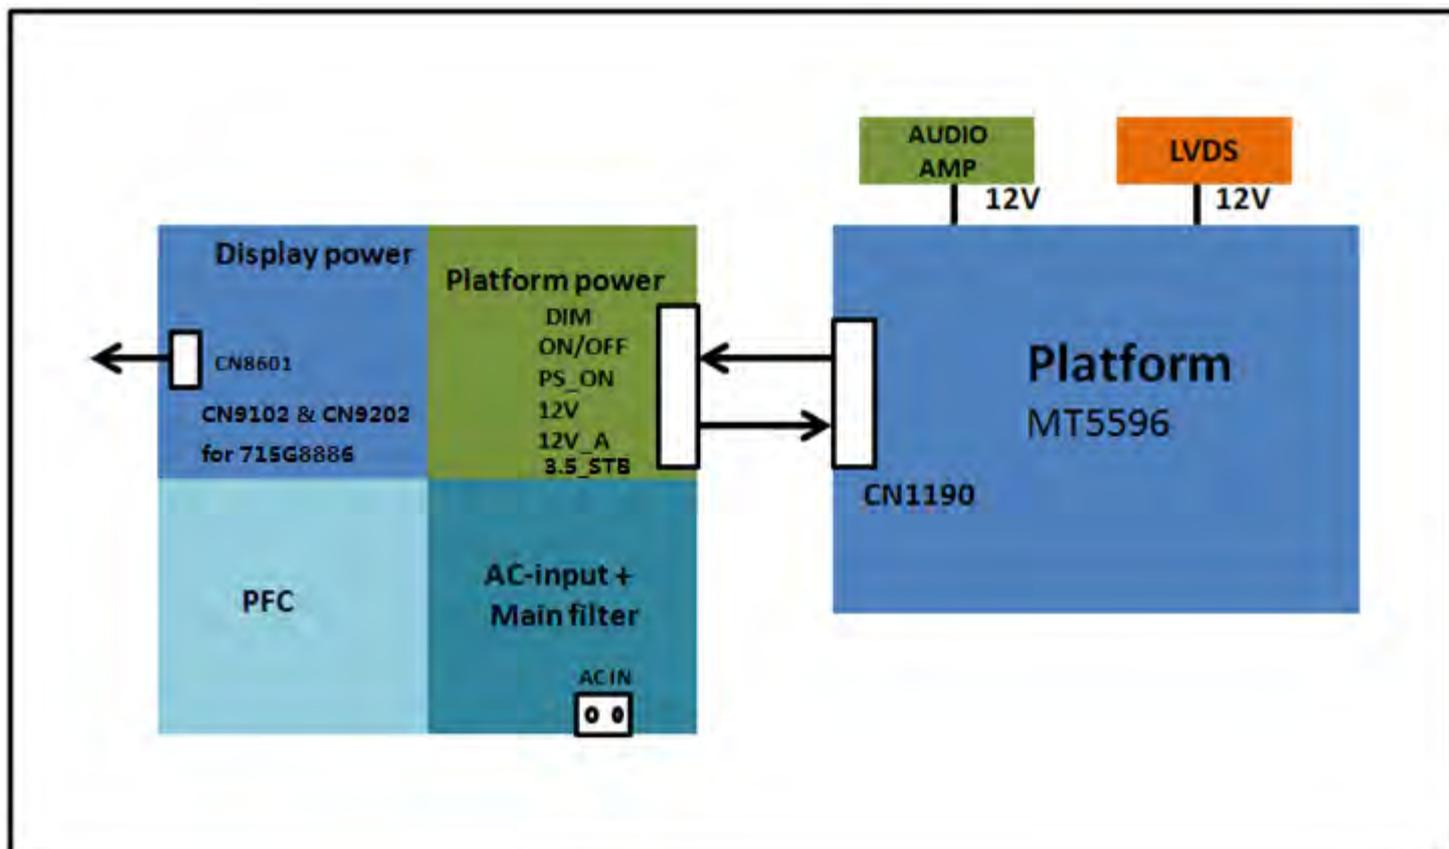

### 6.2.1 Power Supply Unit

All power supplies are a black box for Service. When defective, a new board must be ordered and the defective one must be returned, unless the main fuse of the board is broken. Always replace a defective fuse with one with the correct specifications! This part is available in the regular market.

Consult the Philips Service web portal for the order codes of the boards.

Important delta's with the platform are:

- New power architecture for LED backlight
- "Boost"-signal is now a PWM-signal + continuous variable

The control signals are:

- PS-ON
- Lamp "on/off"
- DIM (PWM) (not for PSDL)

In this manual, no detailed information is available because of design protection issues.

- +12 output (on-mode)
- +3V5\_STB (on-standby)
- +12V\_audio (audio AMP power)
- Output to the display; in case of
  - IPB: High voltage to the LCD panel
  - PSL and PSLS (LED-driver outputs)
  - PSDL (high frequent) AC-current.

### 6.2.2 Diversity

The diversity in power supply units is mainly determined by the diversity in displays.

The following displays can be distinguished:

- CCFL/EEFL backlight: power panel is conventional IPB
- LED backlight:

- side-view LED without scanning: PSL power panel
- side-view LED with scanning: PSLs power panel
- direct-view LED without 2D-dimming: PSL power panel
- direct-view LED with 2D-dimming: PSDL power panel.

**PSL** stands for **Power Supply** with integrated LED-drivers.

**PSLS** stands for a **Power Supply** with integrated LED-drivers with added **Scanning** functionality (added microcontroller).


**PSDL** stands for a **Power Supply** for **Direct-view LED** backlight with 2D-dimming.

### 6.3 DC/DC Converters


The on-board DC/DC converters deliver the following voltages (depending on set execution):

- +3V5-SB, permanent voltage for the Stand-by Power system
- +3V3-STANDBY, voltage for IR/Key board
- +12V, input from the power supply for the panel common (active mode)
- +12V, input from the power supply for LNB supply
- +3V3-EMMC, voltage for EMMC when TV on
- +1V8 -EMMC-IO, voltage for EMMC when TV on
- +1V5-DDR, voltage for DDR
- TUNER\_3V3, supply voltage for tuner
- +5V-SW, input intermediate supply voltage for USB Power
- +12V-AUDIO1 for the AUDIO AMP
- +3.3VA\_T2, +1.2V\_T2 voltage for Demodulator IC channel decoder
- +5V-WIFI, voltage for WIFI


#### 6.3.1 Power tree

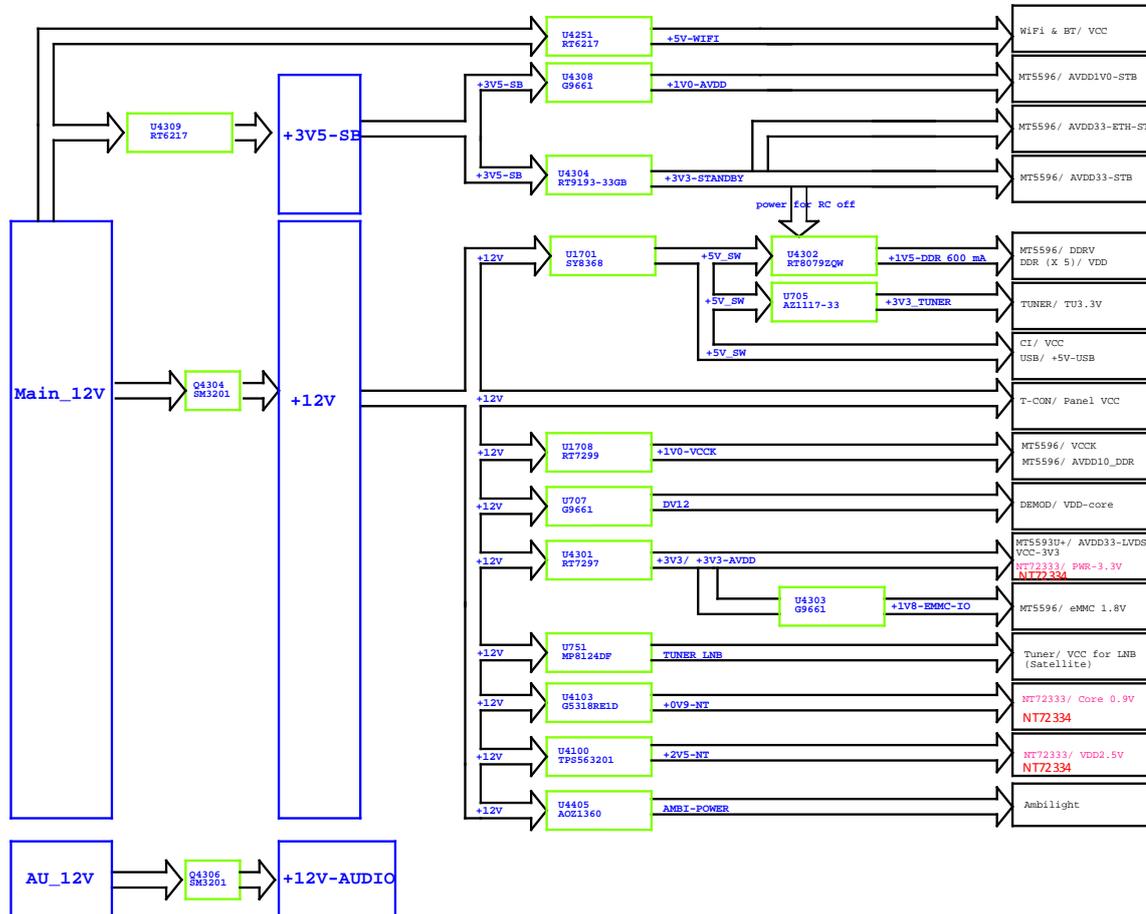

### 6.3.2 Power layout SSB

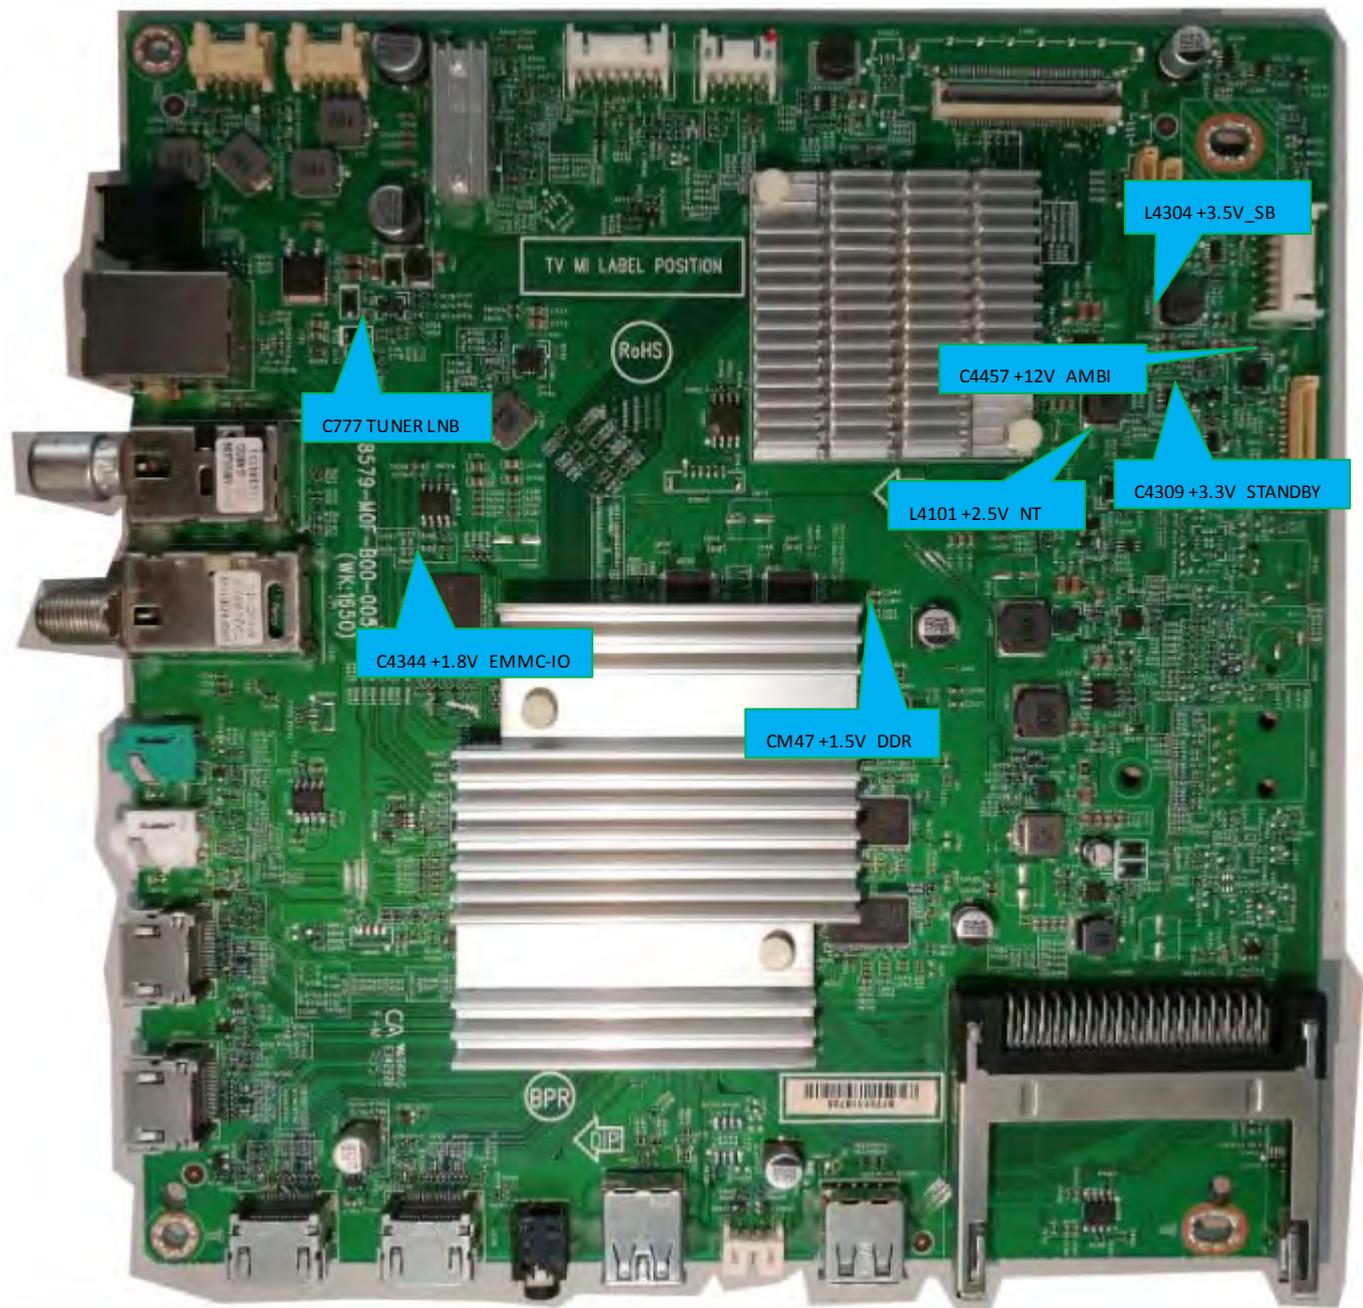

Power SSB Top View

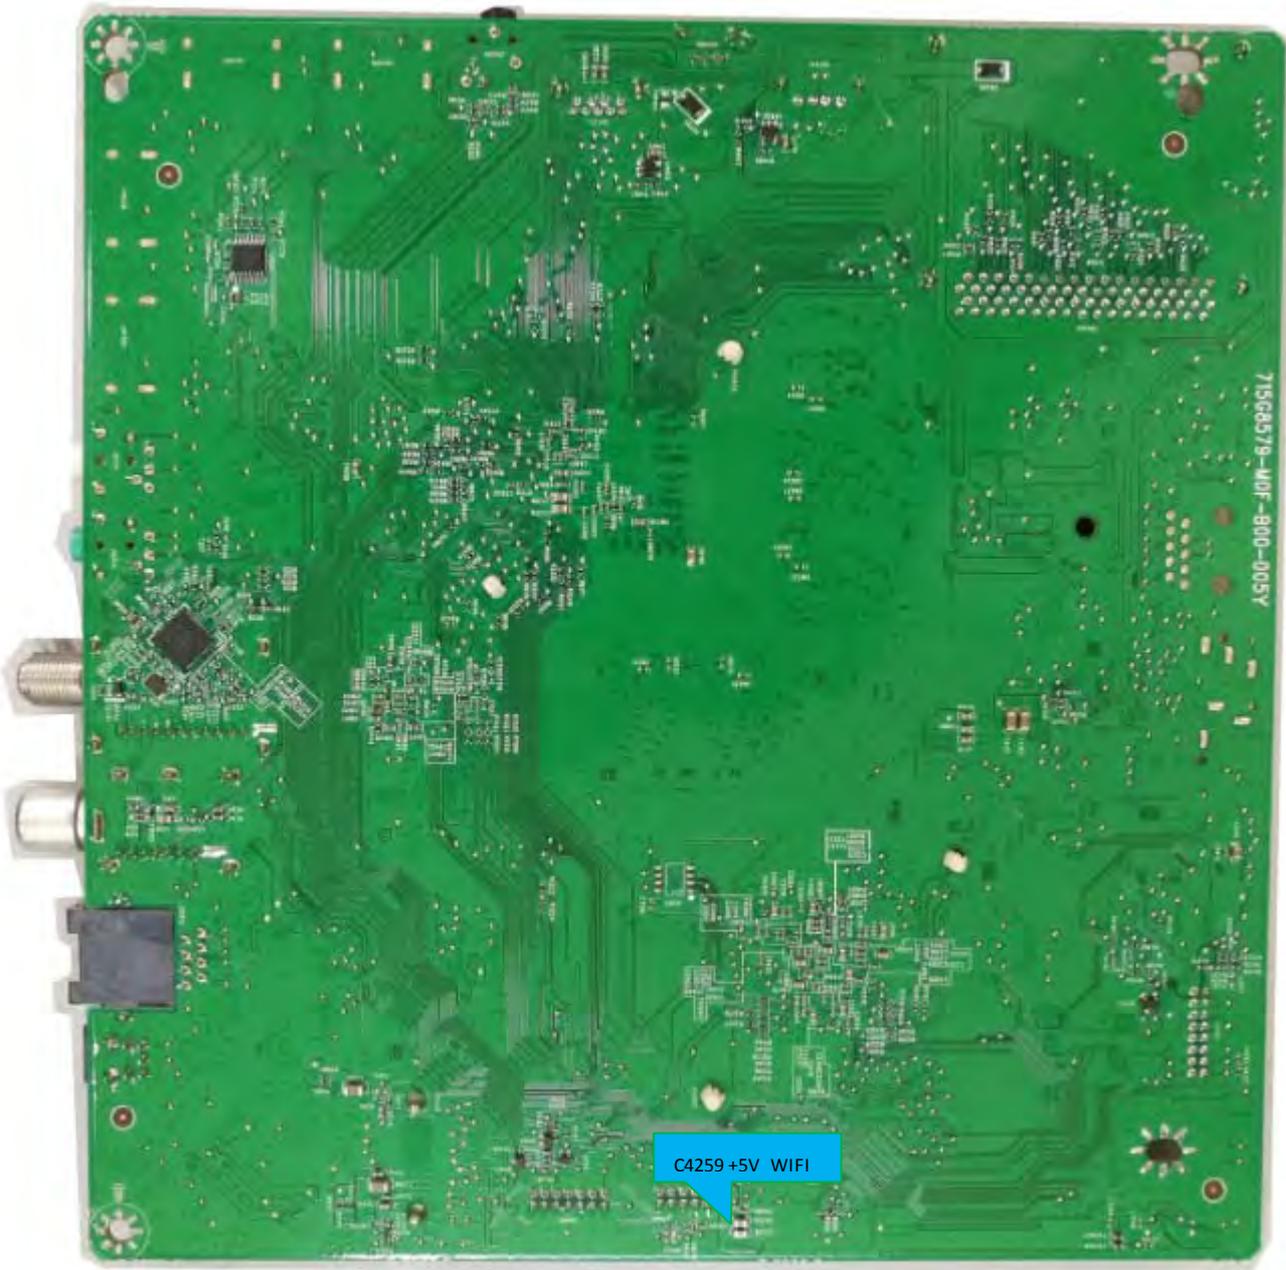

Power SSB Bottom View


## 6.4 Front-End Analogue and DVB-T, DVB-C, DVB-S;ISDB-T reception

### 6.4.1 DVB-C part

The Front-End for analogue tuner consist of the following key components:

- TUNER EUROPE TDSY-G480D
- TUNER EUROPE TDQS-A701F
- SCALER MT5596UGIJ HSF BGA-899

Below find a block diagram of the front-end application for DVB-C part.

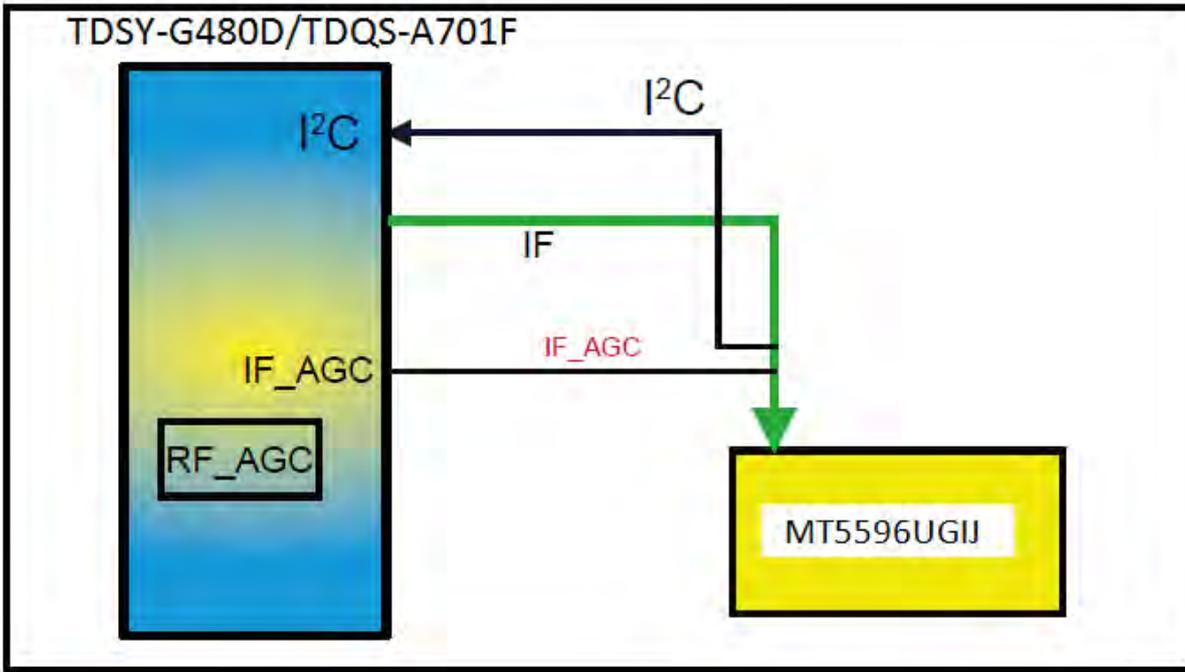


### 6.4.2 DTB-T/T2 part

The Front-End for DVT part consist of the following key components:

- TUNER EUROPE TDSY-G480D
- TUNER EUROPE TDQS-A701F
- SCALER MT5596UGIJ HSF BGA-899
- DEMODULATOR Si2169-C60-GMR QFN-48

Below find a block diagram of the front-end application for DTV part.

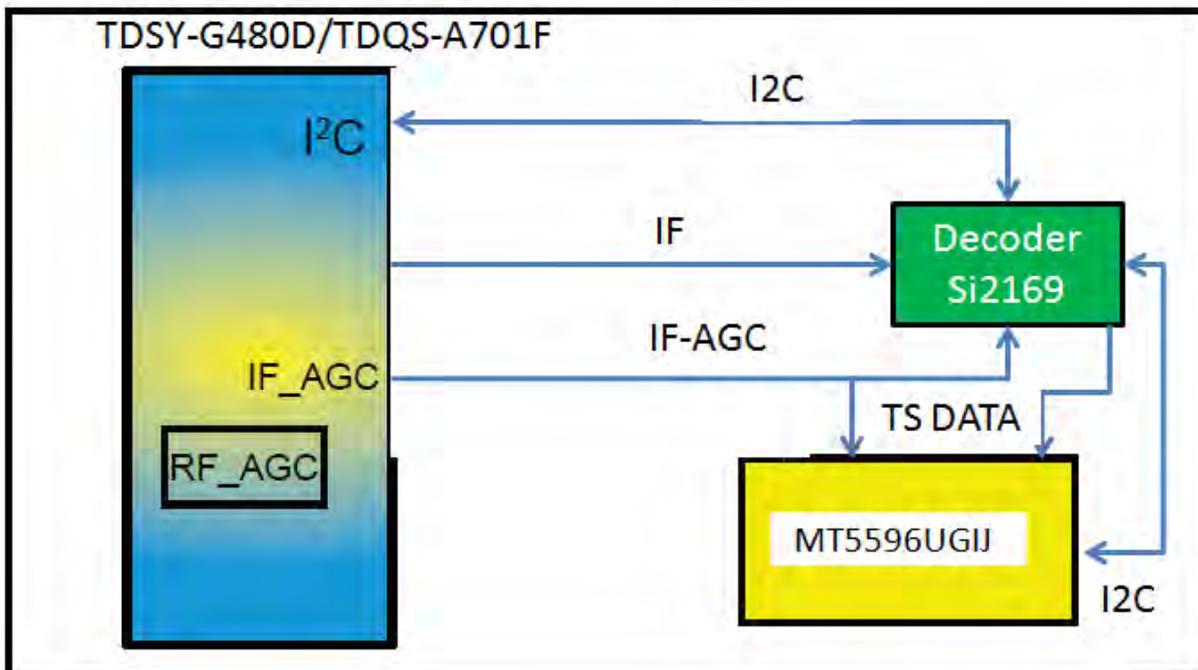


### 6.4.3 DTB-S2 part

The Front-End for DVT part consist of the following key components:


- TUNER EUROPE TDSY-G480D
- TUNER EUROPE TDQS-A701F
- SCALER MT5596UGIJ HSF BGA-899
- DEMODULATOR Si2169-C60-GMR QFN-48

Below find a block diagram of the front-end application for DTV part.

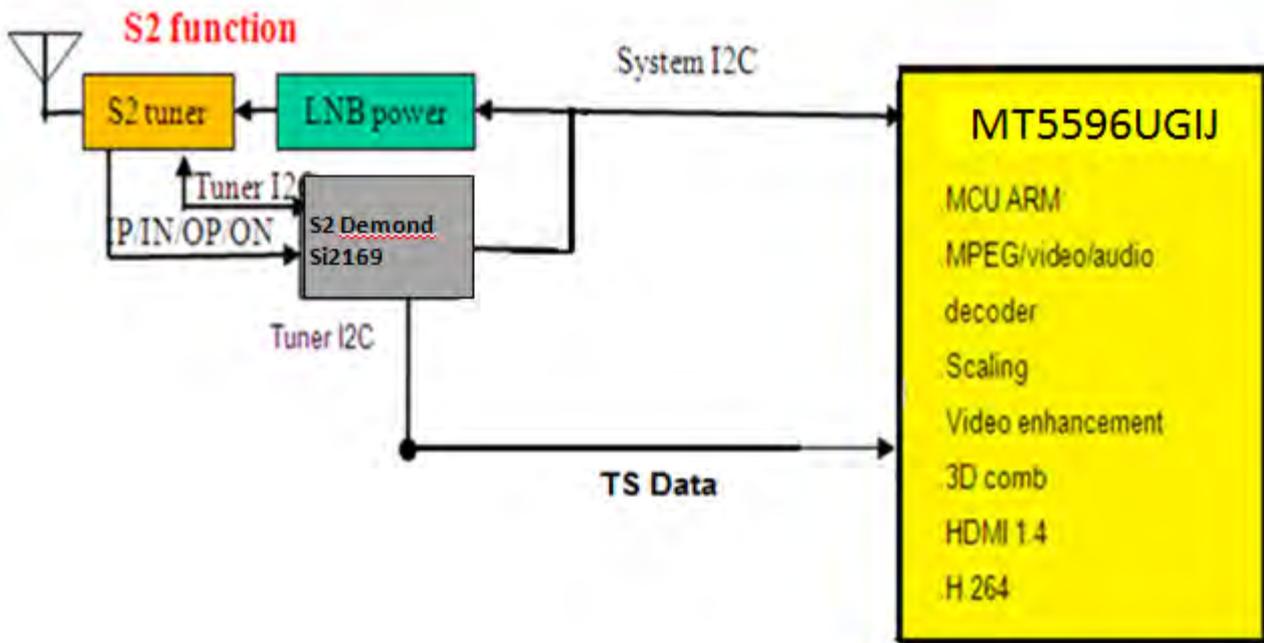

### 6.5 HDMI

Refer to below for the application.

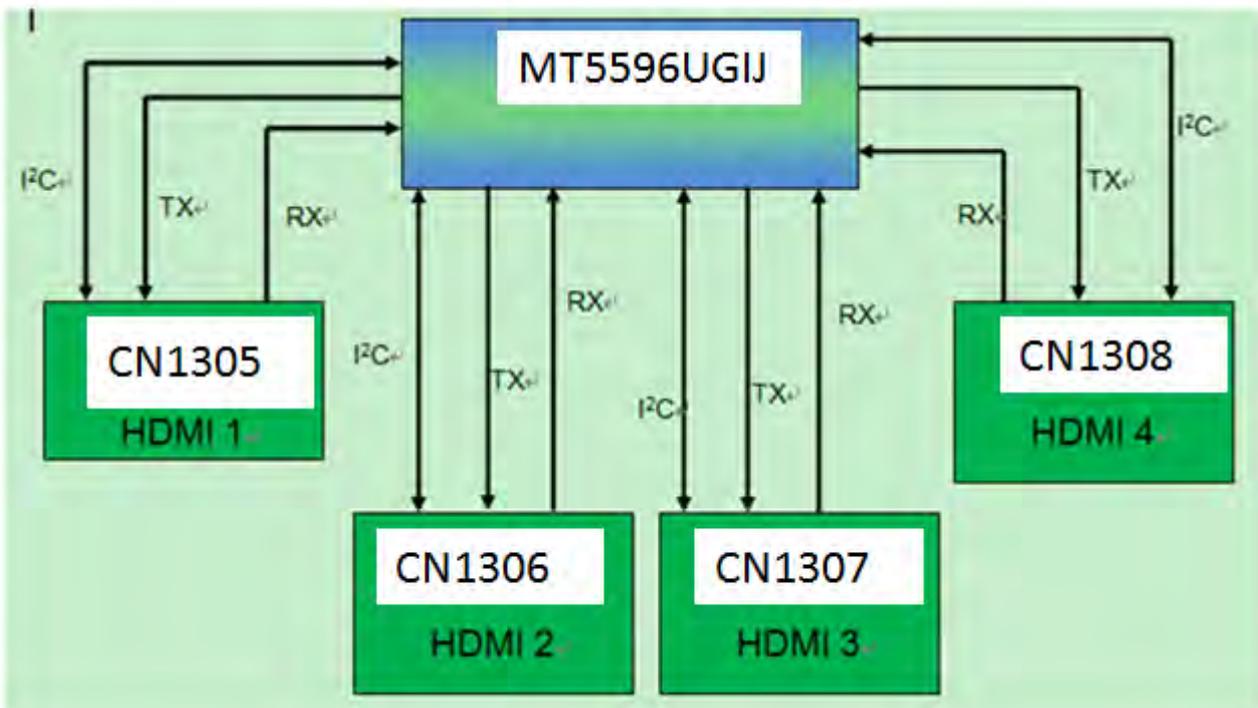

The following HDMI connector can be used:

- HDMI 1: HDMI input ( TV digital interface support HDMI1.4/HDCP1.3) with digital audio/PC DVI input/ARC
- HDMI 2: HDMI input ( TV digital interface support HDMI1.4/HDCP1.3) with digital audio/PC DVI input/ARC
- HDMI 3: HDMI input ( TV digital interface support HDMI1.4/HDCP1.3) with digital audio/PC DVI input/ARC
- HDMI 4: HDMI input ( TV digital interface support HDMI1.4/HDCP1.3) with digital audio/PC DVI input/ARC
- +5V detection mechanism
- Stable clock detection mechanism
- MHL 2.0 function only for HDMI4
- Audio return channel(ARC)
- TMDS output control
- HPD control
- CEC control

## 6.6 Video and Audio Processing - MT5596UGIJ

The MT5596UGIJ is the main audio and video processor (or System-on-Chip) for this platform. It has the following features:

- Worldwide multi-standard analog TV demodulator
- DVB-T/DVB-C /ISDB-T demodulators
- UHD@60Hz direct drive
- Powerful CPU core
- 3D graphic support OpenGL ES 1.1/2.0/3.0/3.1
- A transport de-multiplexer
- A multi-standard video decoder (including VP9)
- Rich format audio codec
- H.264 & VP8 encoder
- HDMI 2.0 receiver with 3D support
- MHL 3.0 & Standby Charging
- 2D/3D converter
- Ethernet MAC+PHY
- Local dimming (LED backlight)
- Two-link LVDS, V-by-one

The MediaTek MT5596UGIJ family consists of a DTV front-end demodulator, a backend decoder and a TV controller and offers high integration for advanced applications. It integrates a transport de-multiplexer, a high definition video decoder, an audio decoder, a two-link LVDS transmitter, a V-by-One transmitter, and a NTSC/PAL/SECAM TV decoder with a 3D comb filter (NTSC/PAL). The MT5596UGIJ enables consumer electronics manufacturers to build high quality, low cost and feature-rich DTV.

**World-Leading Audio/Video Technology:** The MT5596UGIJ supports Full-HD MPEG1/2/4/h.264/DiviX/VC1/RM/AVS/VP6/VP8 and UHD H.264/AVC, H.265/HEVC, VP9 video decoder standards, and JPEG. The MT5596UGIJ also supports MediaTek MDDiTM de-interlace solution which can reach very smooth picture quality for motions. A 3D comb filter added to the TV decoder recovers great details for still pictures. The special color processing technology provides a natural, deep colors and true studio quality video. Moreover, the MT5596UGIJ family has built-in high resolution and high-quality audio codec.


**Rich Features for High Value Products:** The MT5596UGIJ family enables true single-chip experience. It integrates high-quality HDMI2.0, high speed VGA ADC, two-link LVDS, V-by-One, USB2.0/3.0 receiver, Ethernet MAC+PHY, Quad core CPU and 512K bytes L2 cache, OpenGL ES 1.1/2.0/3.0/3.1, OpenCL 1/0/1.1/1.2 compliant 3D graphic engine, and DVB-T/DVB-C /ISDB-T demodulators.

**All New UHD@60Hz Experience:** The MT5596UGIJ family provides consumers with UHD 60Hz direct drive.

**WW Common Platform Capability:** The MT5596UGIJ family supports, DVB-T, DVB-C, and ISDB-T demodulation functions. It reserves transport stream inputs for external demodulators for other countries or areas. TV maker can easily port the same UI to worldwide TV models. First-class adjacent and co-channel rejection capability grants excellent reception. Professional error-concealment provides stable, smooth and mosaic-free video quality.



# 7. IC Data Sheets

## 7.1 MT5596UGIJ (IC U9400)

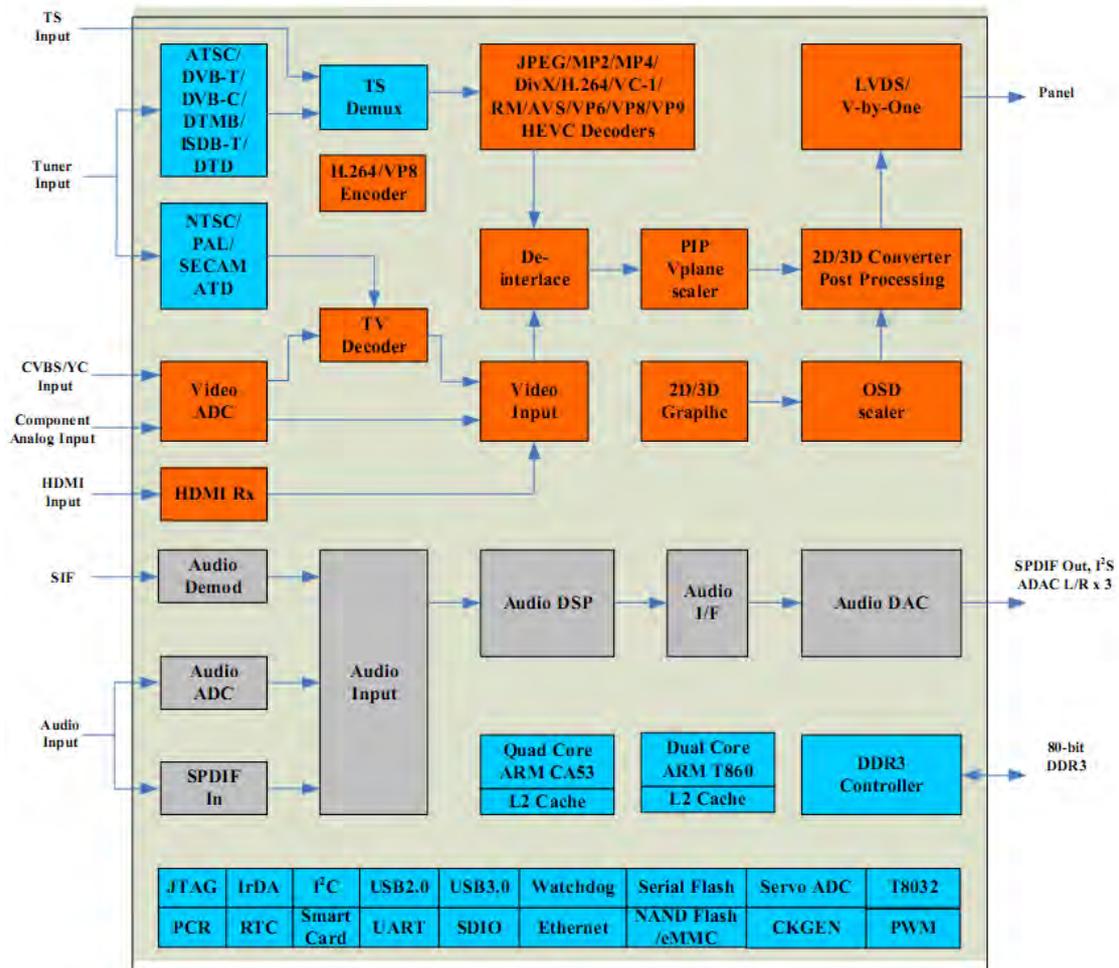


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	------


## 7.2 NT7233TBG/BA (IC U3100)

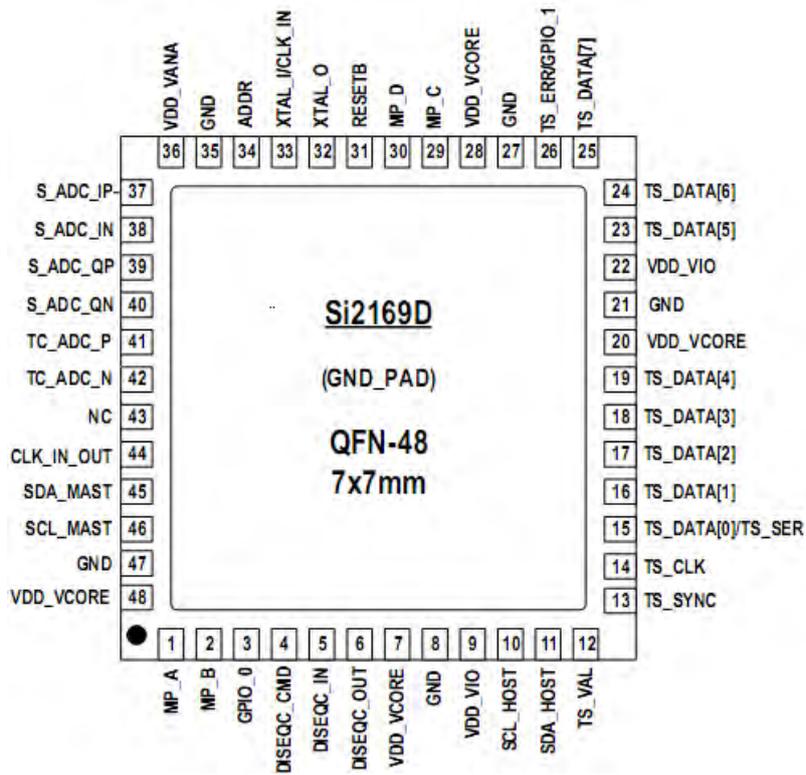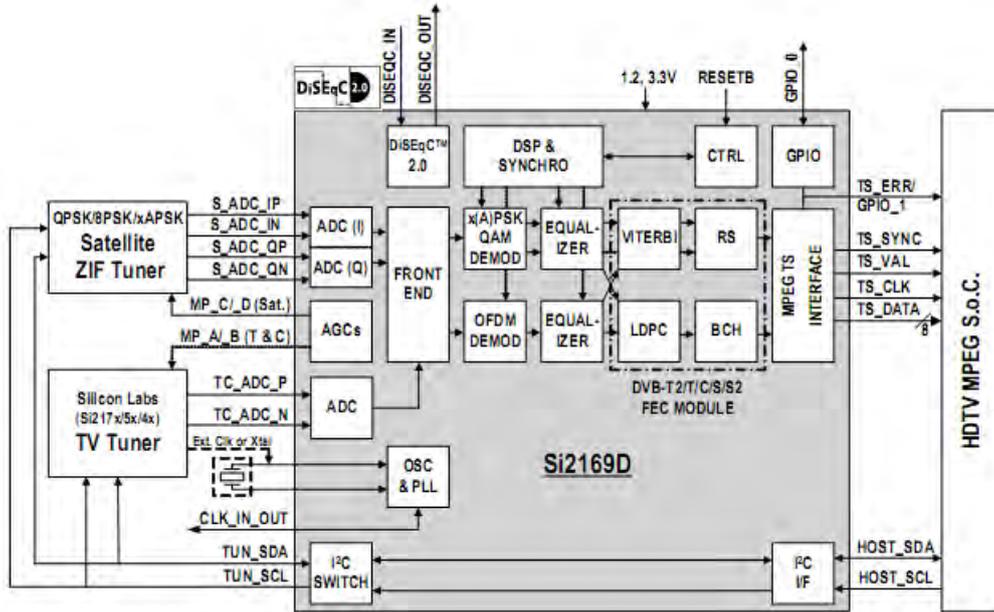

### 7.3 TAS5760LDDCAR (IC U5100)

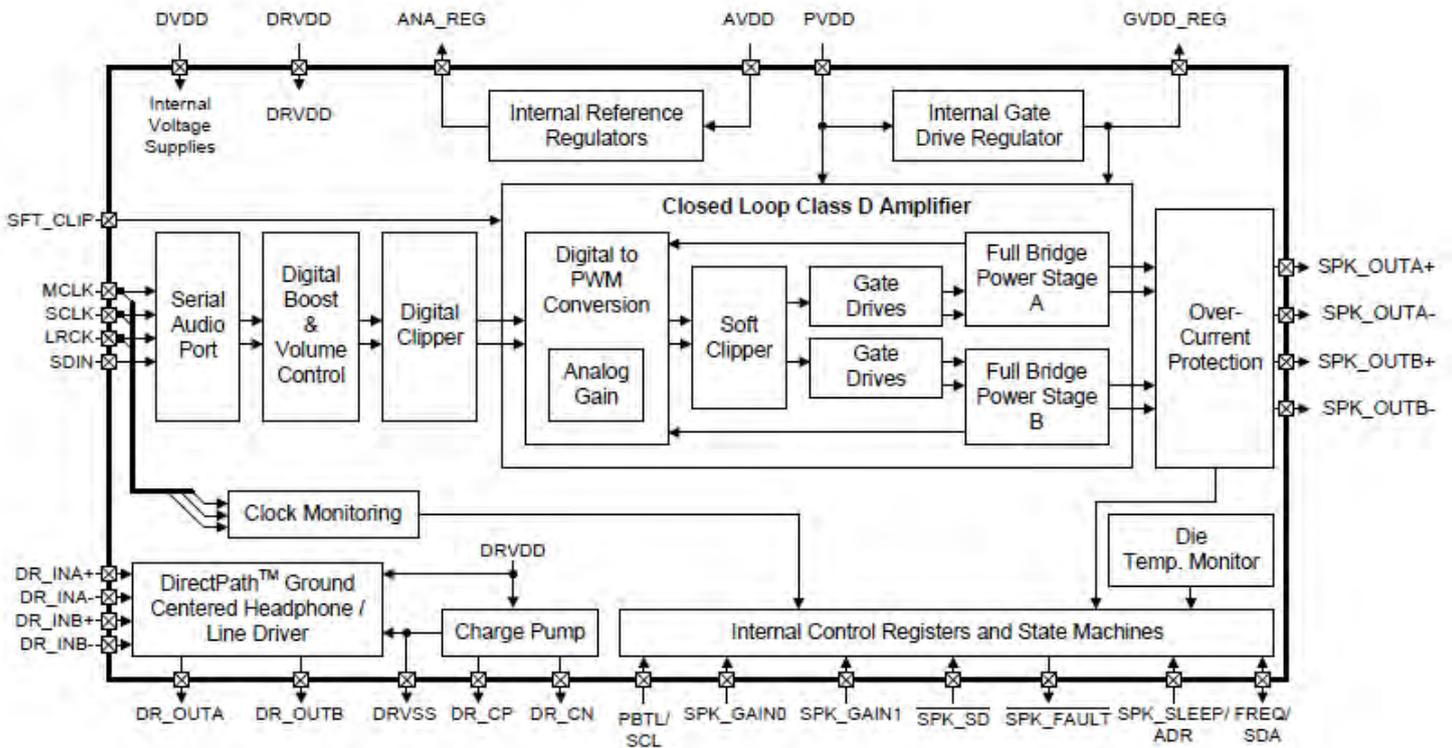


**TSSOP PACKAGE  
DCA-48  
(TOP VIEW)**

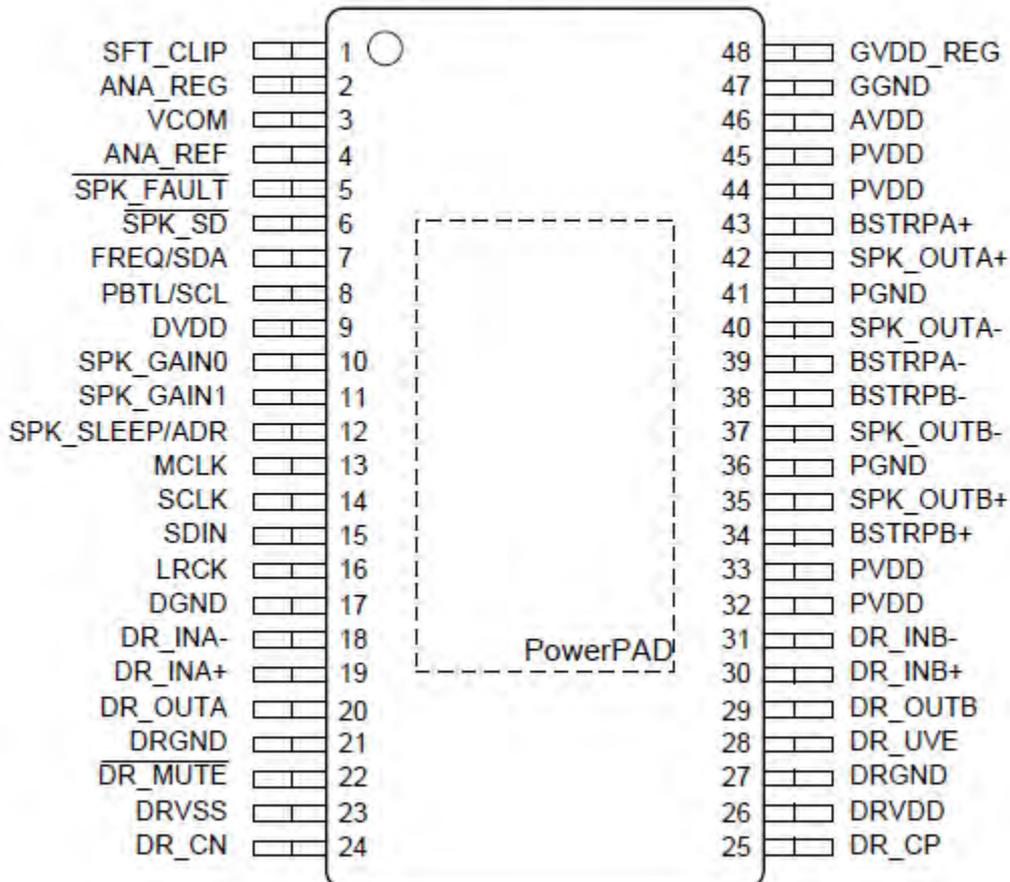




8-1-2 PFC

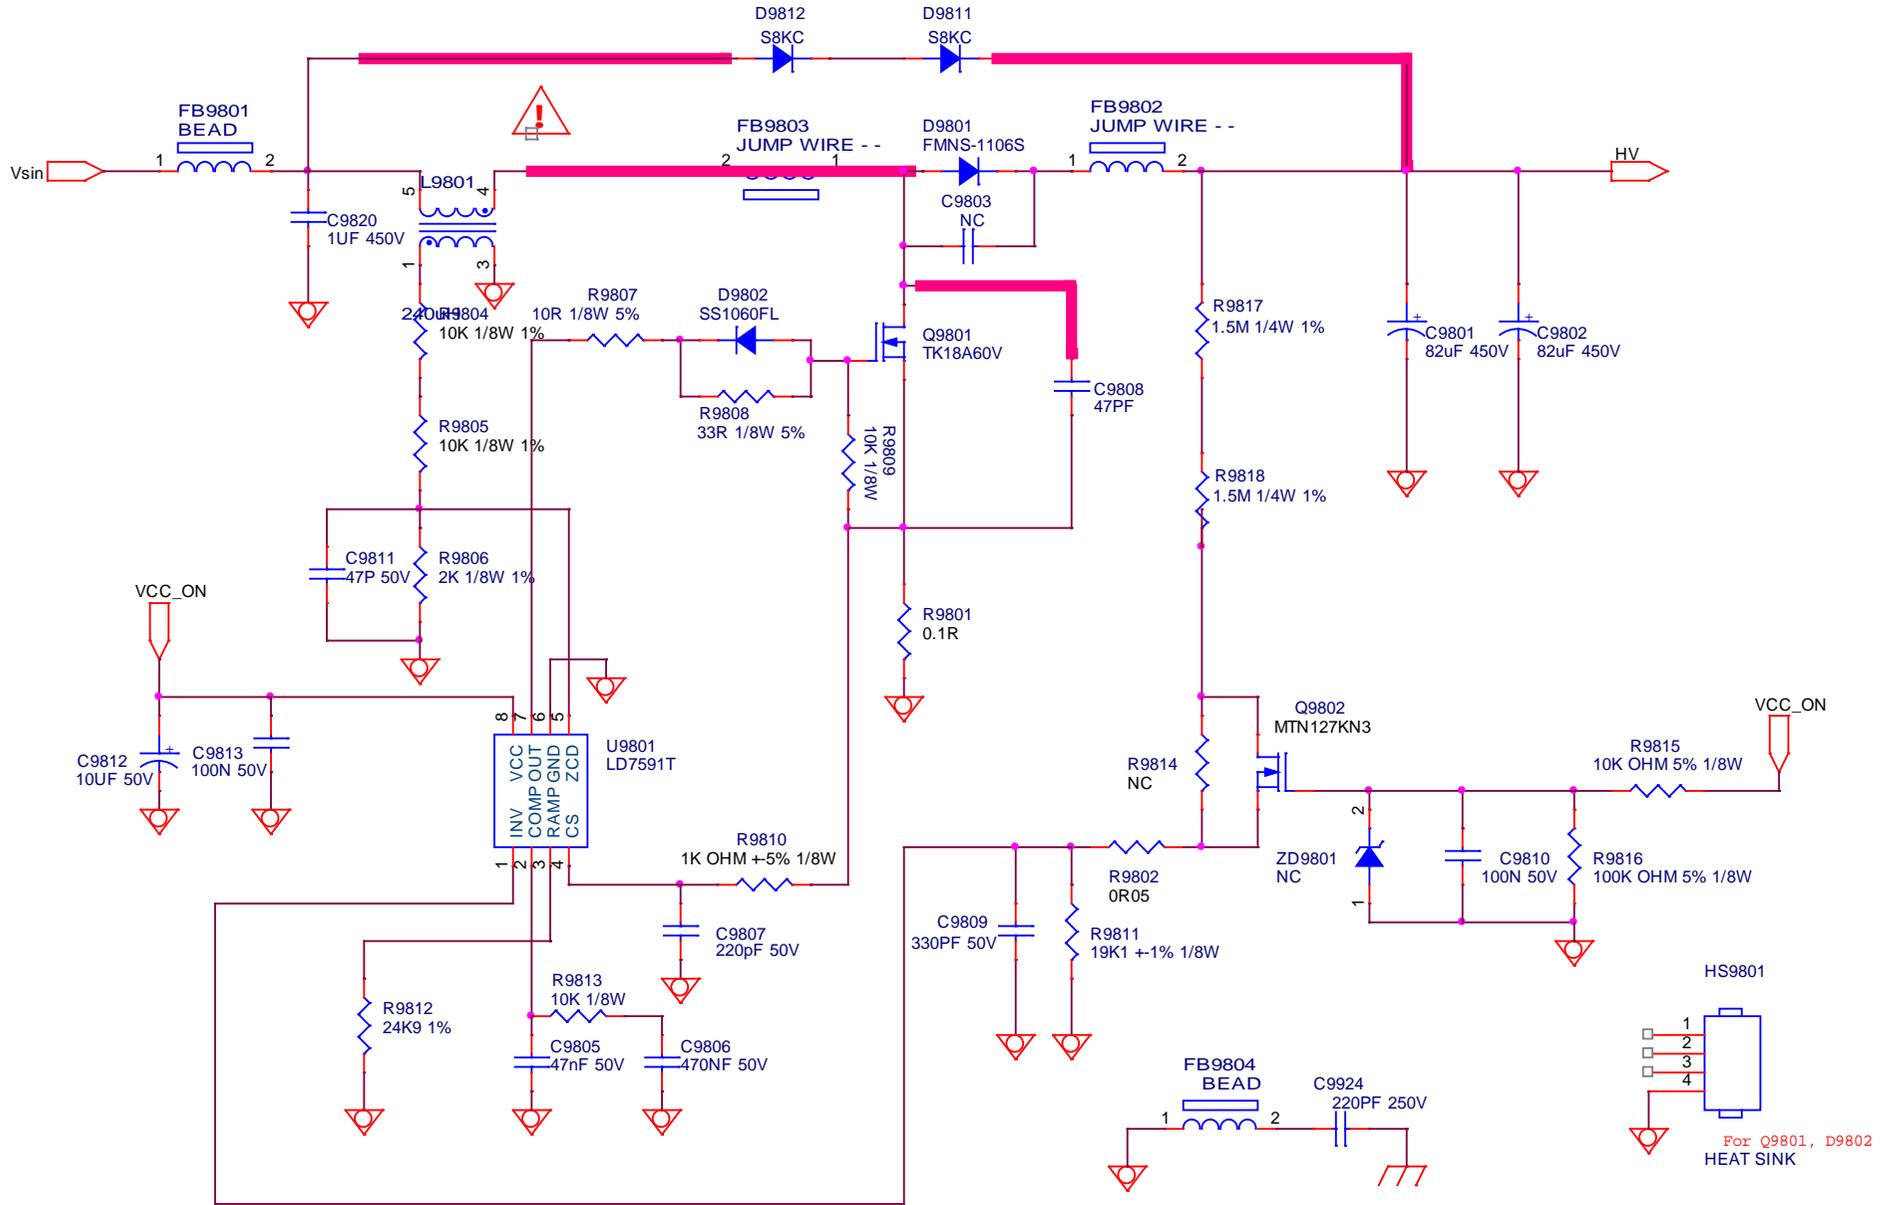







# 8-1-4 LED

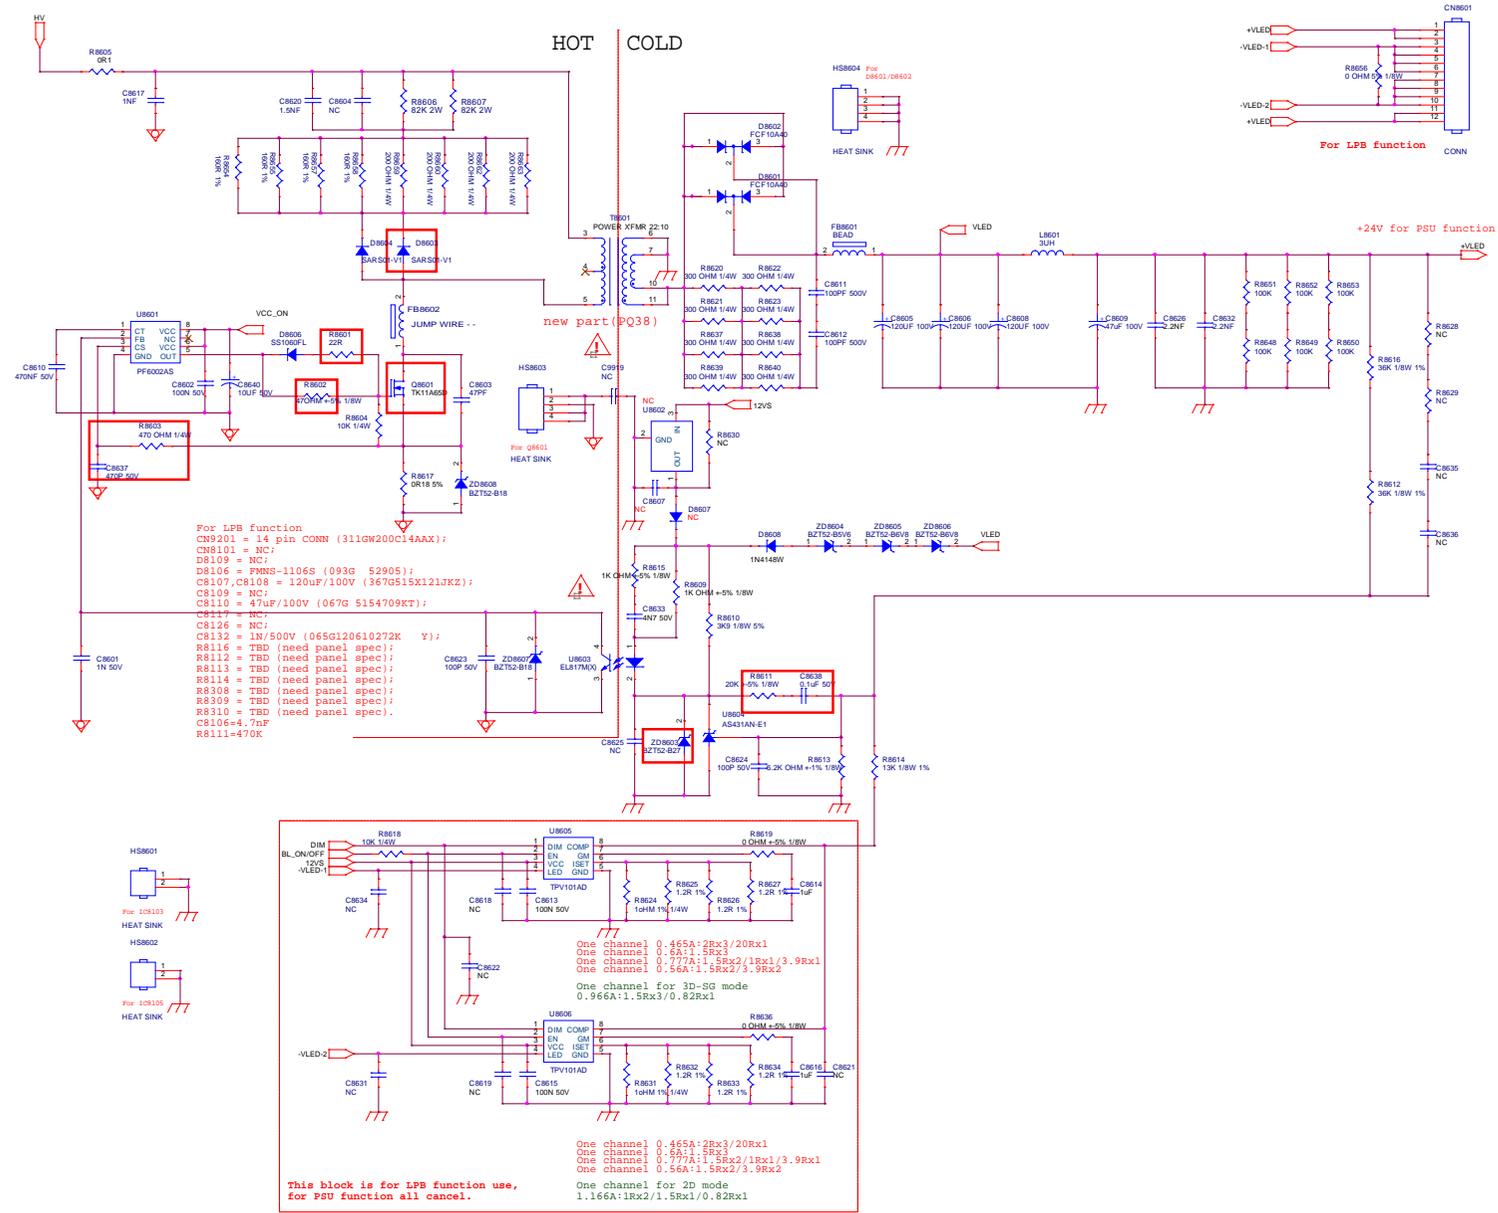

## 8.2 A 715G8672 PSU(For 49"/55 6412 / 6482/ 7502 Series)

### 8-2-1 AC Input

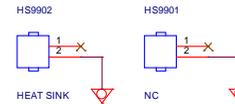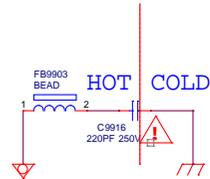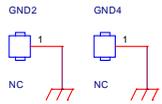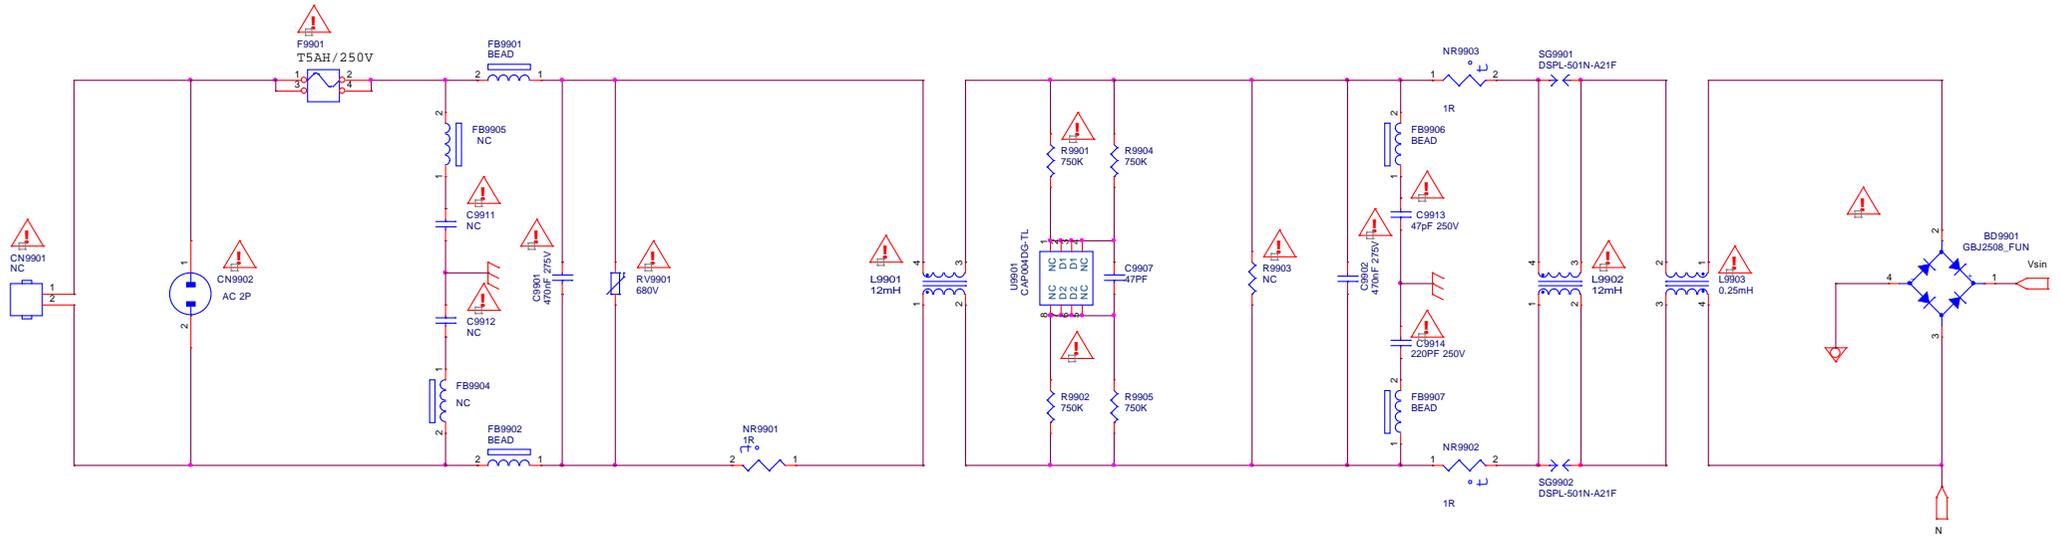









### 8.3 A 715G8682 PSU(For 65" 6412/ 7502 Series)



#### 8-3-1 AC Input

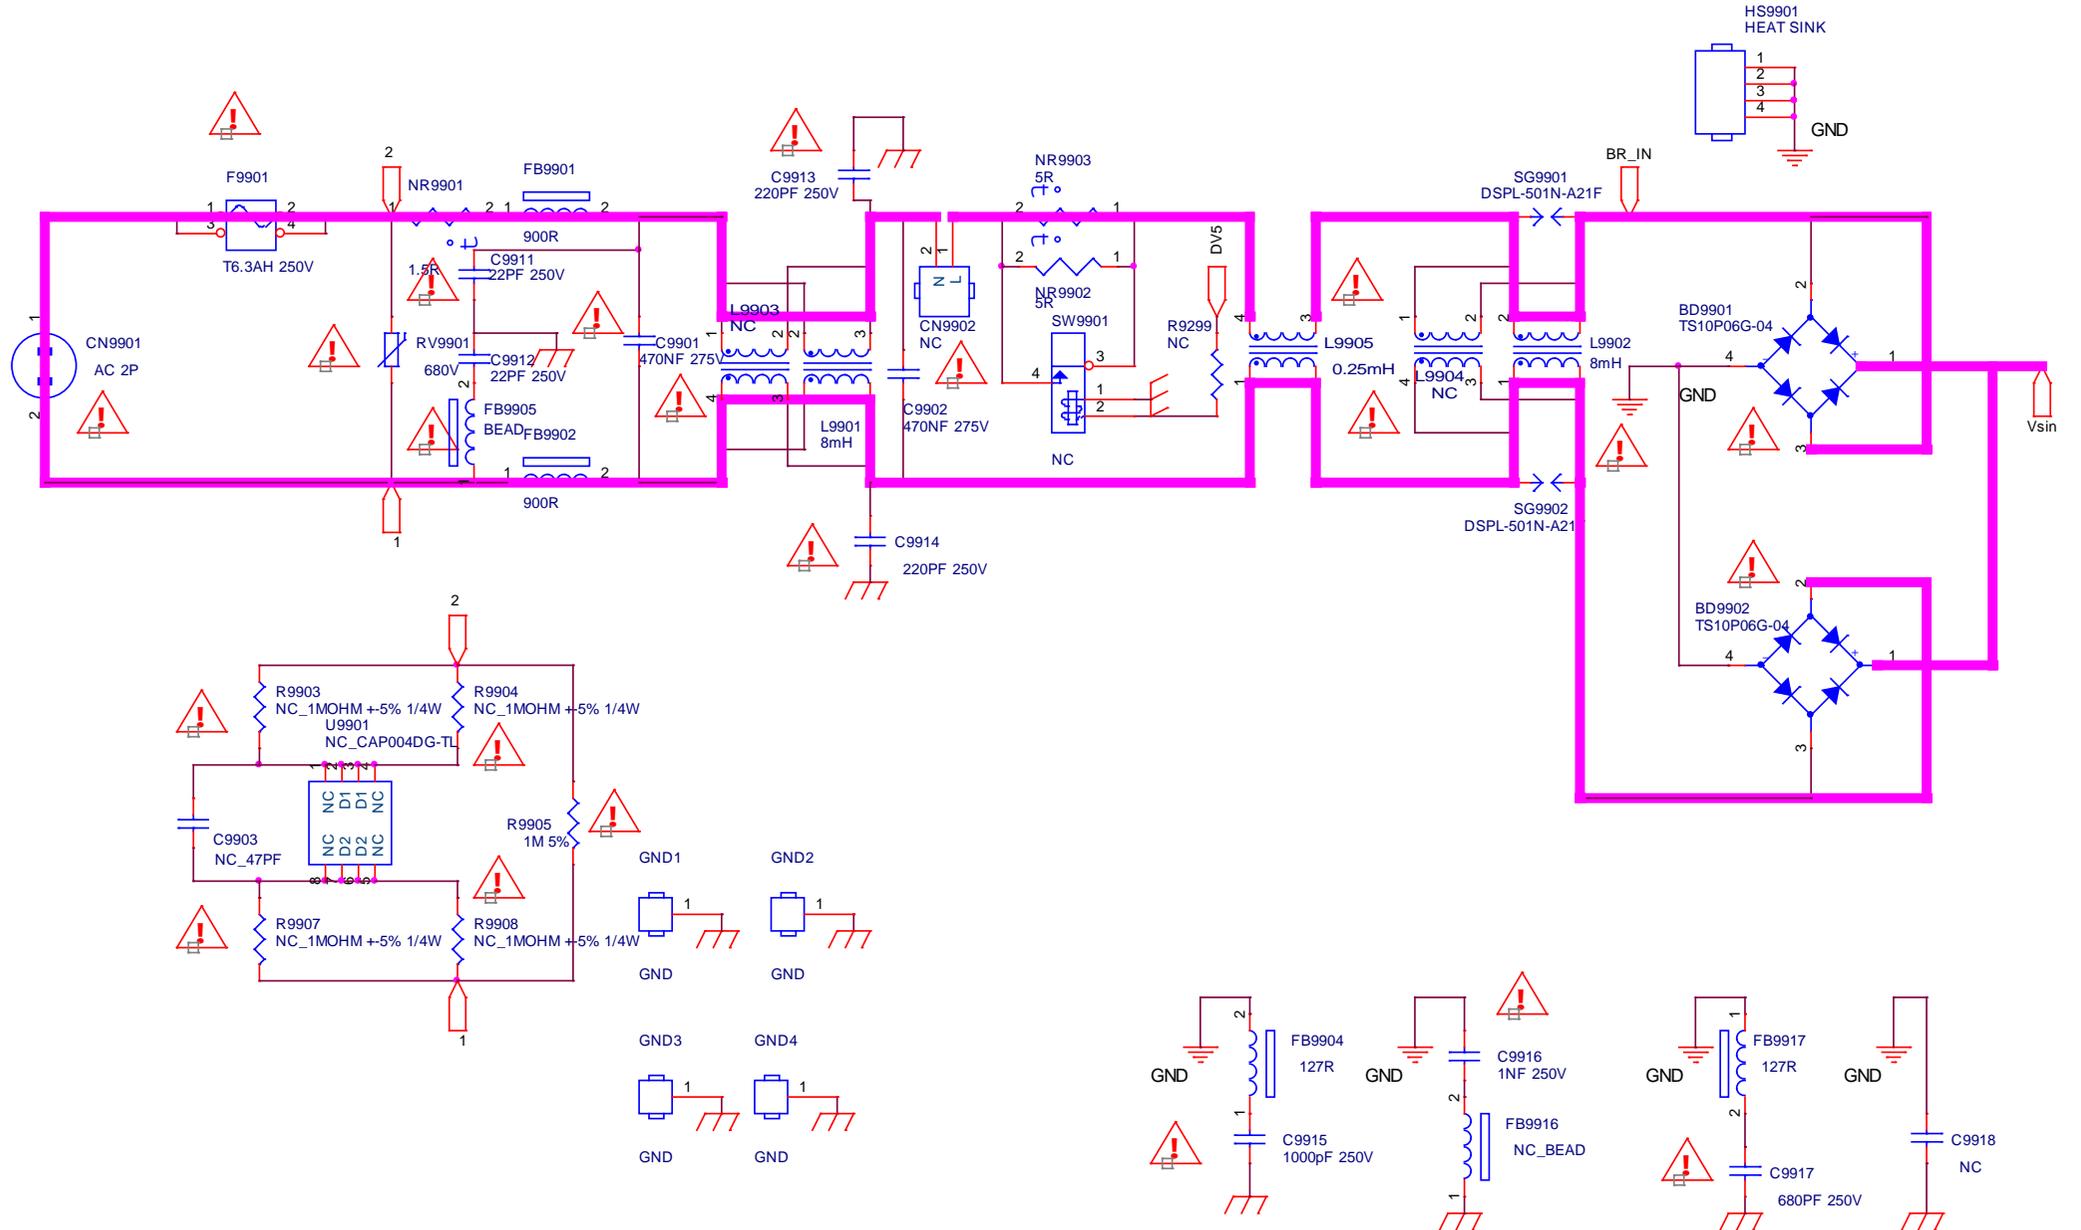


8-3-2 PFC

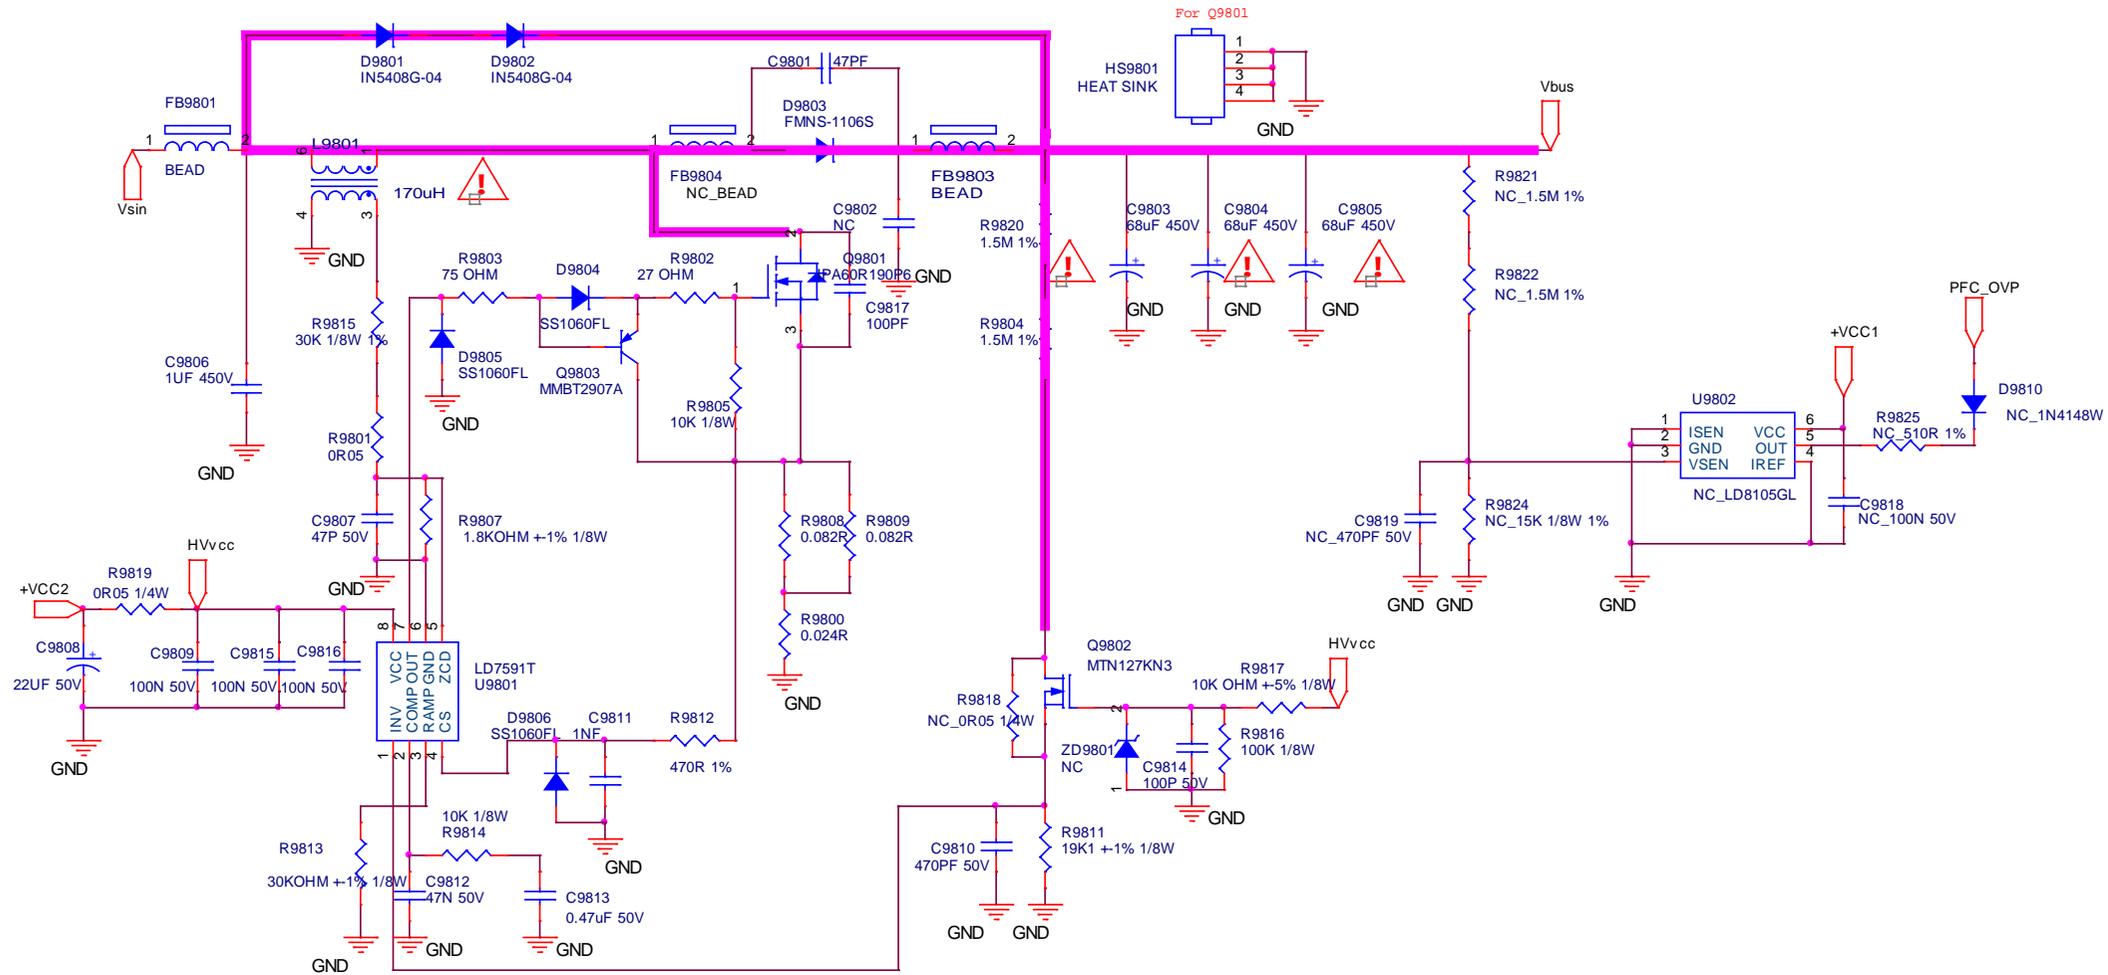

### 8-3-3 Main Power

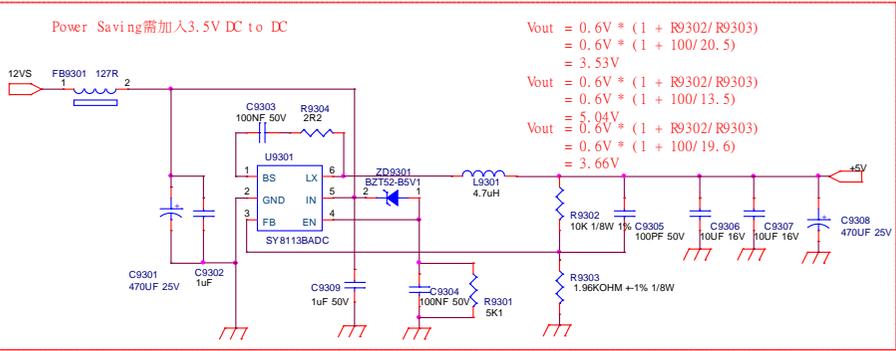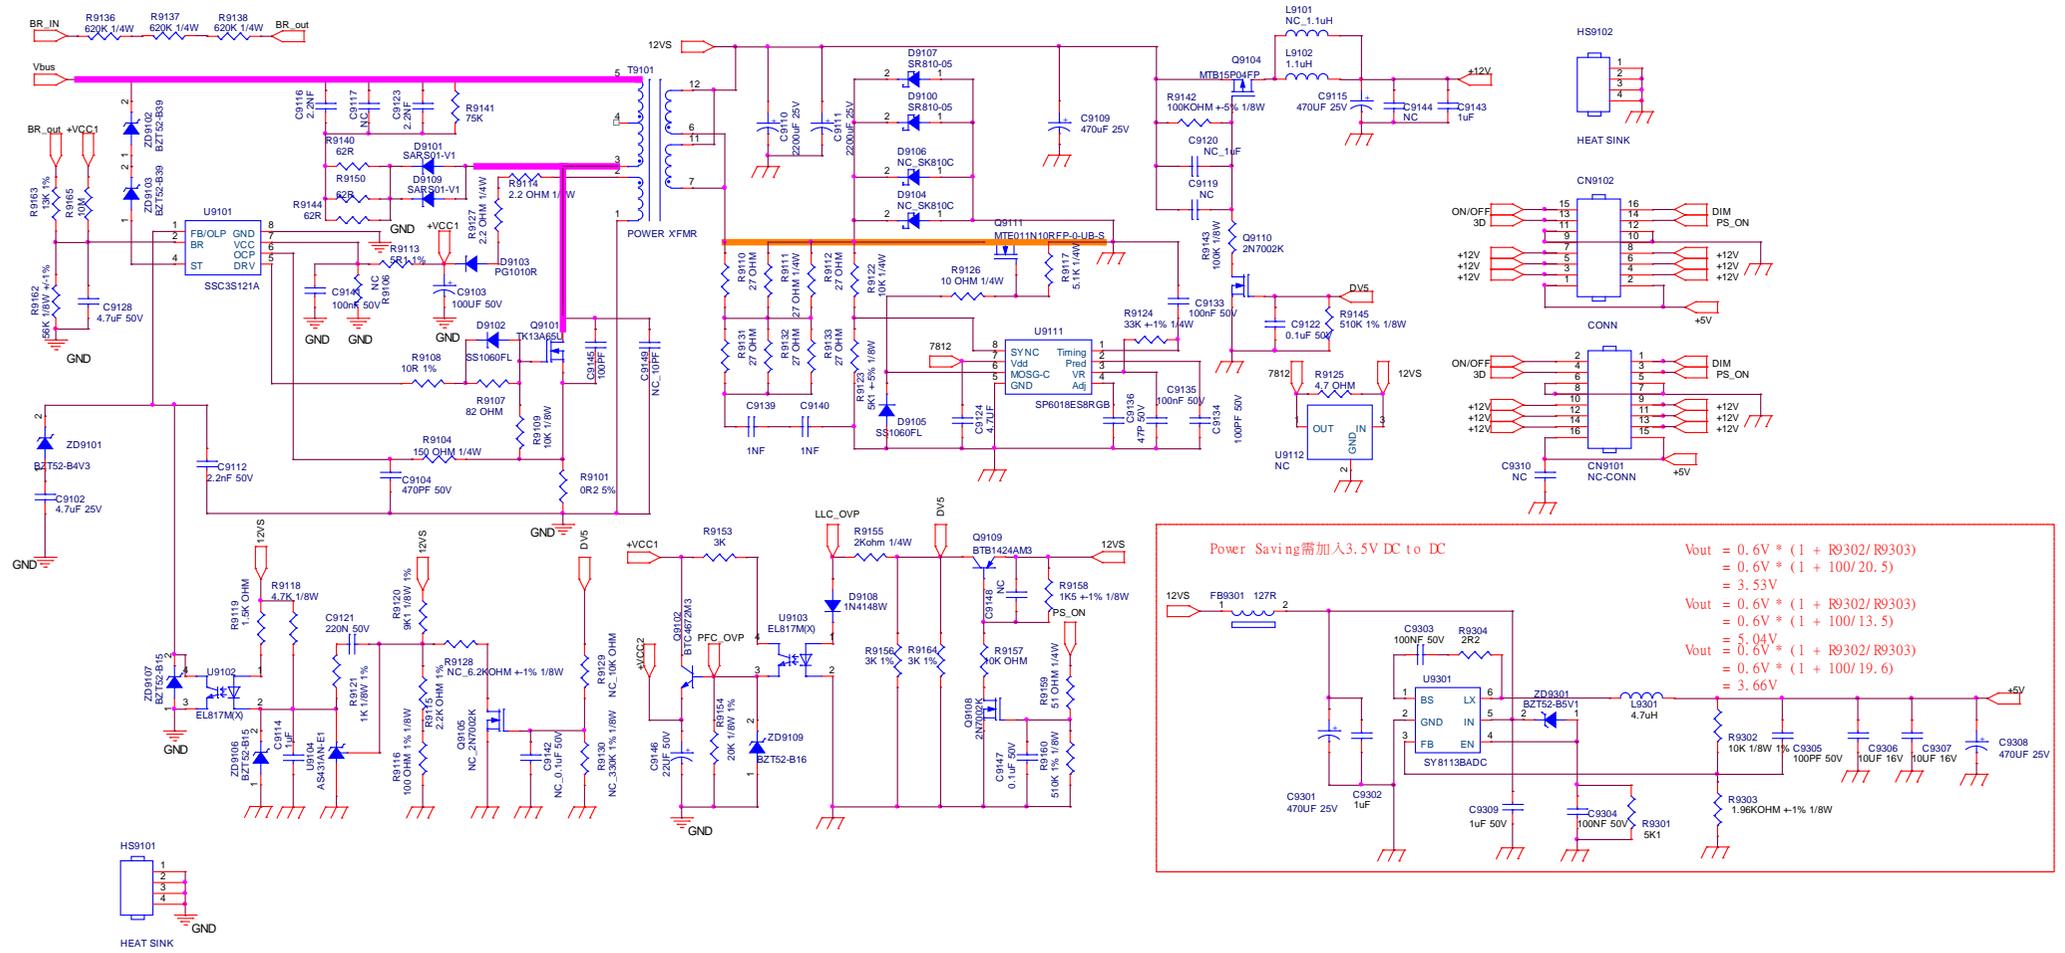


# 8-3-4 LLC

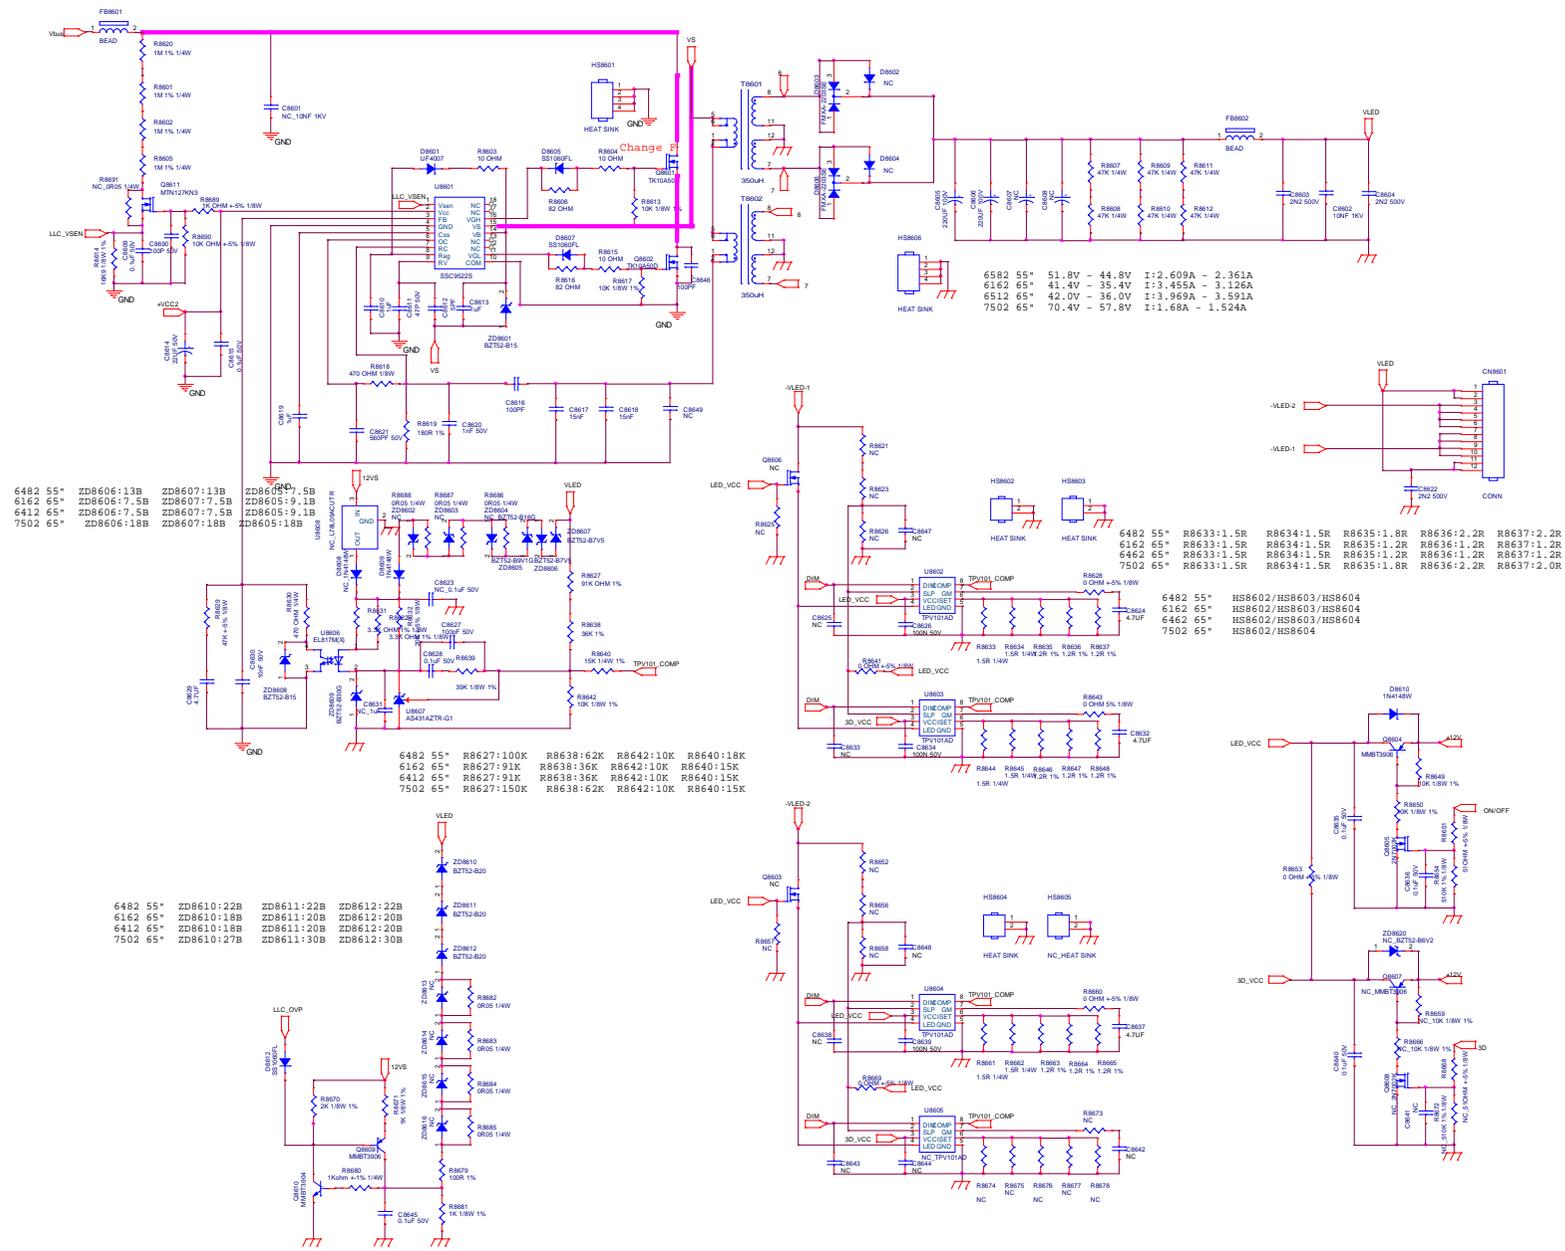



### 8-4-2 PFC stage

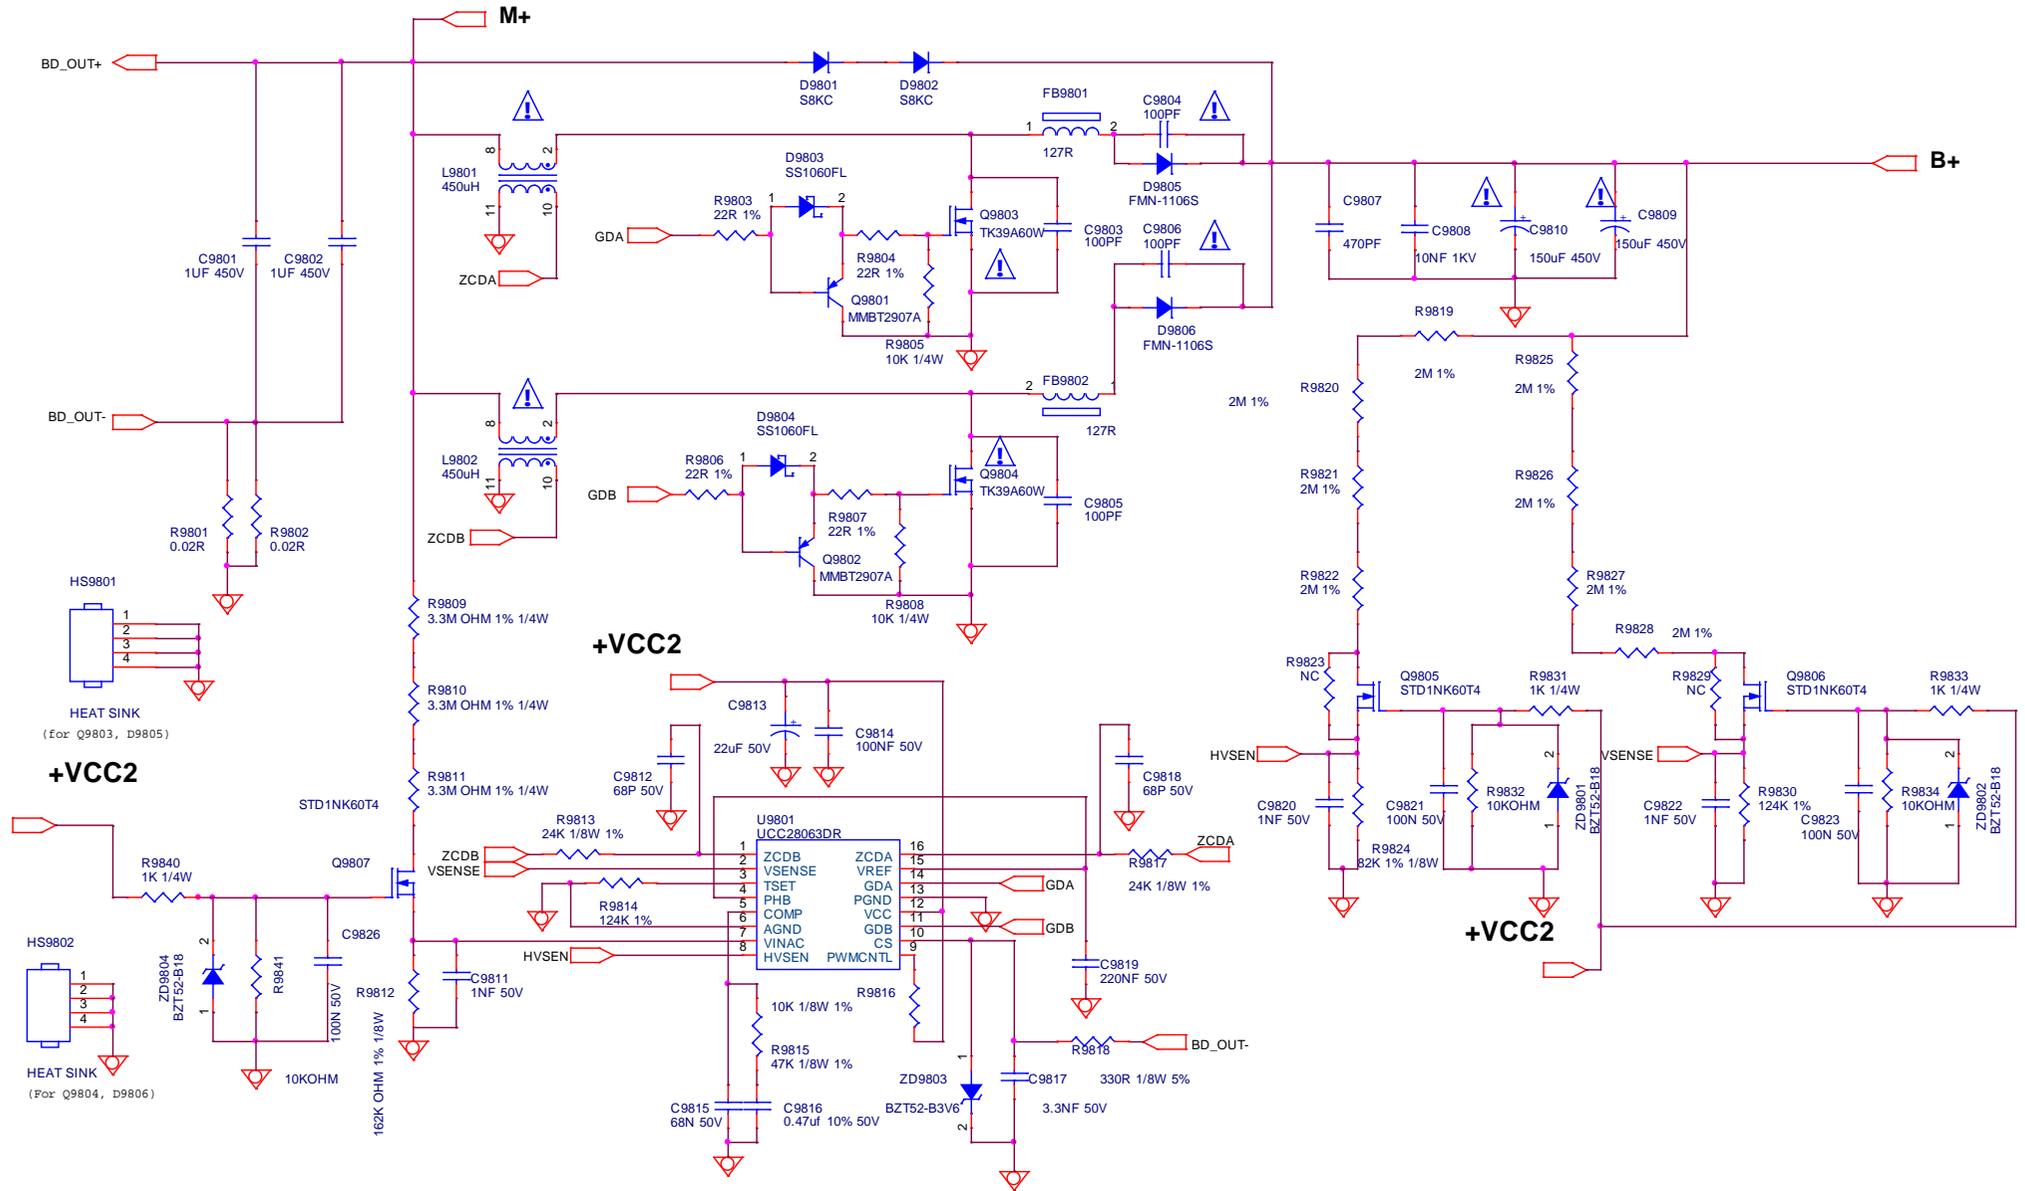


















8-5-4 SOC-DDR3-5

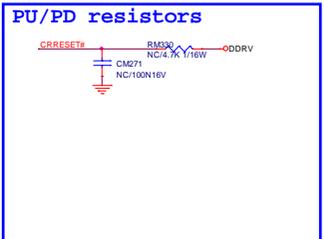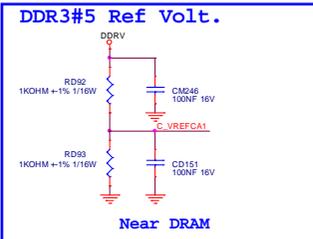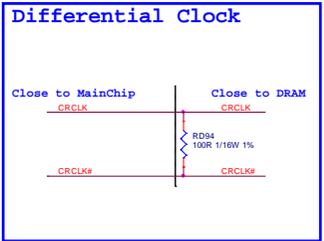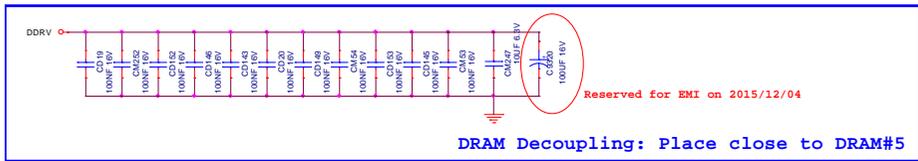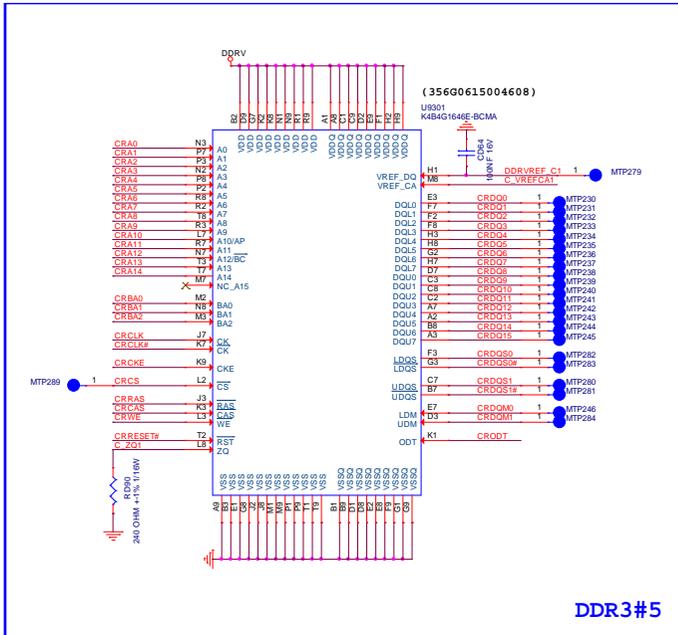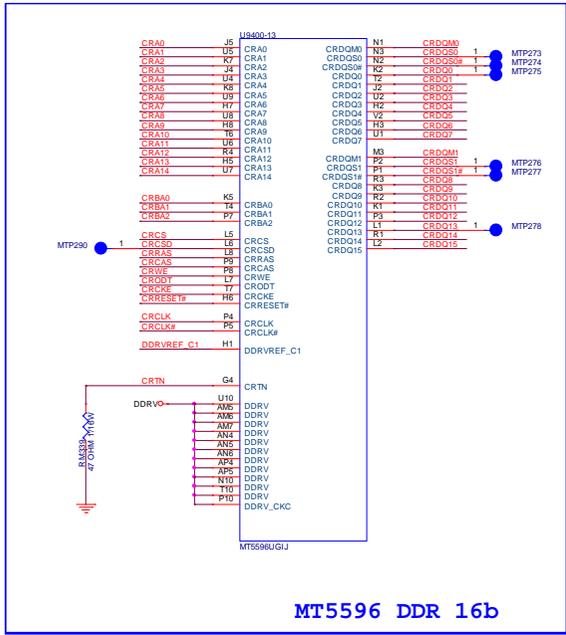




# 8-5-6 BE-NT72333a-Vx1-INPUT

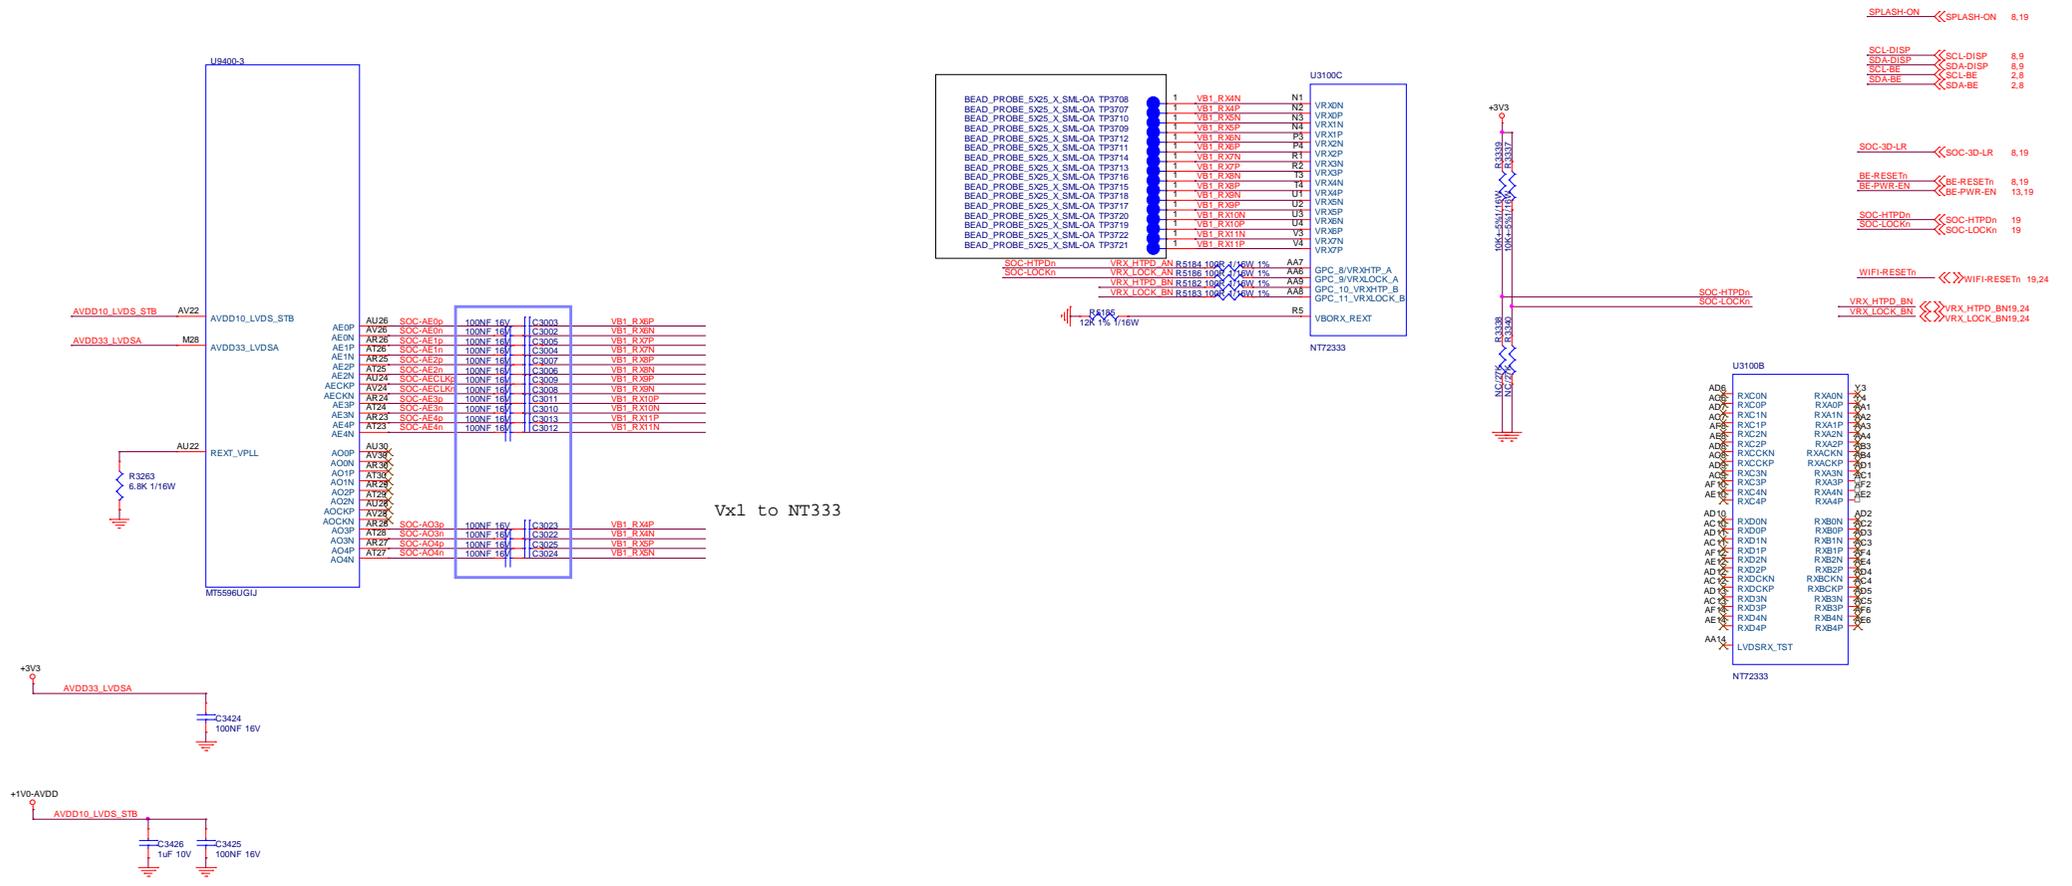


Vx1 to NT333




NT72333 V-BY-1 OUTPUT

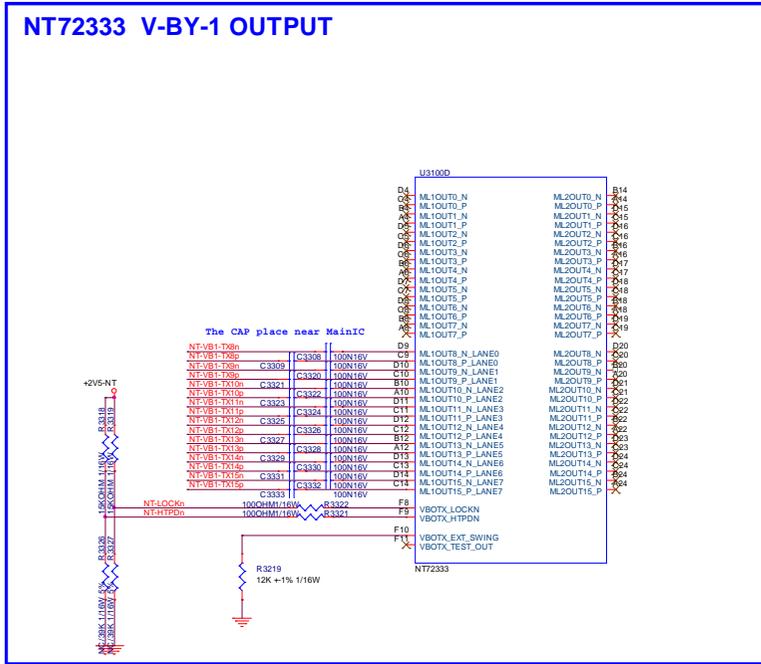

V-BY-1 OUTPUT to Display

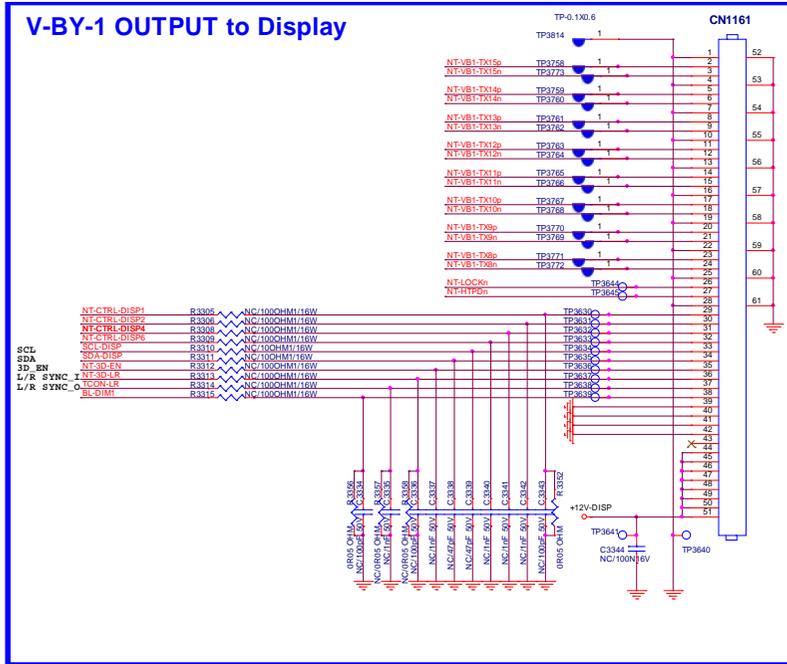


+12V-DISP

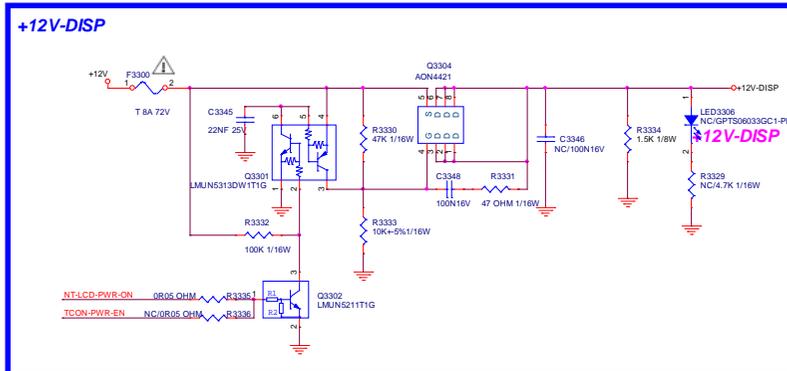




# NT72333 DDR

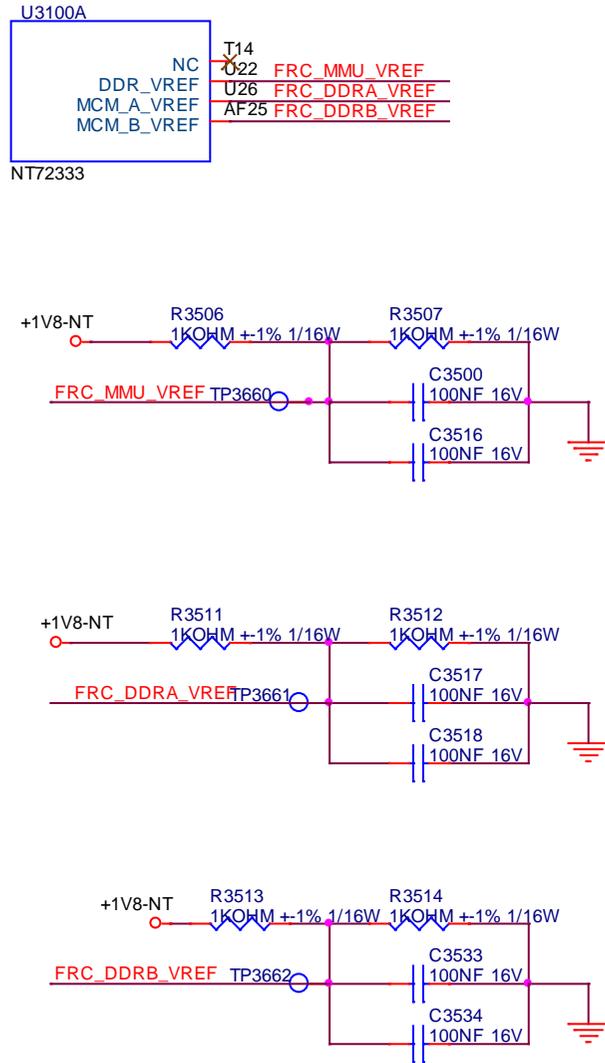


VREF voltage divider

# NT72333 GND

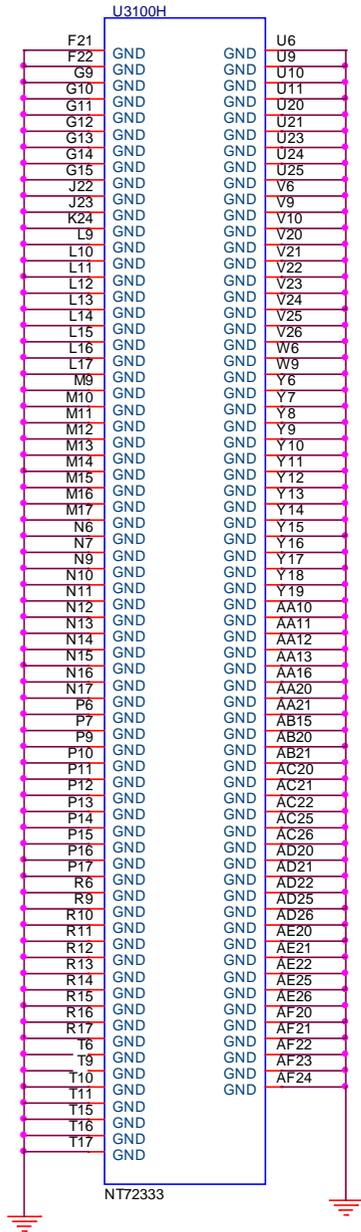


# 8-5-12 DCDC-Novatek-POWER

FRC\_1.1V

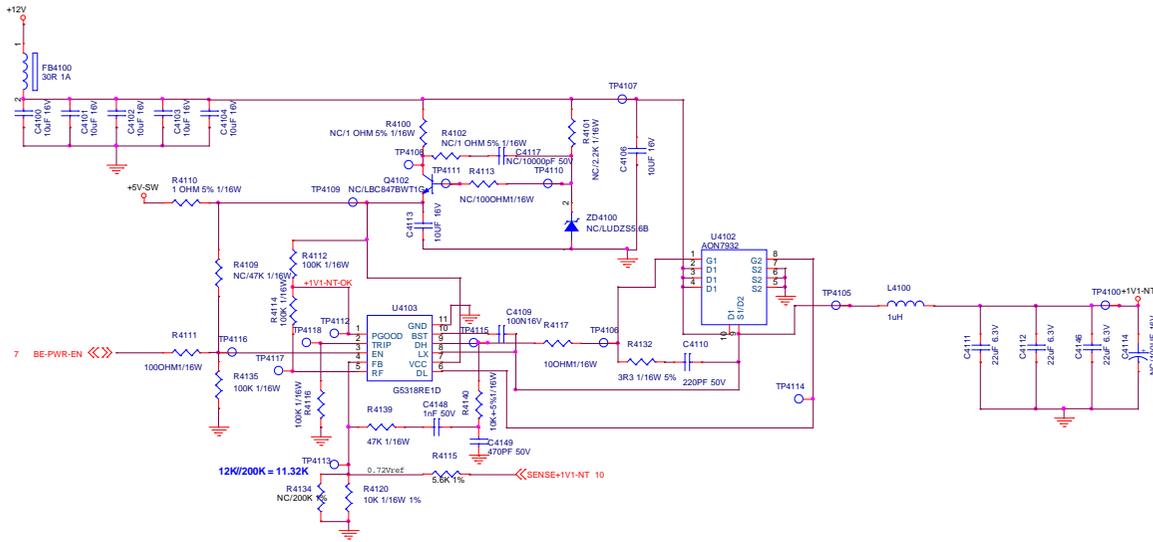


FRC\_2.5V

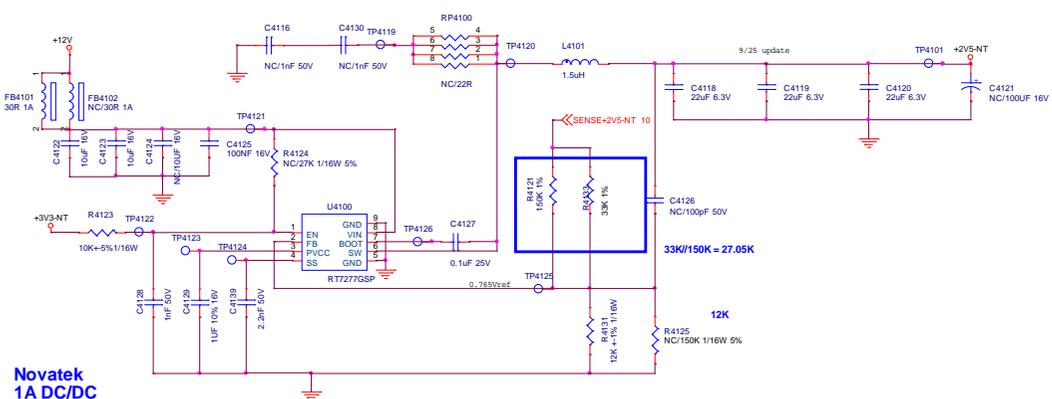


Novatek  
1A DC/DC

FRC\_3.3V



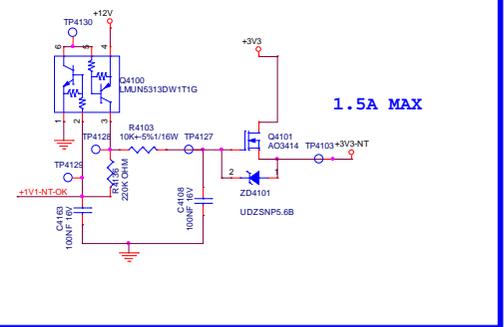


FRC\_1.8V

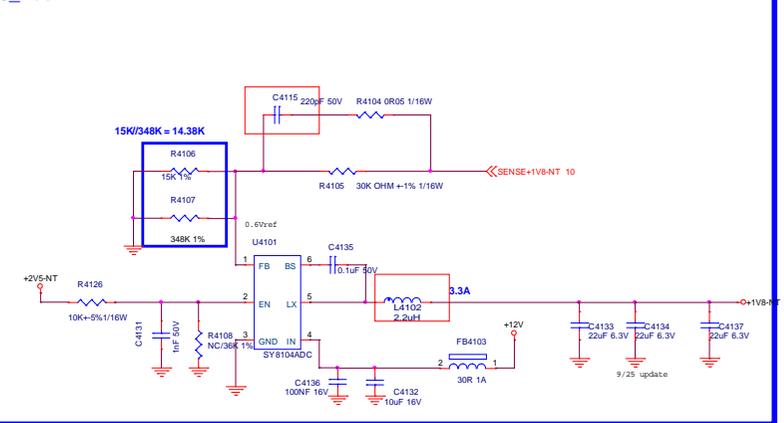


### 8-5-13 DCDC-SOC-VCCK-DVSS

U9400-11		L31	
AA15	DVSS	DVSS	L9
AA16	DVSS	DVSS	M20
AA17	DVSS	DVSS	M21
AA18	DVSS	DVSS	M22
AA19	DVSS	DVSS	M23
AA20	DVSS	DVSS	M23
AA21	DVSS	DVSS	M31
AA22	DVSS	DVSS	N18
AA23	DVSS	DVSS	N19
AA24	DVSS	DVSS	N20
AA8	DVSS	DVSS	N21
AB14	DVSS	DVSS	N23
AB15	DVSS	DVSS	N9
AB16	DVSS	DVSS	P15
AB17	DVSS	DVSS	P16
AB18	DVSS	DVSS	P17
AB19	DVSS	DVSS	P18
AB20	DVSS	DVSS	P19
AB21	DVSS	DVSS	P20
AB22	DVSS	DVSS	P21
AB23	DVSS	DVSS	P22
AB24	DVSS	DVSS	P23
AB36	DVSS	DVSS	P24
AC14	DVSS	DVSS	P6
AC15	DVSS	DVSS	R15
AC16	DVSS	DVSS	R16
AC17	DVSS	DVSS	R17
AC18	DVSS	DVSS	R18
AC19	DVSS	DVSS	R19
AC36	DVSS	DVSS	R20
AC4	DVSS	DVSS	R21
AC7	DVSS	DVSS	R22
AC8	DVSS	DVSS	R23
AD15	DVSS	DVSS	R24
AD16	DVSS	DVSS	T15
AD17	DVSS	DVSS	T16
AD18	DVSS	DVSS	T17
AD19	DVSS	DVSS	T18
AD4	DVSS	DVSS	T19
AD9	DVSS	DVSS	T20
AE9	DVSS	DVSS	T21
AF35	DVSS	DVSS	T22
AF5	DVSS	DVSS	T23
AF8	DVSS	DVSS	T24
AF9	DVSS	DVSS	T3
AG4	DVSS	DVSS	T8
AG8	DVSS	DVSS	T9
AH5	DVSS	DVSS	U15
AJ36	DVSS	DVSS	U16
AJ7	DVSS	DVSS	U17
AK21	DVSS	DVSS	U18
AK26	DVSS	DVSS	U19
AK28	DVSS	DVSS	U20
AL12	DVSS	DVSS	U21
AL15	DVSS	DVSS	U22
AL5	DVSS	DVSS	U23
AM10	DVSS	DVSS	U24
AM11	DVSS	DVSS	U3
AM12	DVSS	DVSS	U32
AM13	DVSS	DVSS	V15
AM15	DVSS	DVSS	V16
AM16	DVSS	DVSS	V17
AM17	DVSS	DVSS	V18
AM9	DVSS	DVSS	V19
AN3	DVSS	DVSS	V20
AN7	DVSS	DVSS	V21
AN8	DVSS	DVSS	V22
AP21	DVSS	DVSS	V23
AP23	DVSS	DVSS	V24
AP24	DVSS	DVSS	W14
AP26	DVSS	DVSS	W15
AP27	DVSS	DVSS	W16
AP28	DVSS	DVSS	W17
AP29	DVSS	DVSS	W18
AP31	DVSS	DVSS	W19
AP34	DVSS	DVSS	W20
AR11	DVSS	DVSS	W21
AR16	DVSS	DVSS	W22
AR19	DVSS	DVSS	W23
A14	DVSS	DVSS	W24
A17	DVSS	DVSS	W3
B31	DVSS	DVSS	W6
B33	DVSS	DVSS	W8
B37	DVSS	DVSS	Y14
C17	DVSS	DVSS	Y15
C19	DVSS	DVSS	Y16
C20	DVSS	DVSS	Y17
E22	DVSS	DVSS	Y18
E26	DVSS	DVSS	Y19
F12	DVSS	DVSS	Y20
F9	DVSS	DVSS	Y21
G5	DVSS	DVSS	Y22
J3	DVSS	DVSS	Y23
J31	DVSS	DVSS	Y24
J6	DVSS	DVSS	Y7
K6	DVSS	DVSS	Y8
K9	DVSS	DVSS	
DVSS		DVSS	

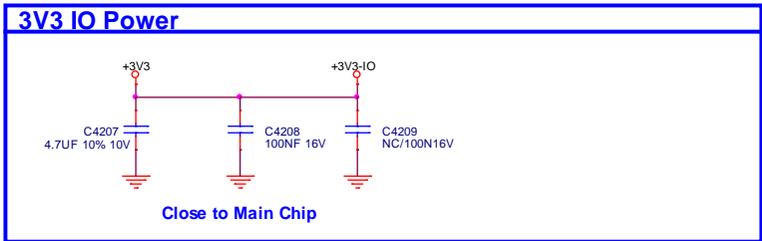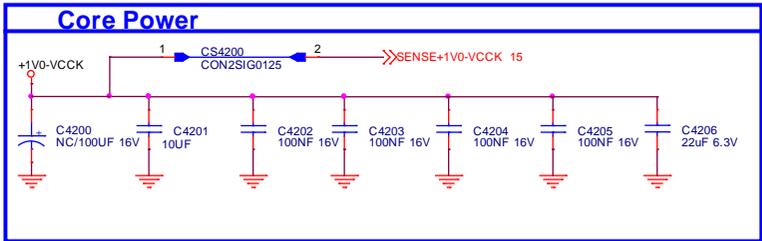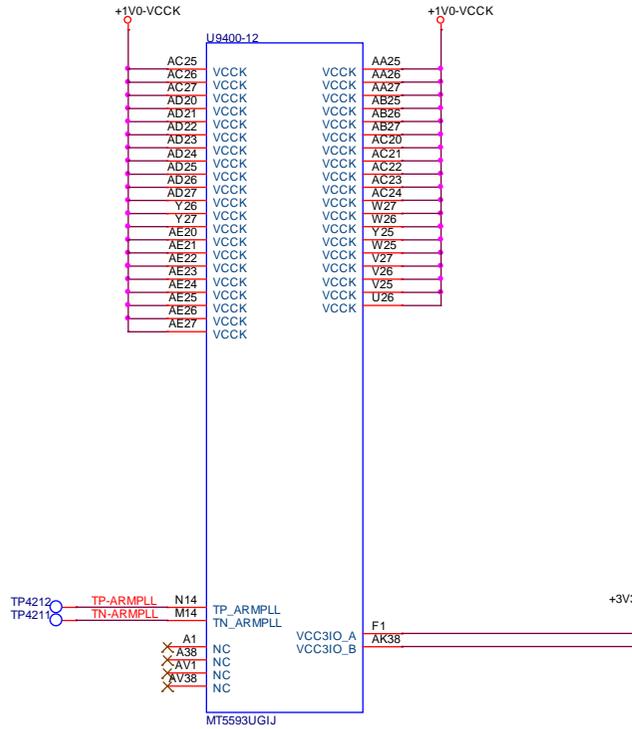







# 8-5-14 DCDC-SYSTEM-POWER1

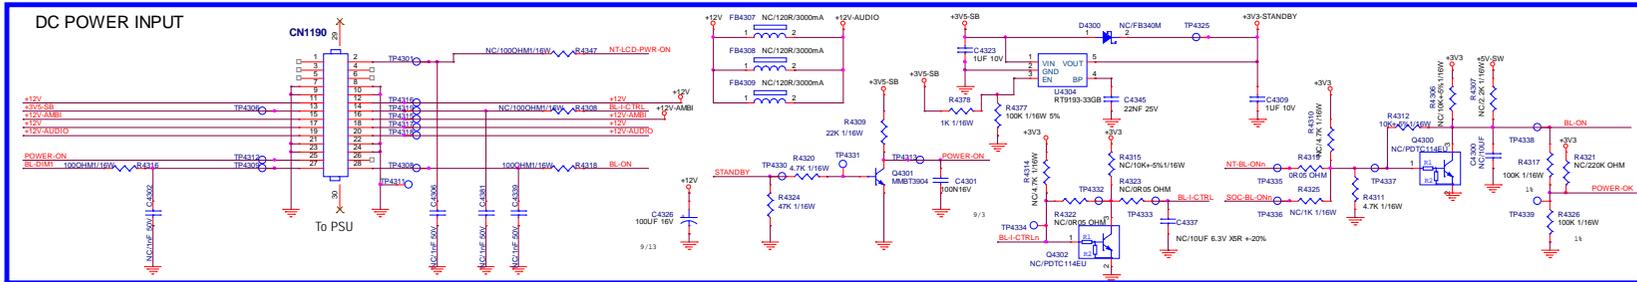

BL ON/OFF Control	
6.19 BL-CTRLn	BL-CTRLn
7 SOC-BL-ON	SOC-BL-ON
8 INT-BL-ON	INT-BL-ON
8.9 BL-DIM1	BL-DIM1


  

POWER control	
17.19 12V-DETECT	12V-DETECT
18 POWER-OK	POWER-OK
8.9.18 INT-LCD-PWR-ON	INT-LCD-PWR-ON
8 INT-BL-ON	INT-BL-ON
18 DDR4-PWR-ON	DDR4-PWR-ON
18 POWER-ON	POWER-ON

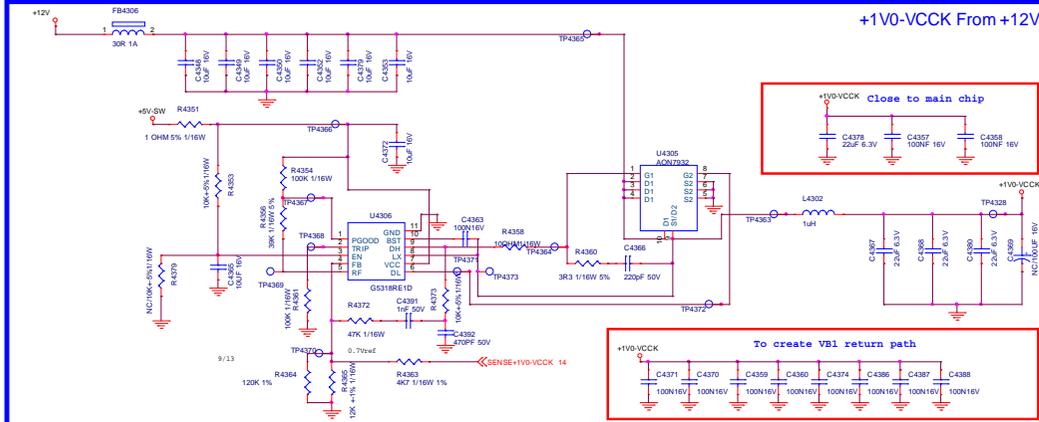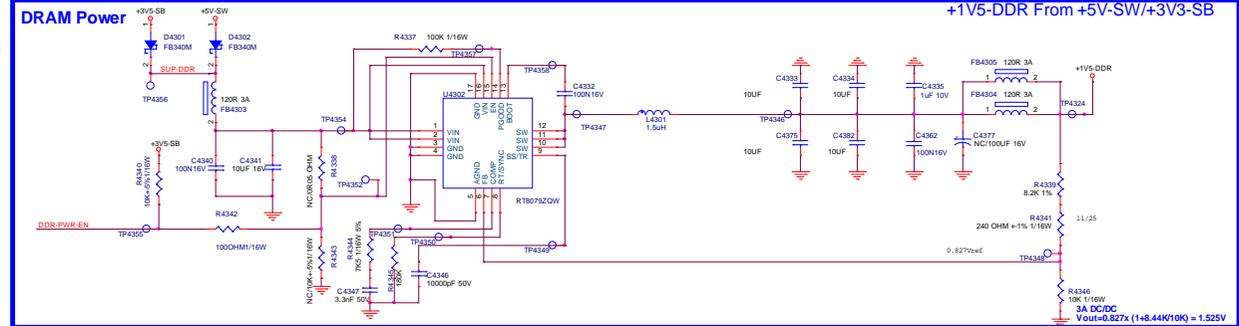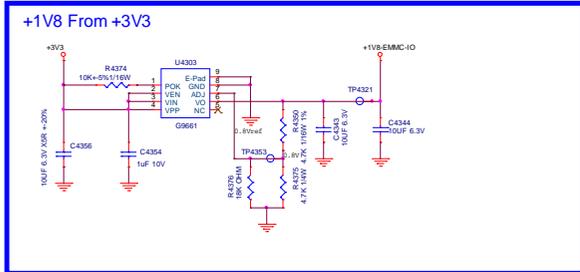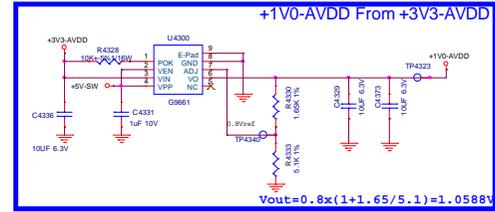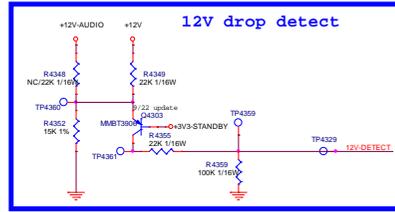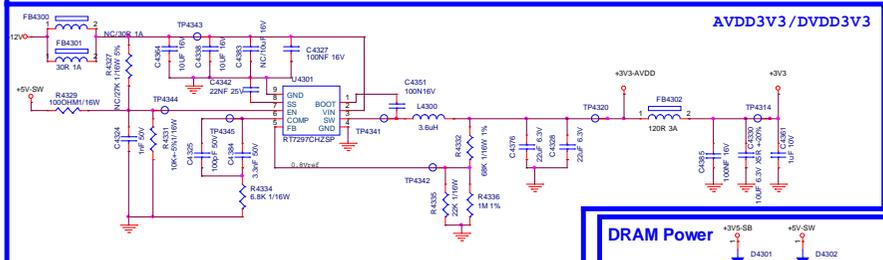


8-5-15 VCCK & DVSS

+5V-SW from +12V

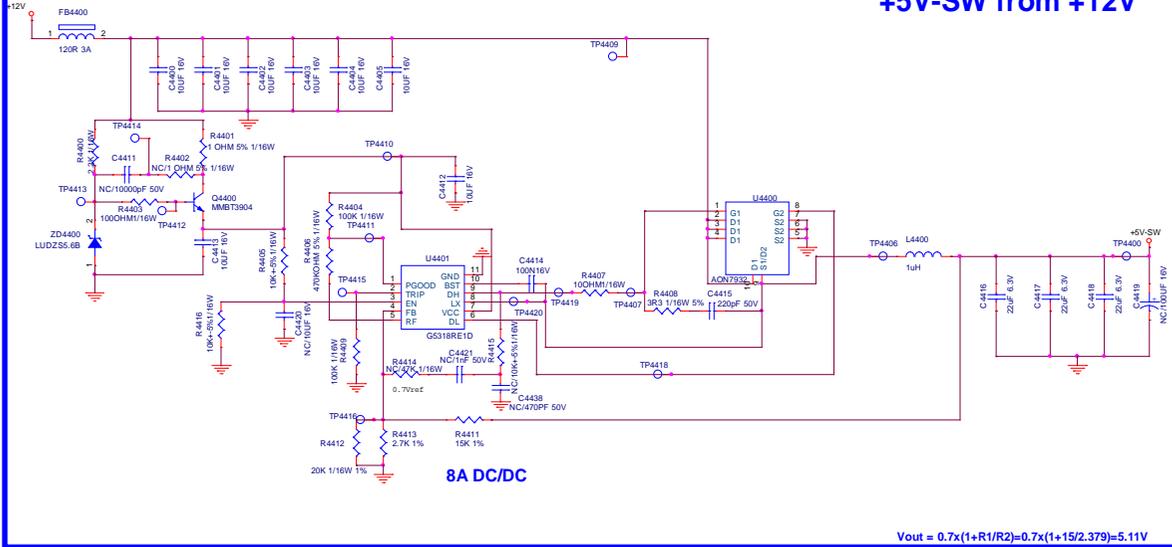

$V_{out} = 0.7x(1+R1/R2) = 0.7x(1+15/2.379) = 5.11V$

Wi-Fi Power Control

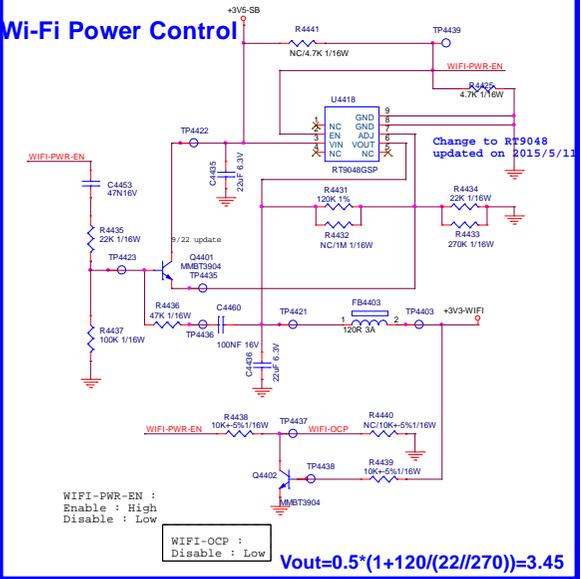


WIPI-PWR-EN :  
Enable : High  
Disable : Low

WIPI-OC-P :  
Disable : Low

$V_{out} = 0.5 * (1 + 120 / (22 / 270)) = 3.45$


- LNB POWER Control
- 6 LNB\_EN
  - 9 LNB\_LINEDROP
  - 6 13V/18V\_SW
  - 6 TUNER\_LNB
  - 6 DISEQC\_OUT
  - 19 TUN\_LNB
- WIPI POWER Control
- 7 WIPI-OC-P
  - 19 WIPI-PWR-EN

AMBILIGHT PROTECTION

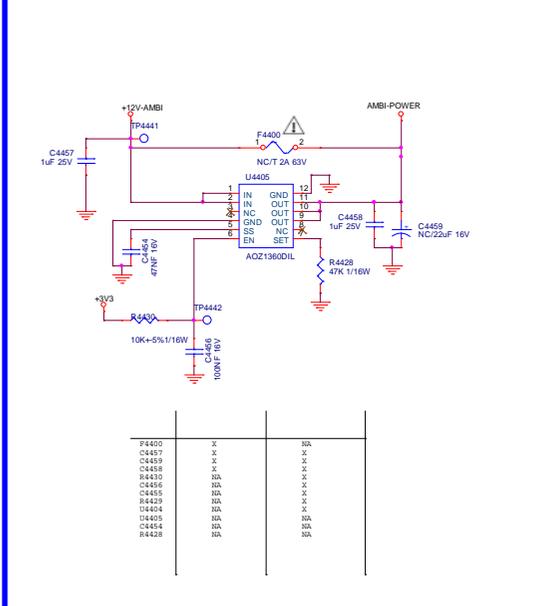

F4400	X		NA
C4457	X		
C4459	X		
C4458	X		
R4450	NA		*****
C4456	NA		
C4455	NA		
R4429	NA		
U4404	NA		*****
U4405	NA		
C4454	NA		
R4428	NA		

LNB POWER SUPPLY

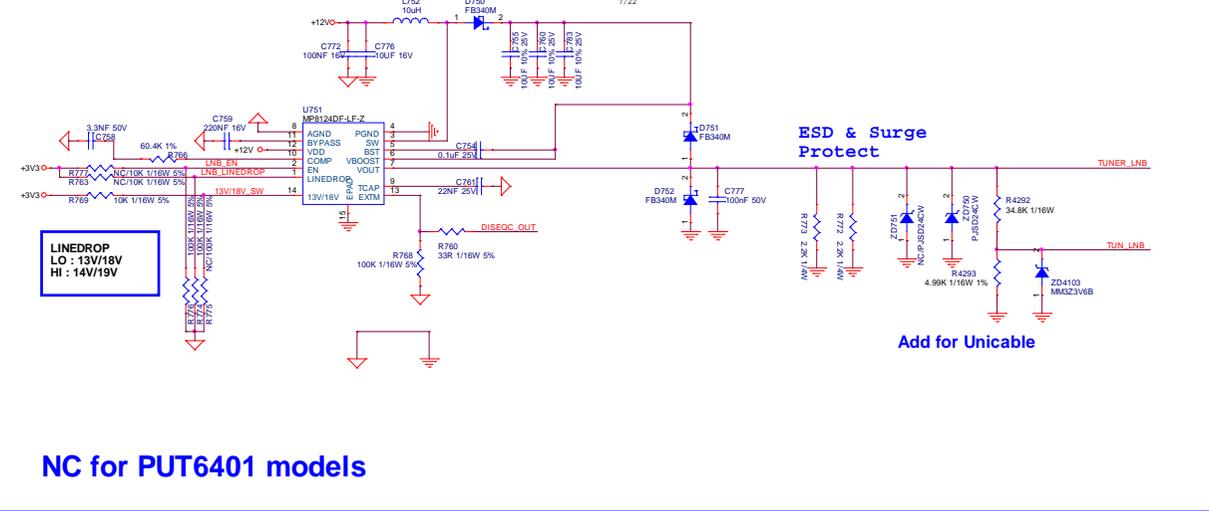

LINEDROP  
LO : 13V/18V  
HI : 14V/19V

NC for PUT6401 models

ESD & Surge Protect

Add for Unicable












# 8-5-21 SCART-YPbPr-CVBS

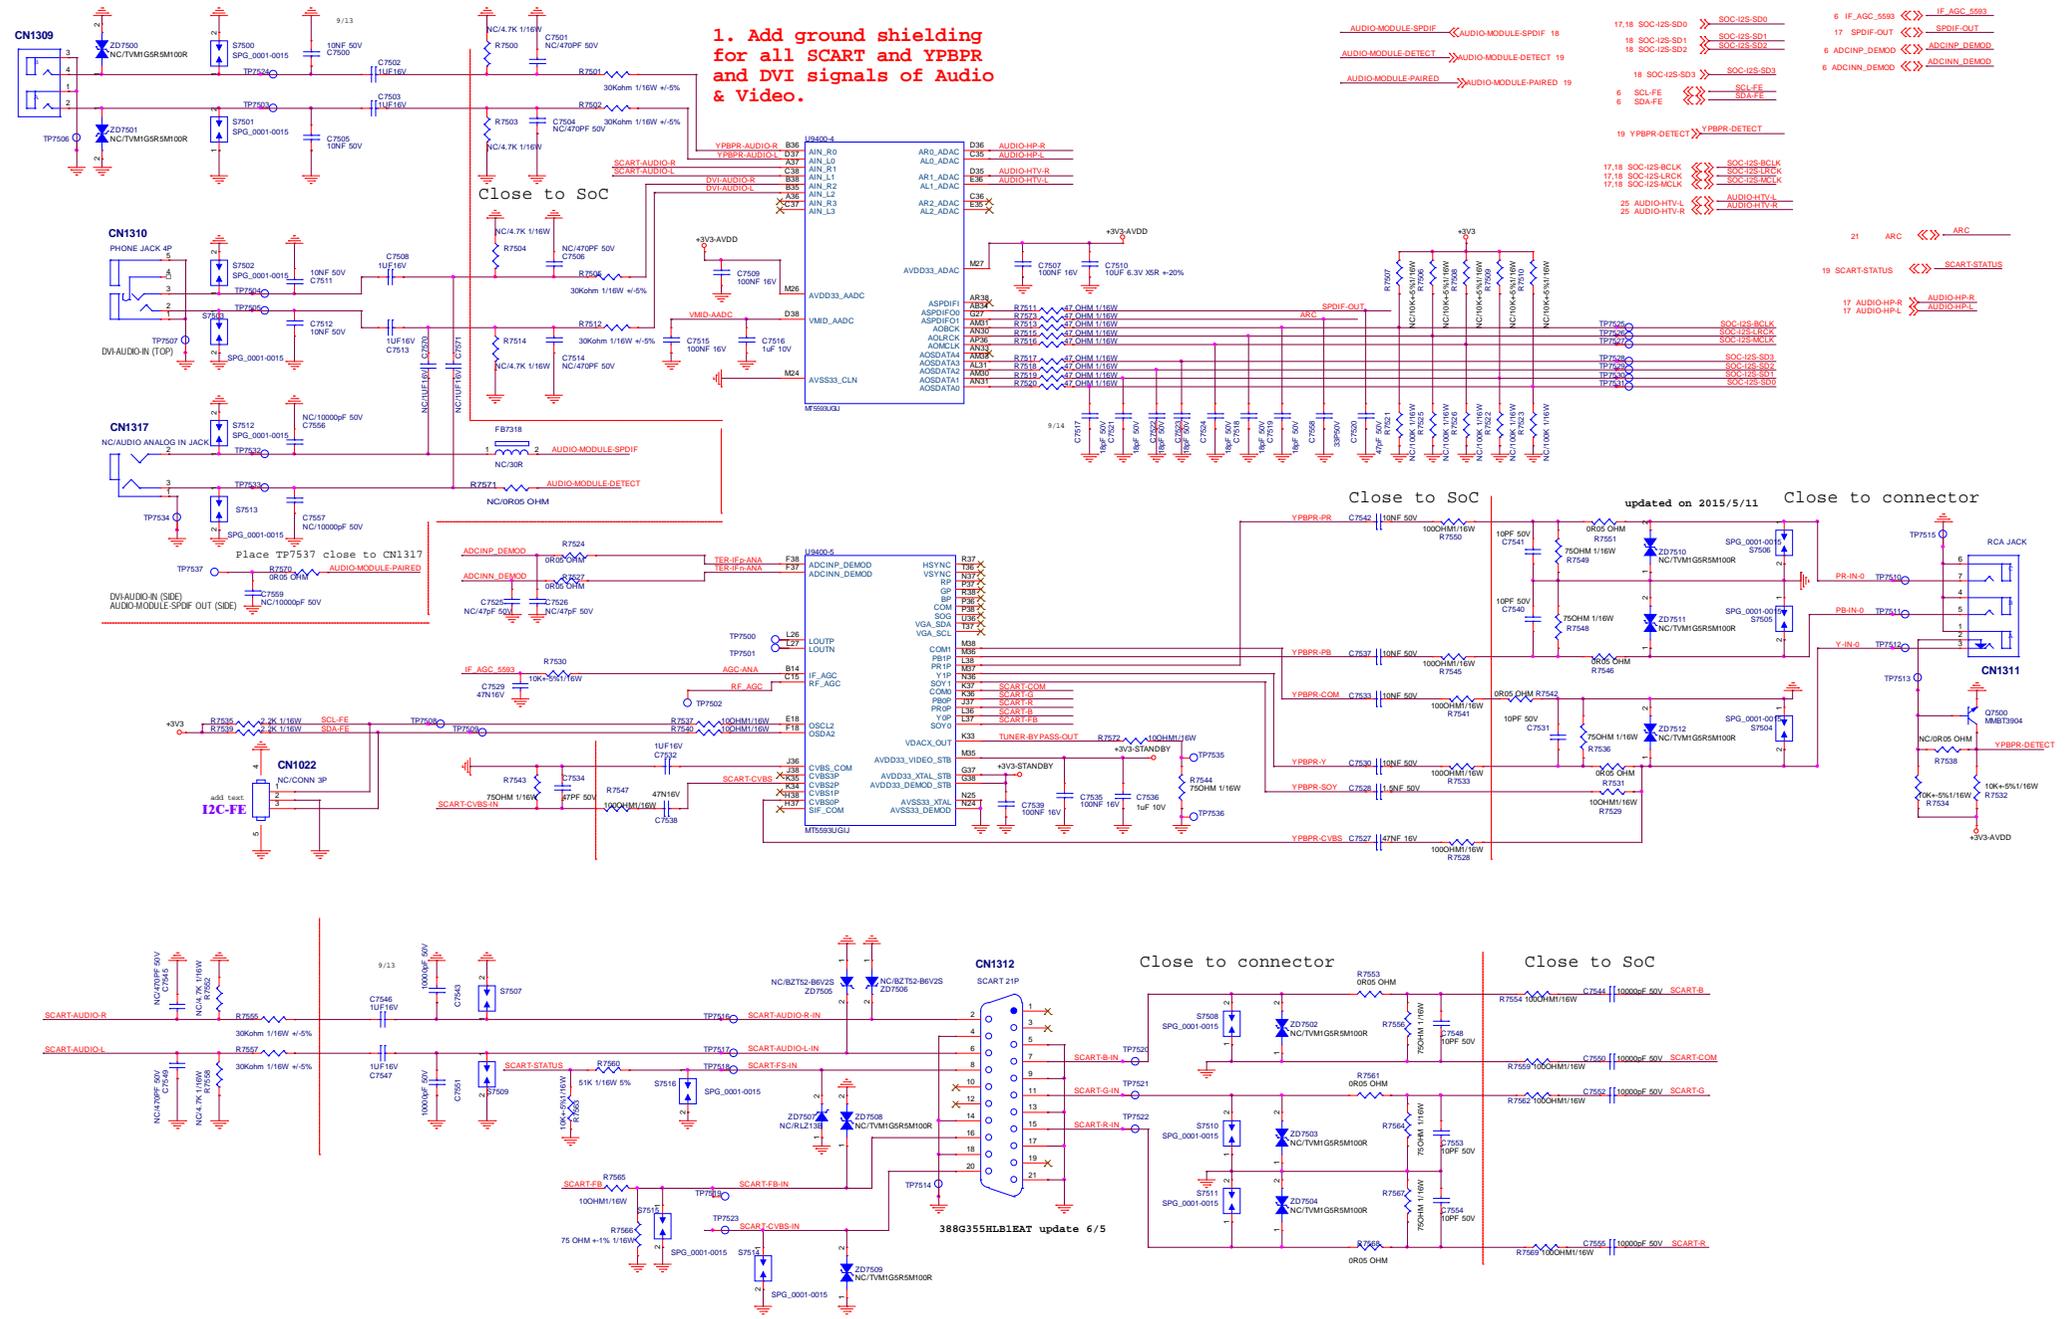




1. Add ground shielding for all SCART and YPbPr and DVI signals of Audio & Video.

- AUDIO-MODULE-SPDIF <<> AUDIO-MODULE-SPDIF 18
- AUDIO-MODULE-DETECT <<> AUDIO-MODULE-DETECT 19
- AUDIO-MODULE-PAIRED <<> AUDIO-MODULE-PAIRED 19
- SOC-I2S-S00 <<> SOC-I2S-S00
- SOC-I2S-S01 <<> SOC-I2S-S01
- SOC-I2S-S02 <<> SOC-I2S-S02
- SOC-I2S-S03 <<> SOC-I2S-S03
- SCL-FE <<> SCL-FE
- SDA-FE <<> SDA-FE
- YPBPR-DETECT <<> YPbPR-DETECT
- SOC-I2S-BCLK <<> SOC-I2S-BCLK
- SOC-I2S-LRCLK <<> SOC-I2S-LRCLK
- SOC-I2S-SMCLK <<> SOC-I2S-SMCLK
- AUDIO-HTV-L <<> AUDIO-HTV-L
- AUDIO-HTV-R <<> AUDIO-HTV-R
- ARC <<> ARC
- SCART-STATUS <<> SCART-STATUS
- AUDIO-HP-R <<> AUDIO-HP-R
- AUDIO-HP-L <<> AUDIO-HP-L


388G355HLB1EAT update 6/5

# 8-5-22 CTRL-CONNECTORS


## AL+KEY

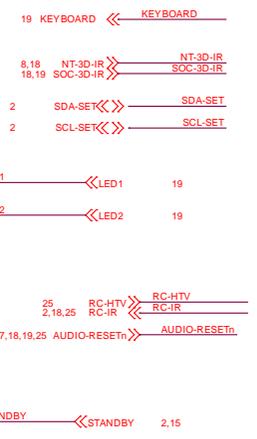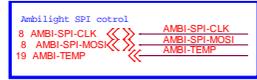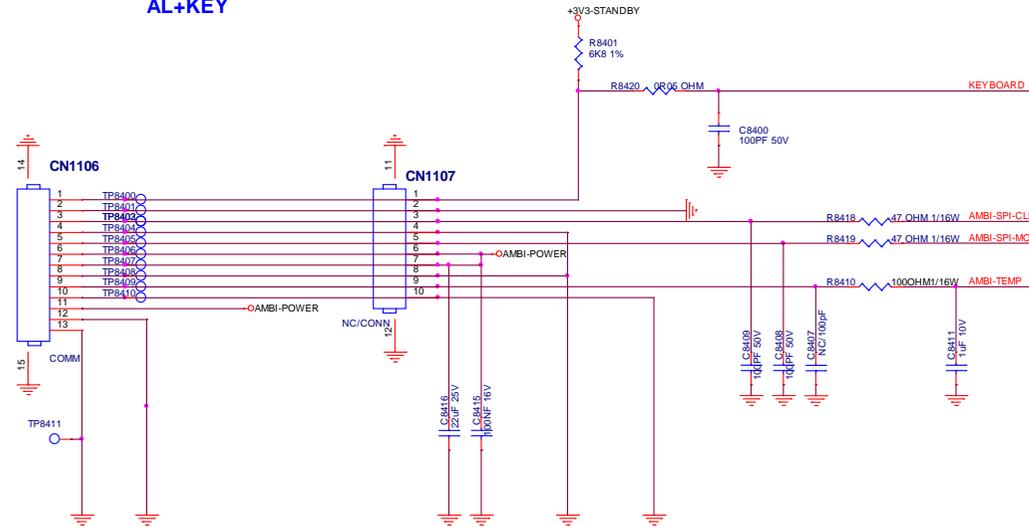

## Debug IR receiver

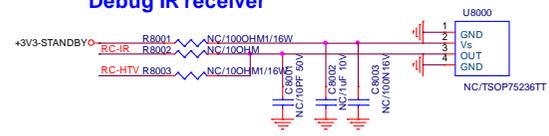


## Wordmark Driver

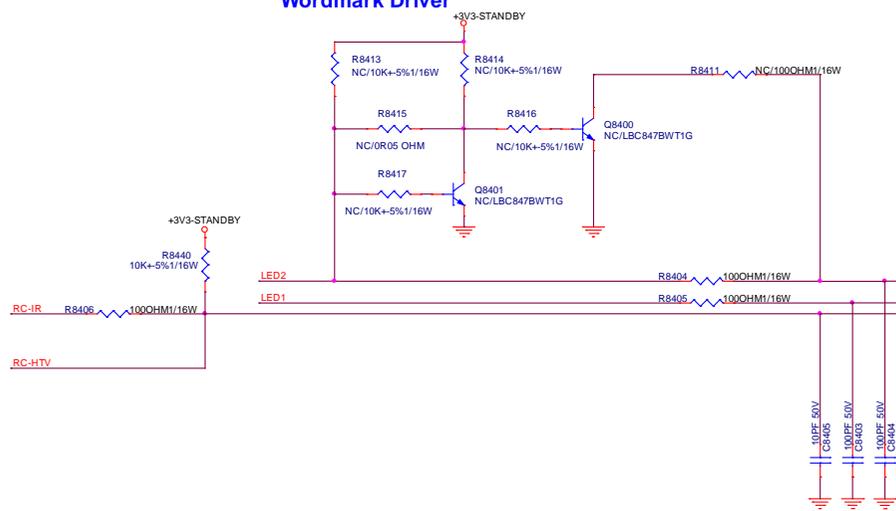

## TO SENSOR BOARD (CIP)






LED1, LED2:  
Enable: High  
Disable: Low  
LED2 is wordmark

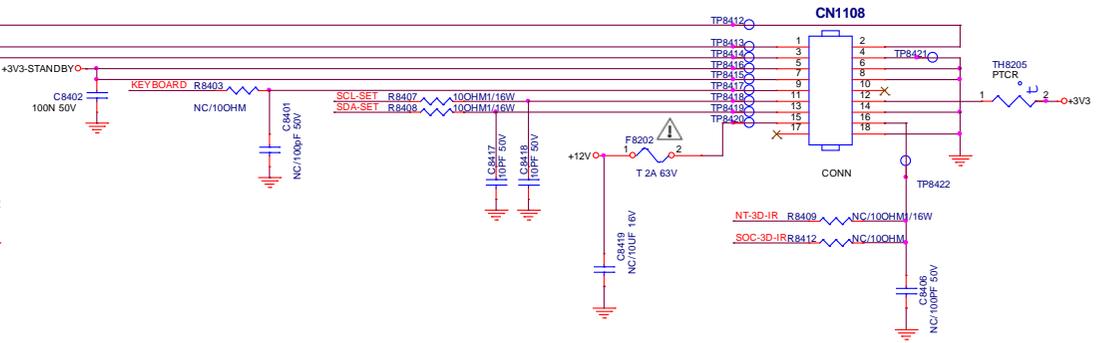













# 8.6 B 715G8465 SSB(For 55" POS9002 Series)












## 8-6-1 SOC-EMMC

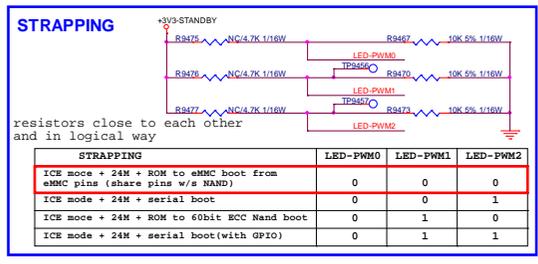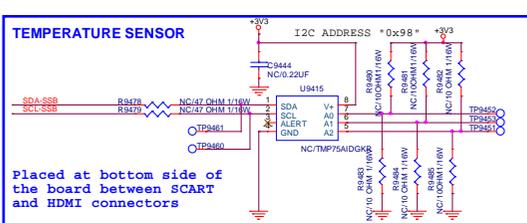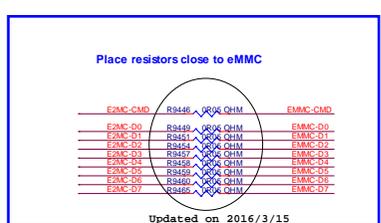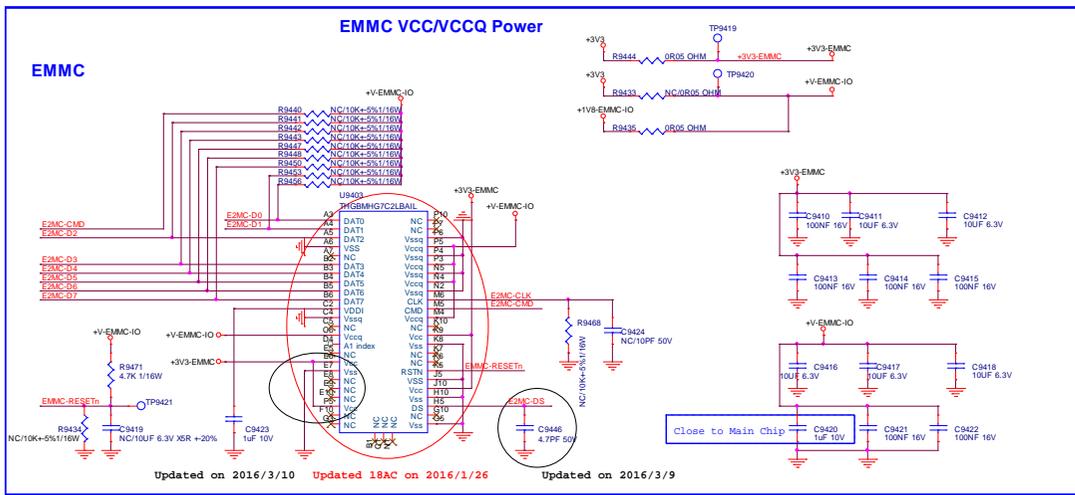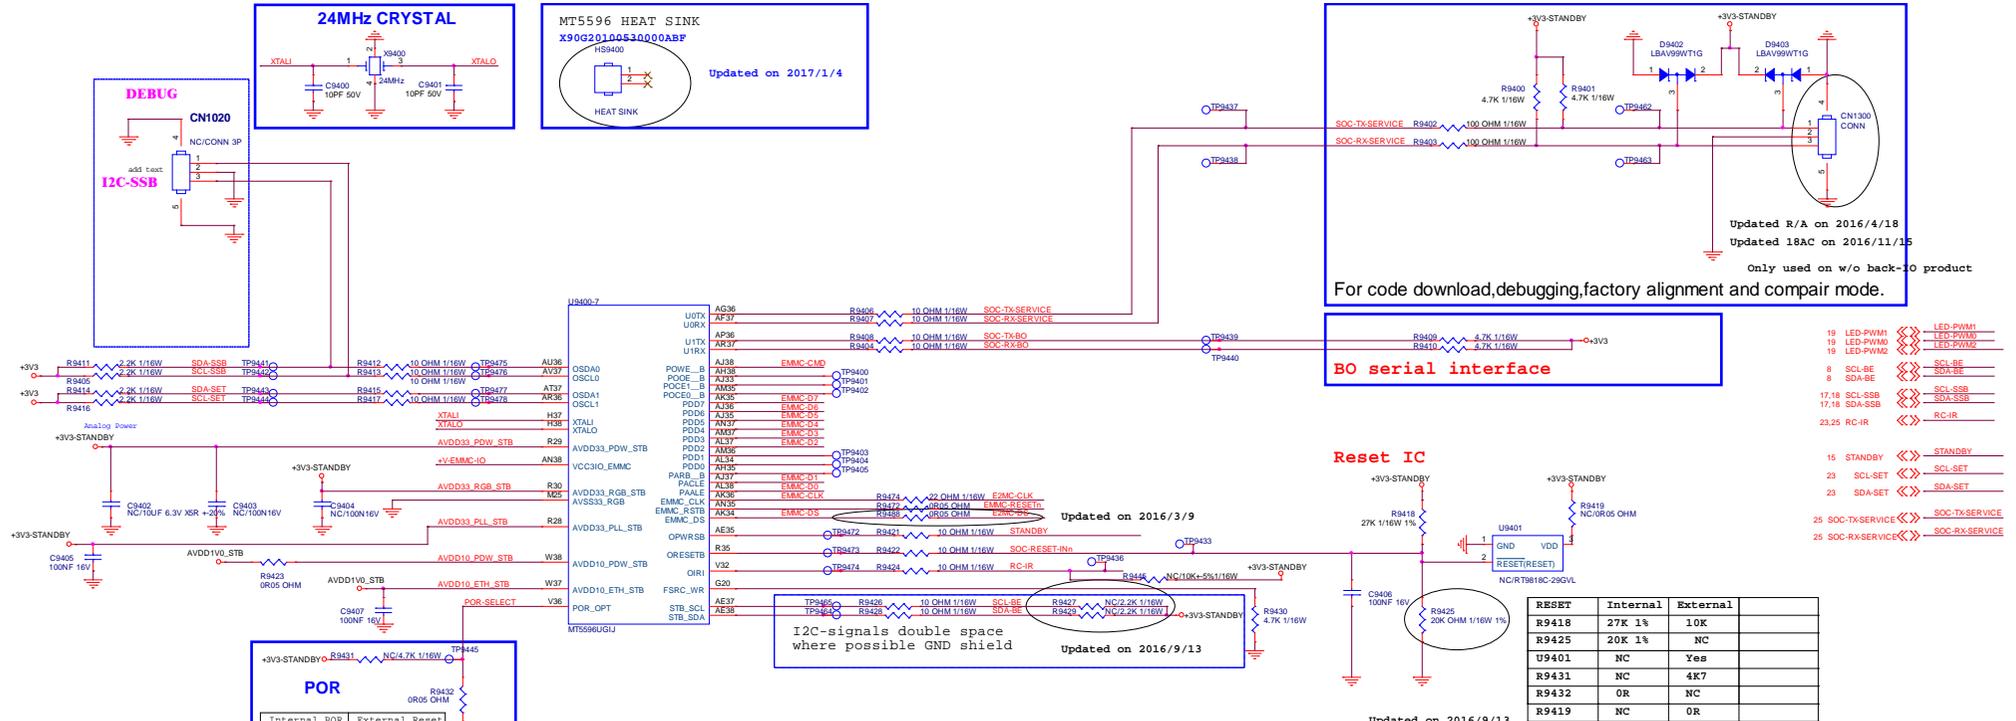

8-6-2 SOC-DDR3-1-2

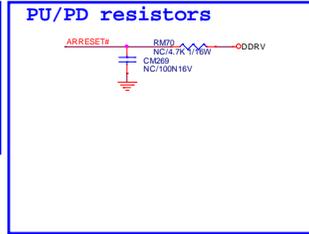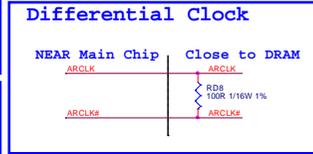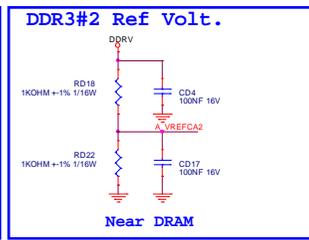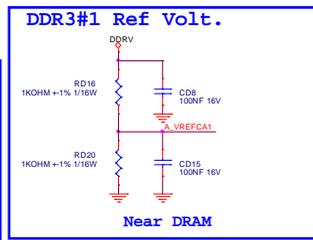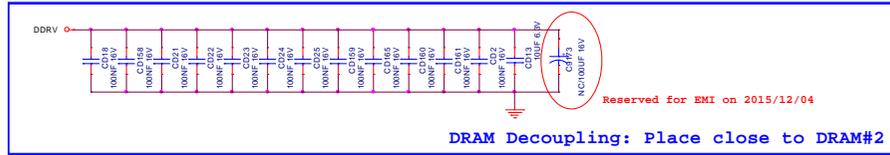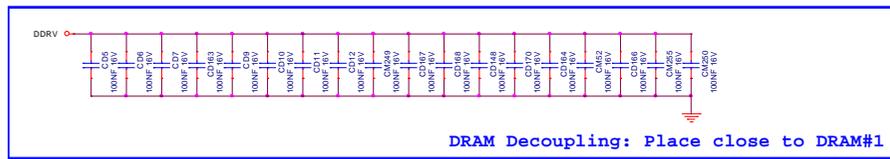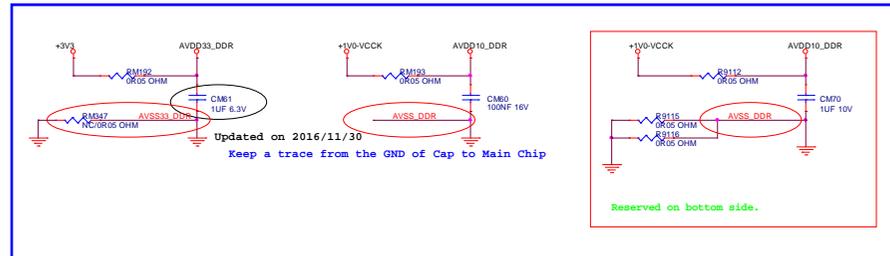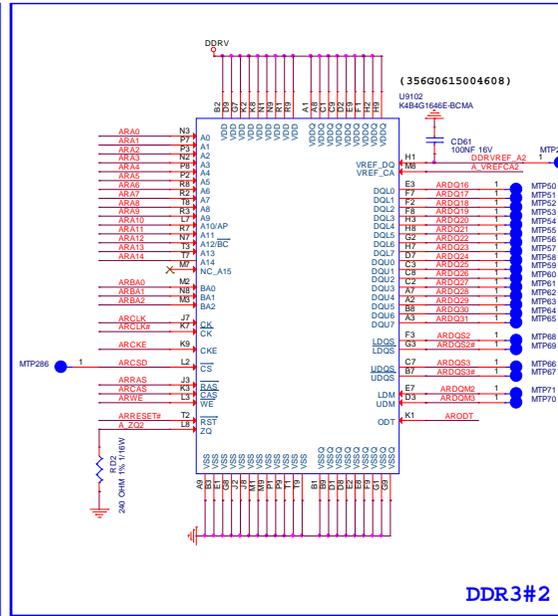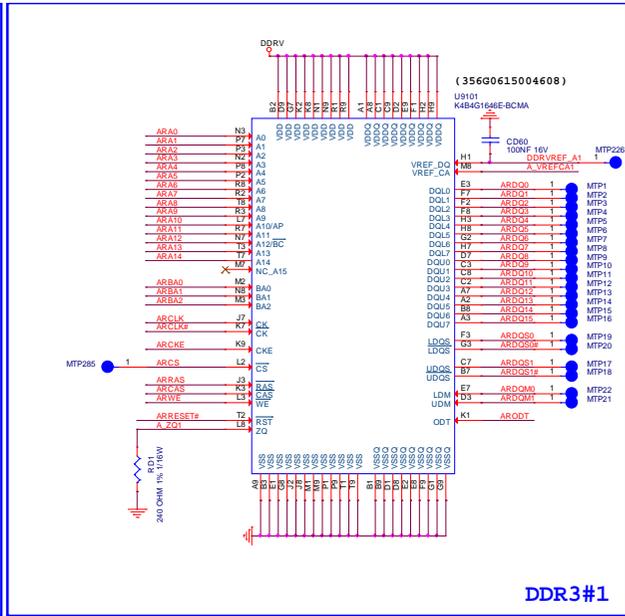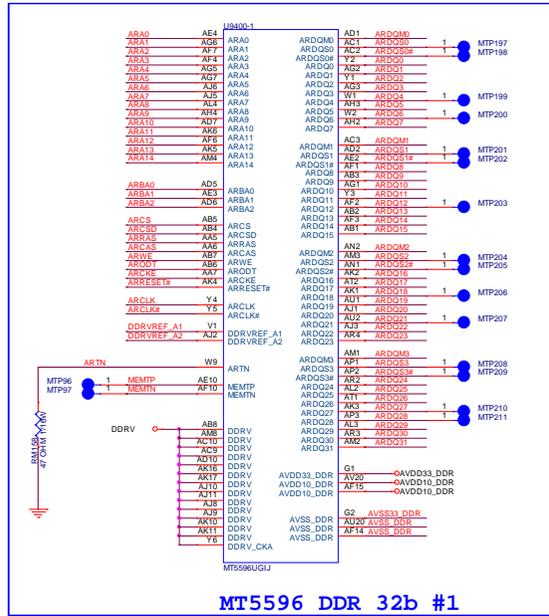

8-6-3 SOC-DDR3-3-4

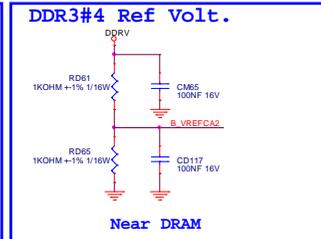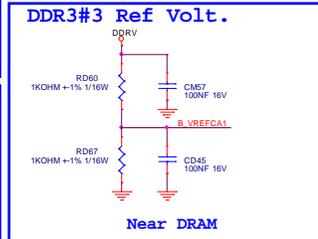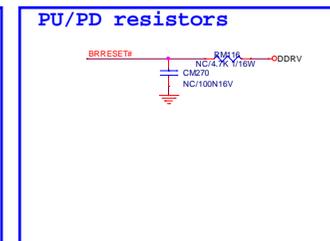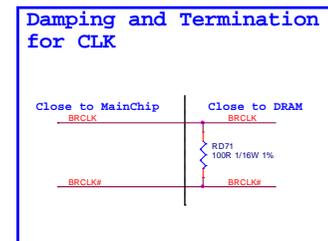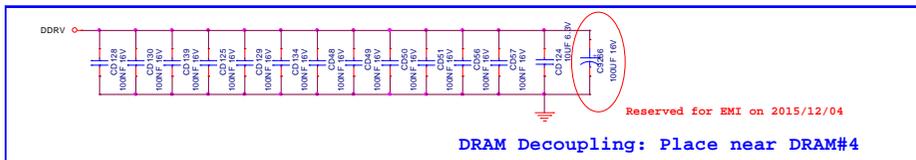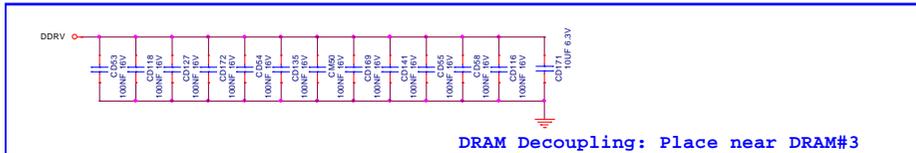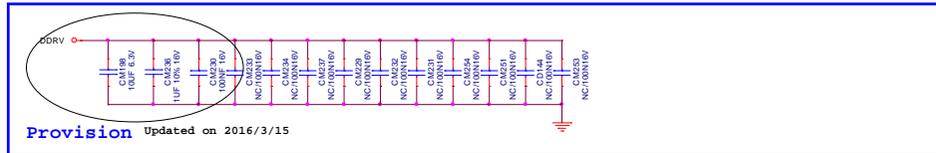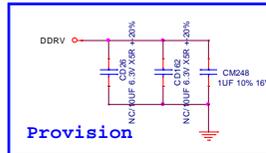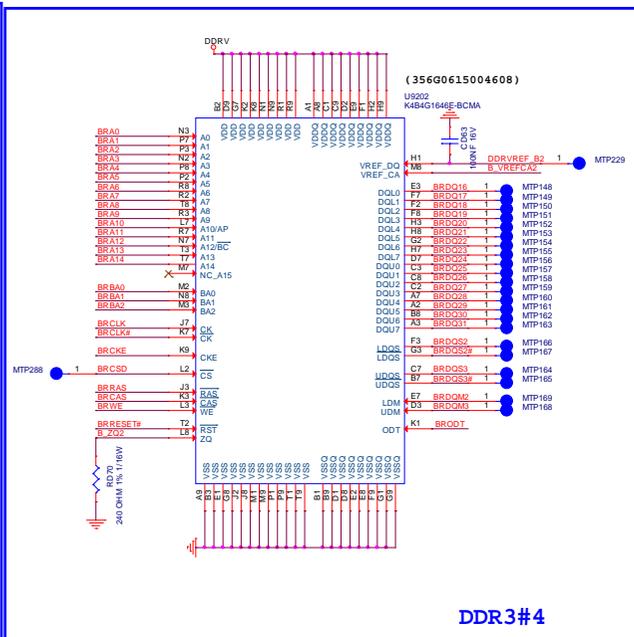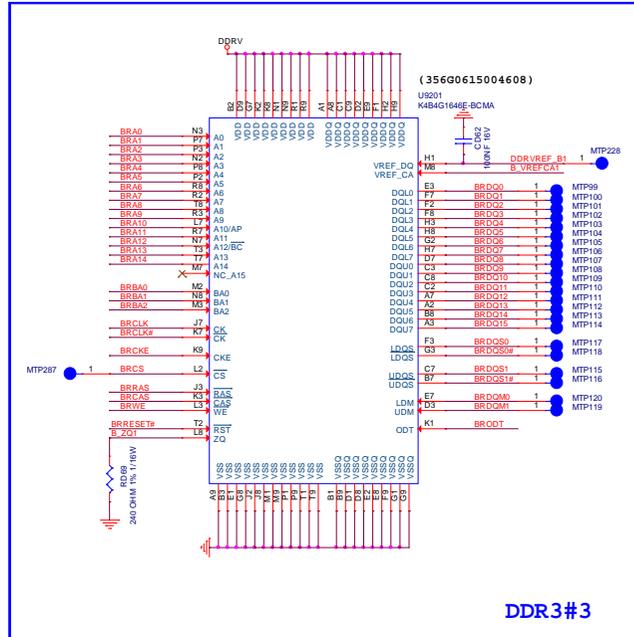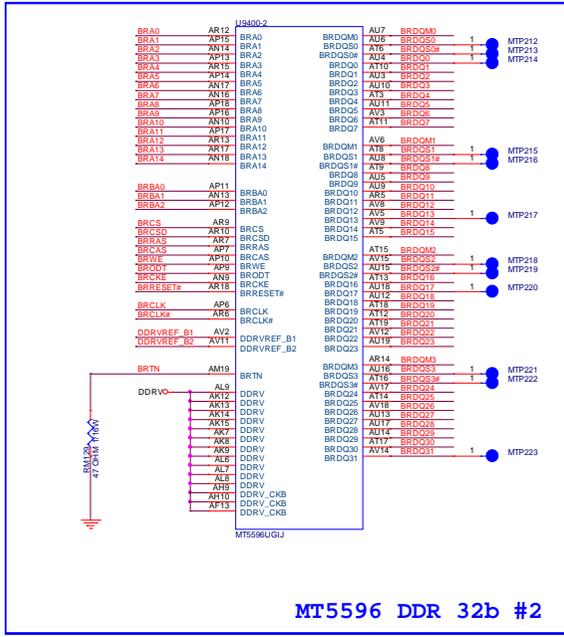










8-6-8 BE-NT7234C-TX-VB1

NT334 V-BY-1 OUTPUT


V-BY-1 OUTPUT to Display

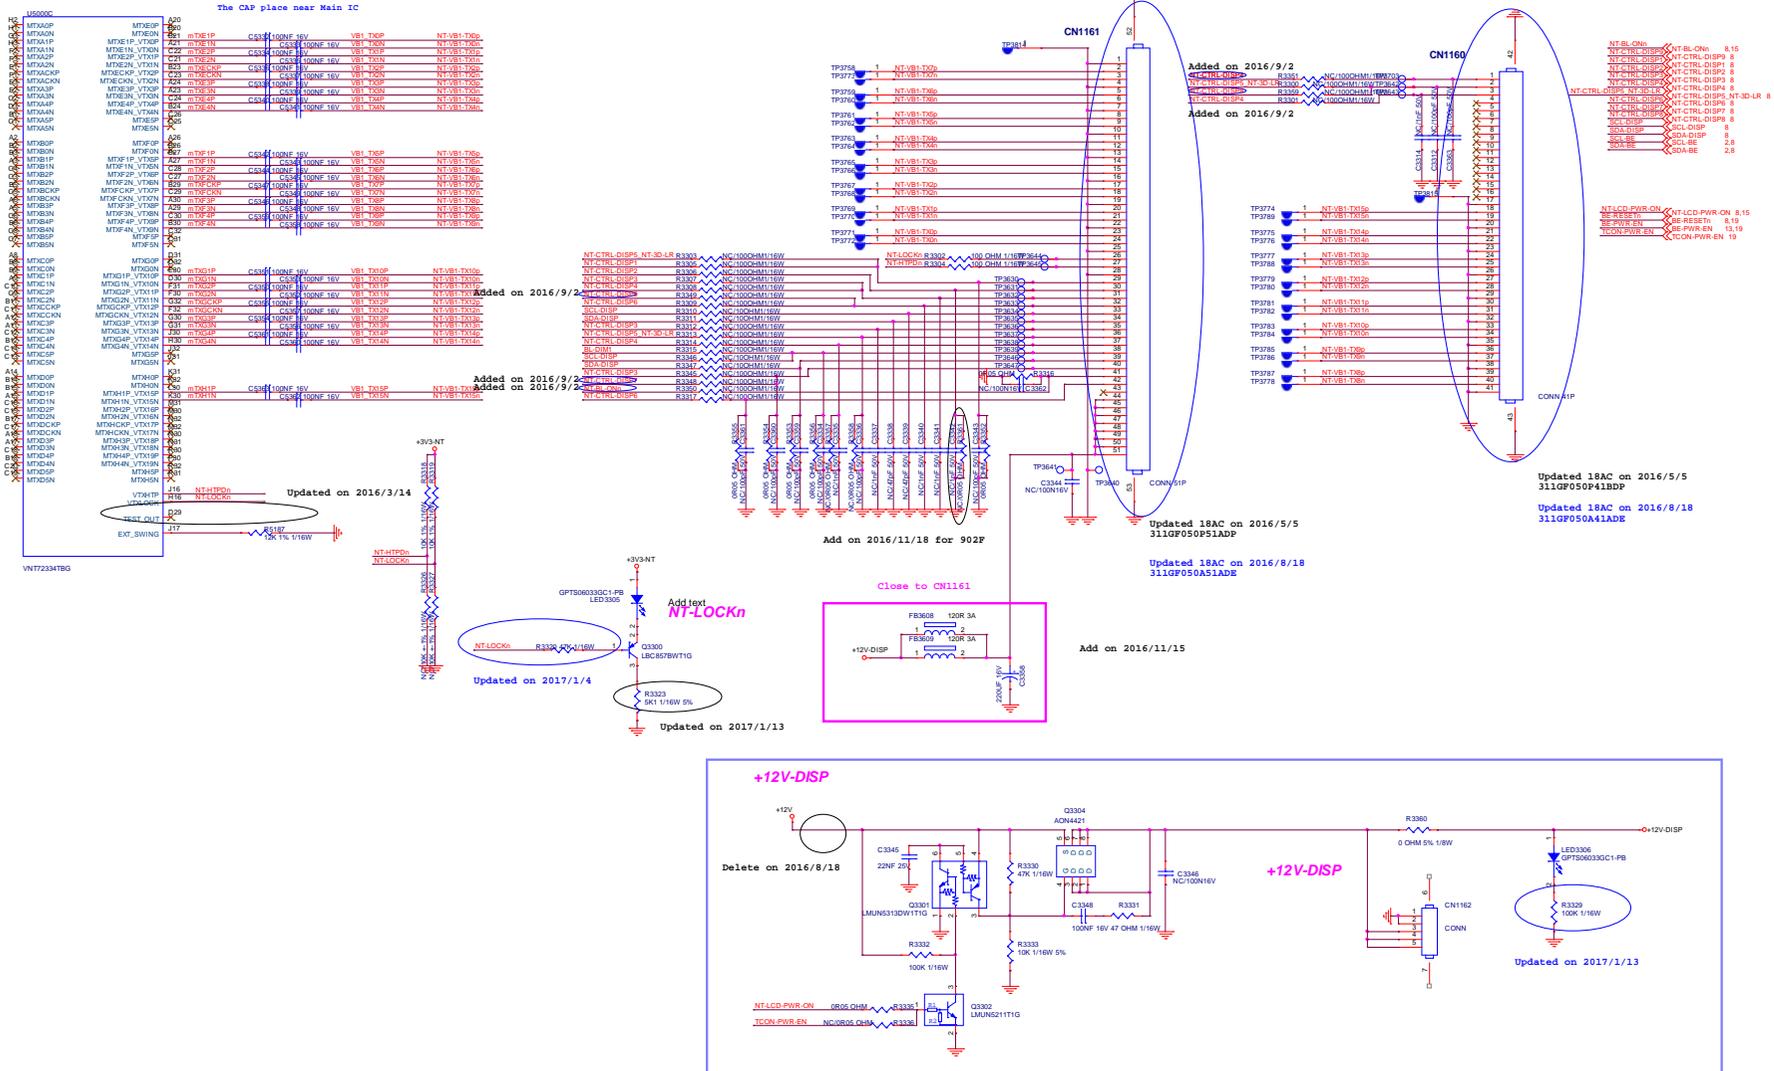










# NT334 GROUND

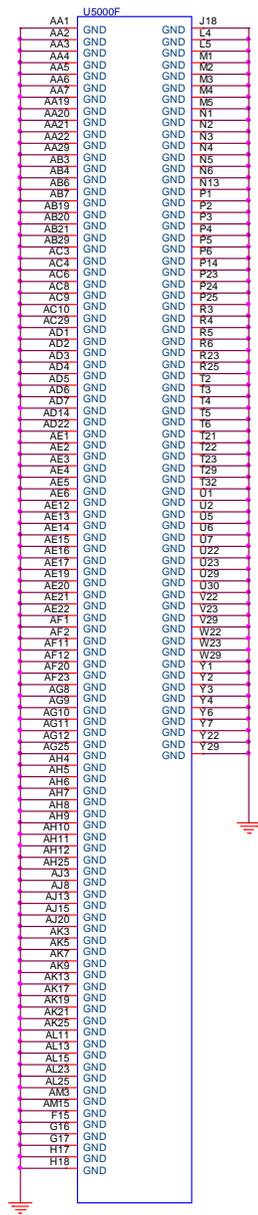




VNT72334TBG

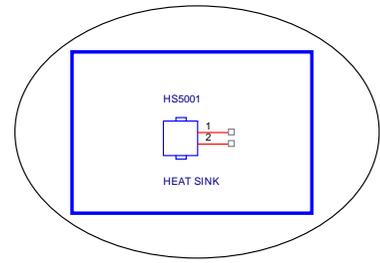

8-6-12 DCDC-Novatek-POWER

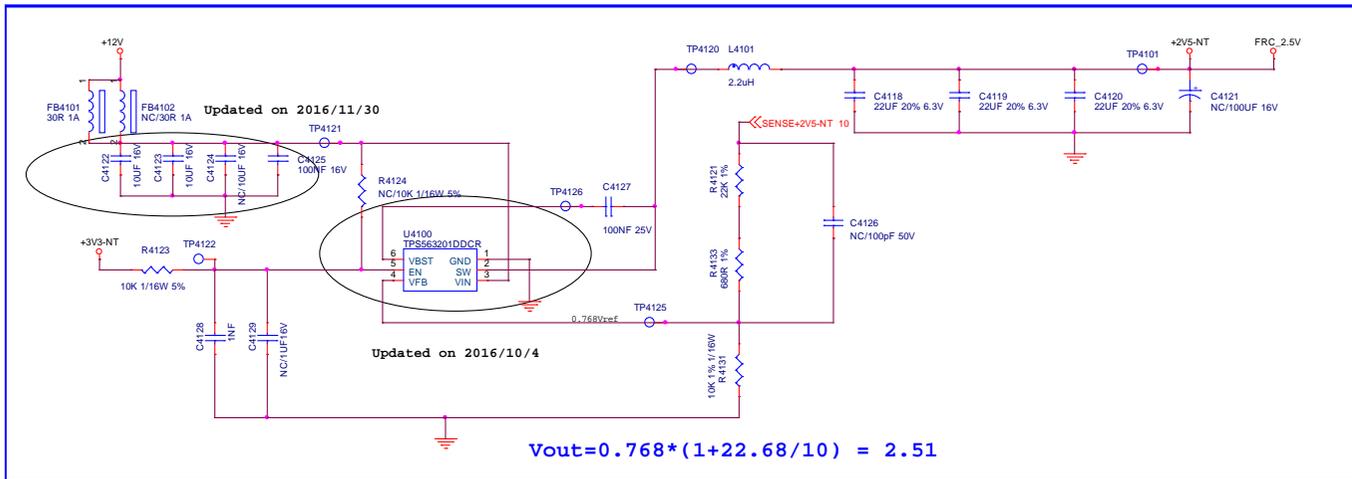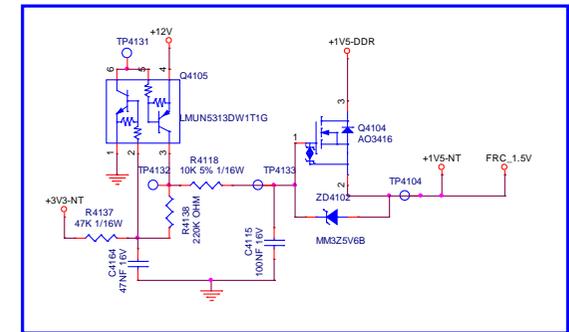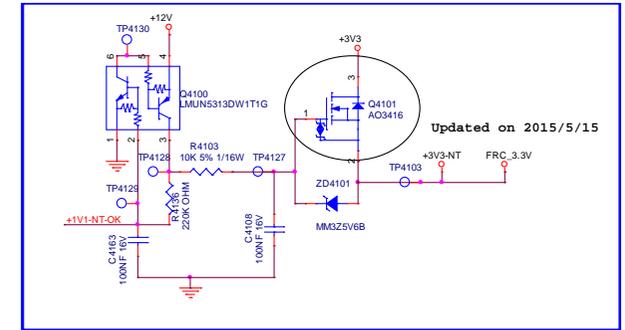
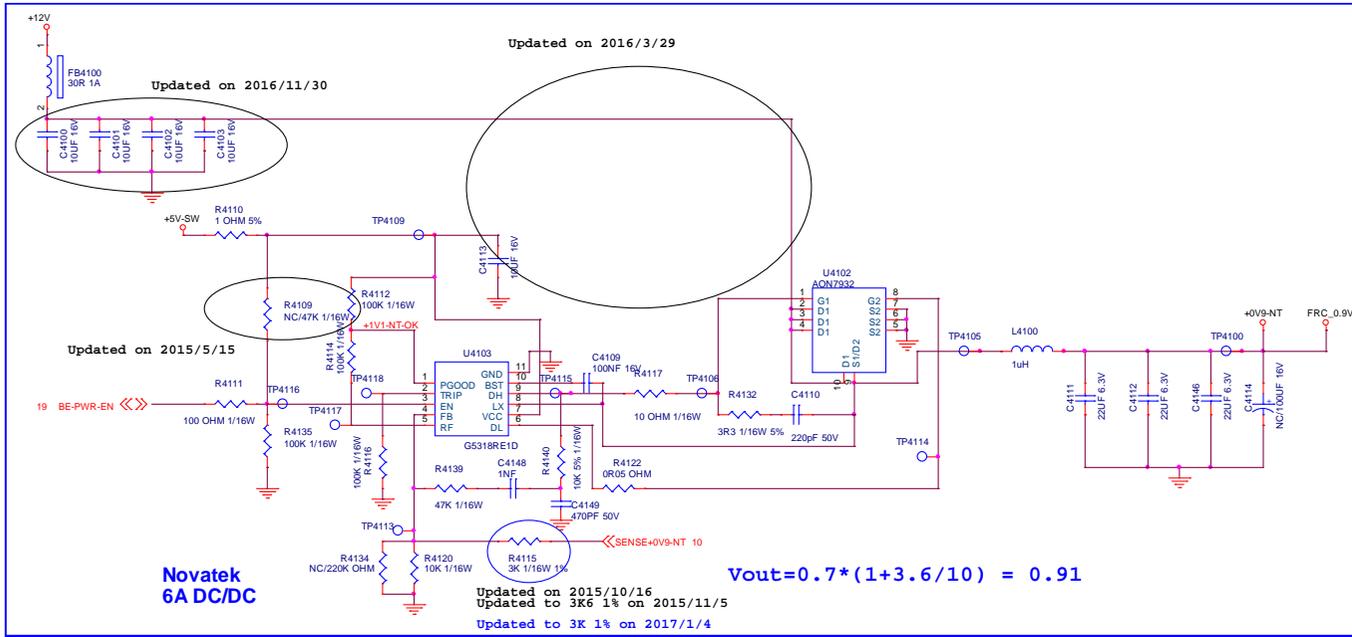


### 8-6-13 DCDC-SOC-VCCCK-DVSS

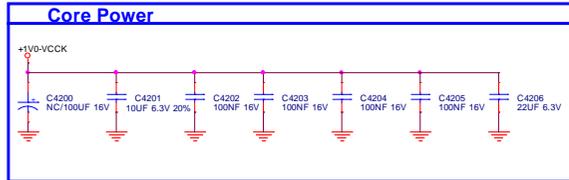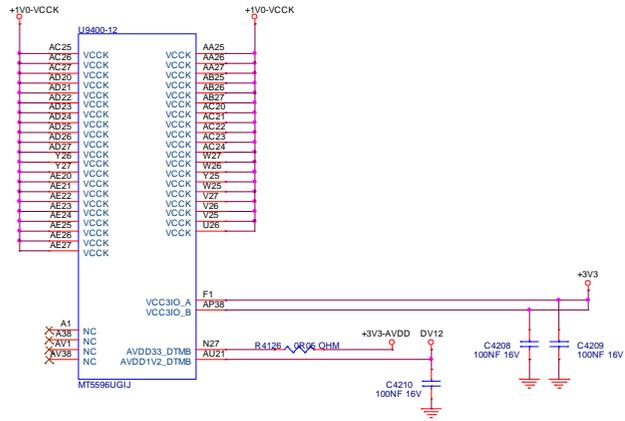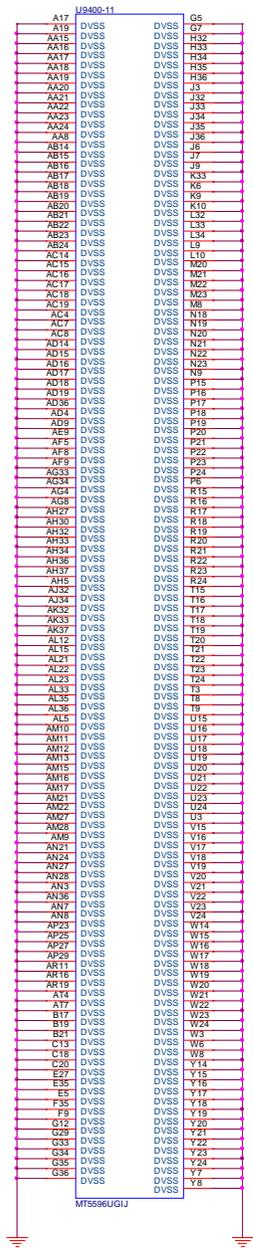





8-6-15 VCCK & DVSS

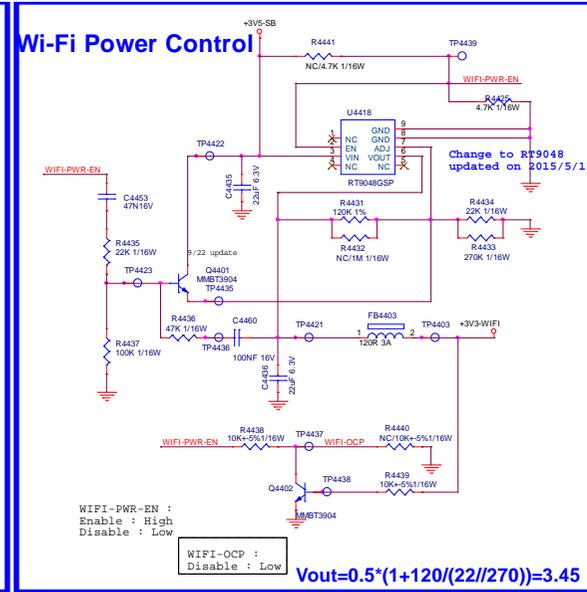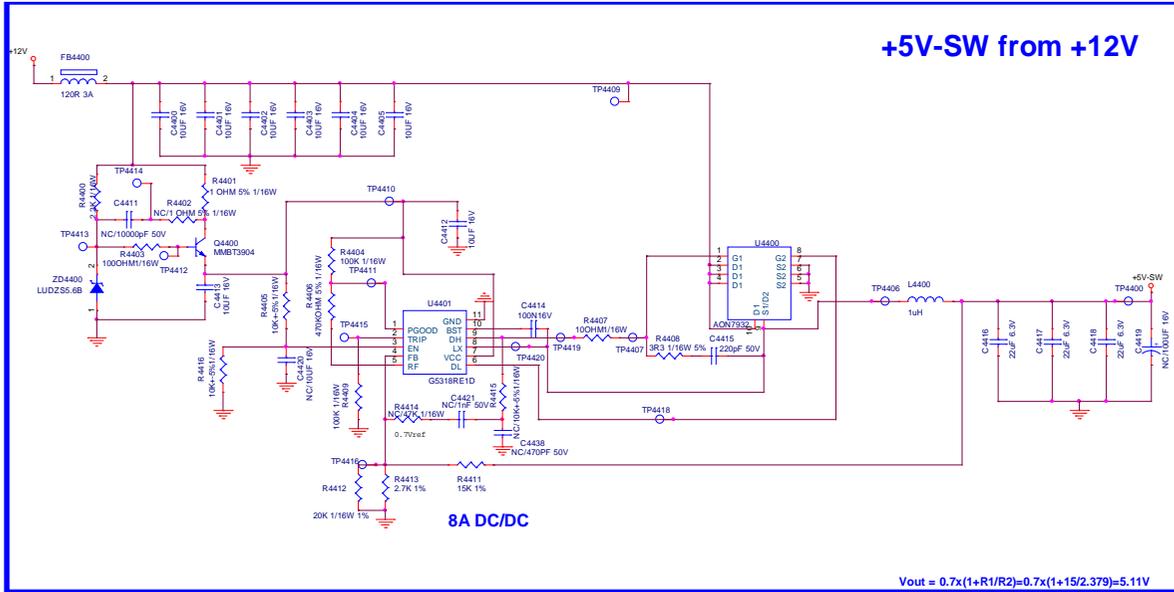

LNB POWER Control		LNB_EN	LNB_EN
6	LNB_EN	LNB_LINEDROP	LNB_LINEDROP
9	LNB_LINEDROP	13V/19V_SW	13V/19V_SW
6	13V/19V_SW	TUNER_LNB	TUNER_LNB
6	TUNER_LNB	DISOCC_OUT	DISOCC_OUT
6	DISOCC_OUT	TUN_LNB	TUN_LNB
19	TUN_LNB		


WIFI POWER Control		WIFIOCP	WIFIOCP
7	WIFIOCP	WIFIPWR-EN	WIFIPWR-EN
19	WIFIPWR-EN		



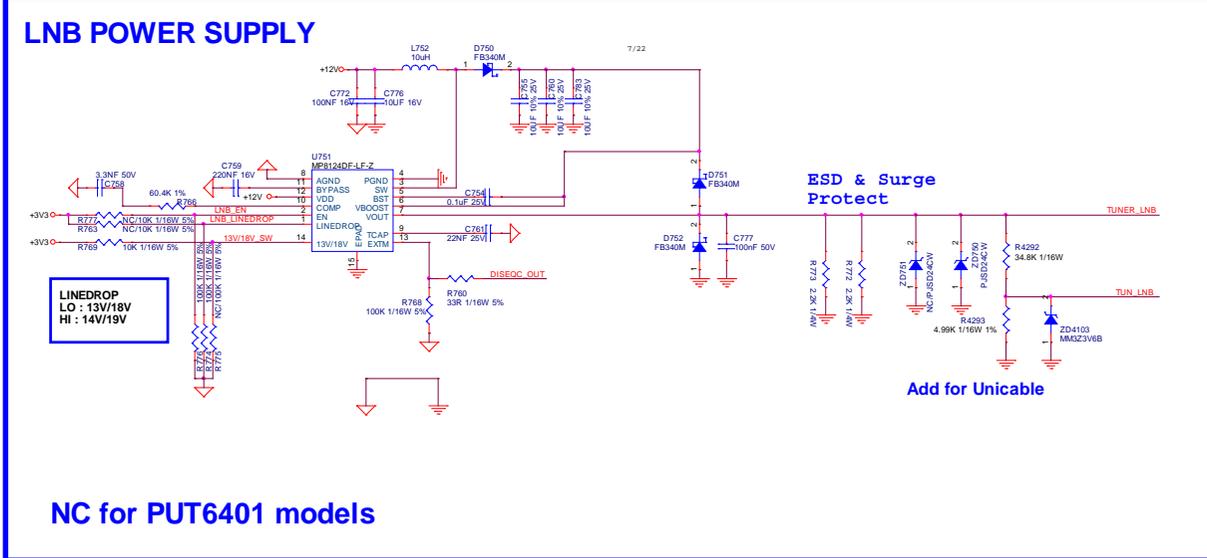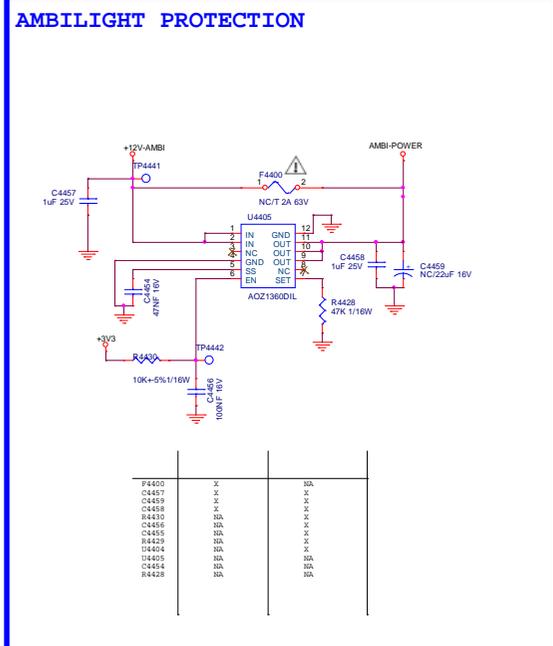



8-6-18 AUDIO-2nd-CLASS-D-AMP

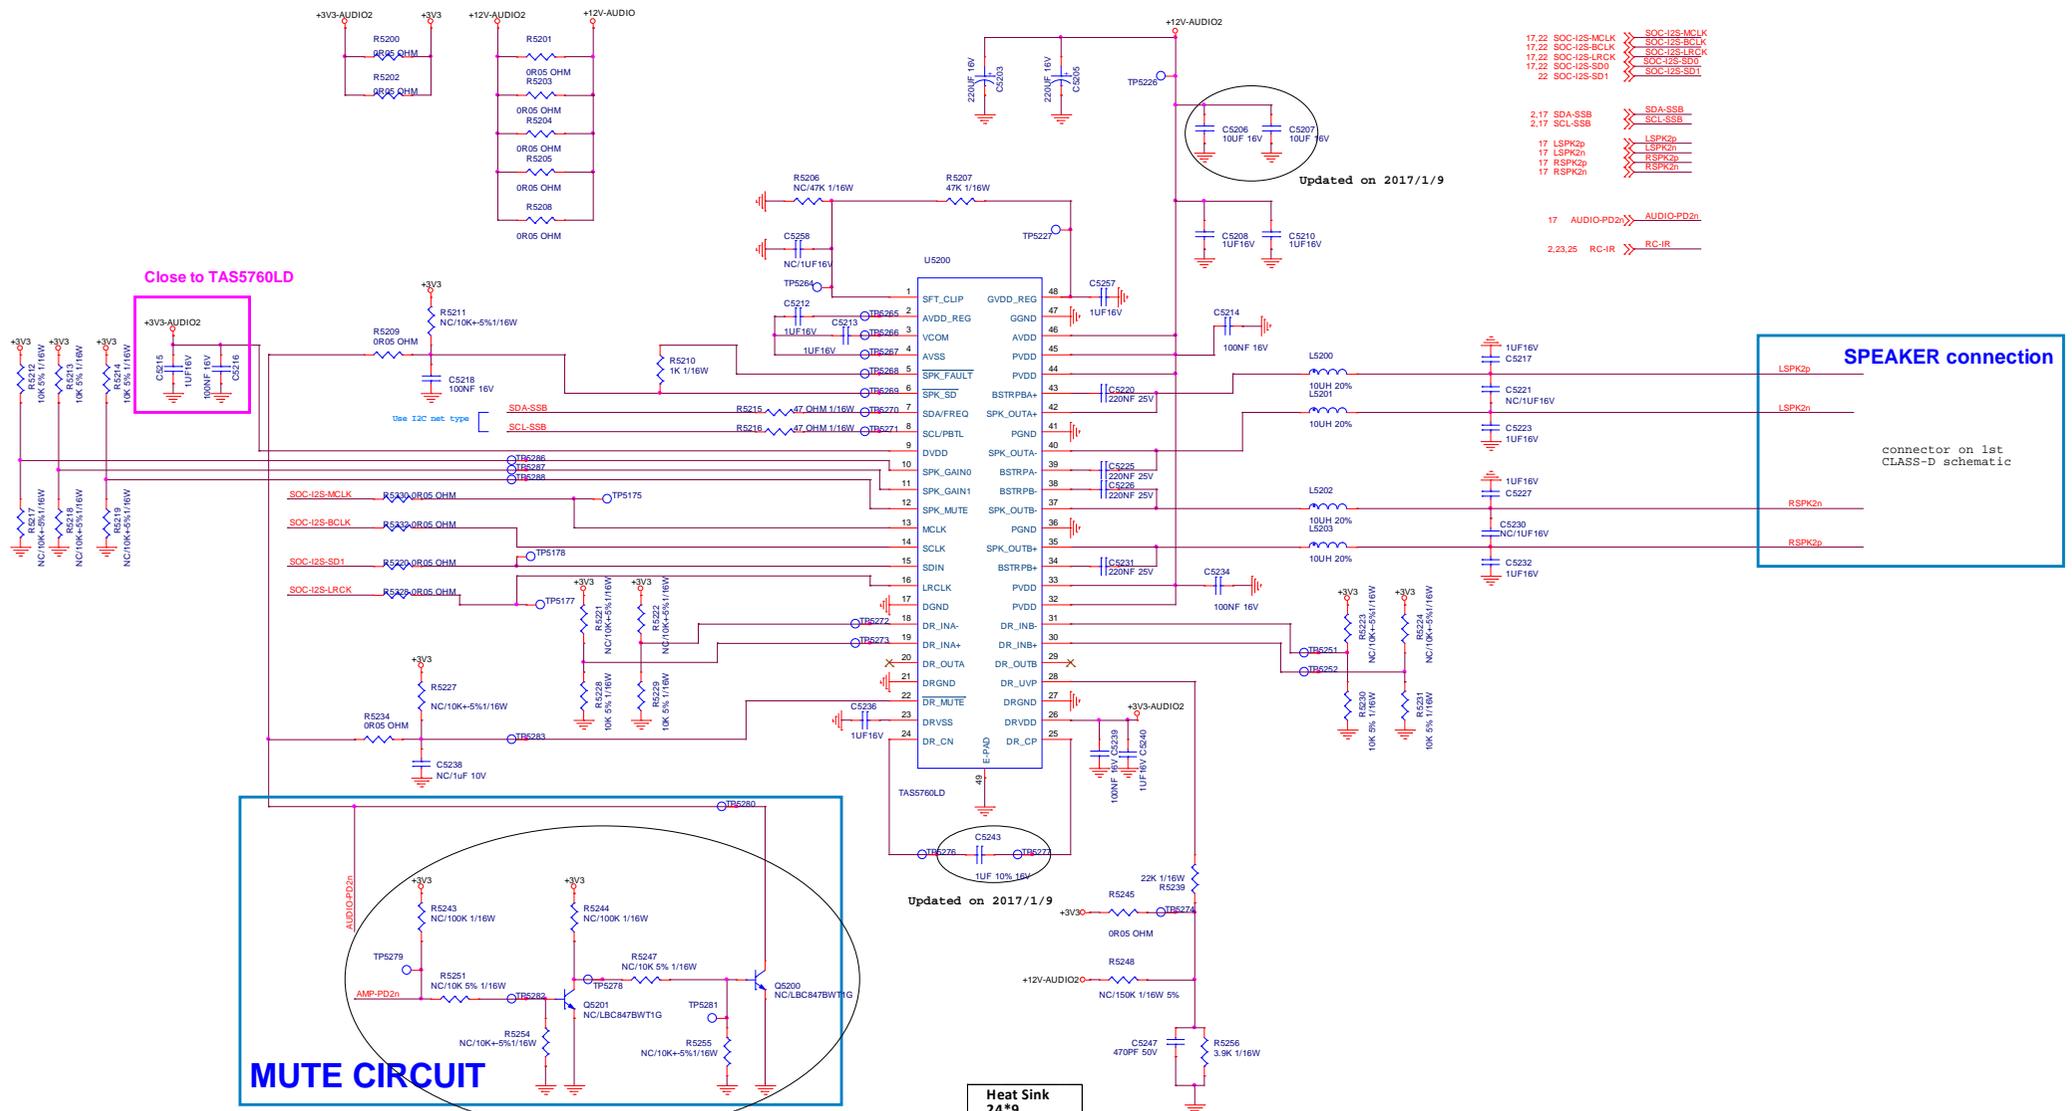

- 17.22 SOC-I2S-MCLK >> SOC-I2S-MCLK
- 17.22 SOC-I2S-BCLK >> SOC-I2S-BCLK
- 17.22 SOC-I2S-LRCLK >> SOC-I2S-LRCLK
- 17.22 SOC-I2S-SD0 >> SOC-I2S-SD0
- 22 SOC-I2S-SD1 >> SOC-I2S-SD1

- 2.17 SDA-SSB >> SDA-SSB
- 2.17 SCL-SSB >> SCL-SSB
- 17 LSPK2p >> LSPK2p
- 17 LSPK2n >> LSPK2n
- 17 RSPK2p >> RSPK2p
- 17 RSPK2n >> RSPK2n

- 17 AUDIO-PD2n >> AUDIO-PD2n
- 2.23,25 RC-IR >> RC-IR

**SPEAKER connection**

LSPK2p

LSPK2n

RSPK2n

RSPK2p

connector on 1st CLASS-D schematic


**MUTE CIRCUIT**

AMP-PD2n

Q5200 NC/LBC847BWT1G

Q5201 NC/LBC847BWT1G

Set NC on 2017/01/04

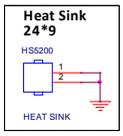

Add on 2016/9/13




P90T006101






# 8-6-21 HDMI-SOC-ARC

Clearance = 2 x tracewidth for all SCL and SDA

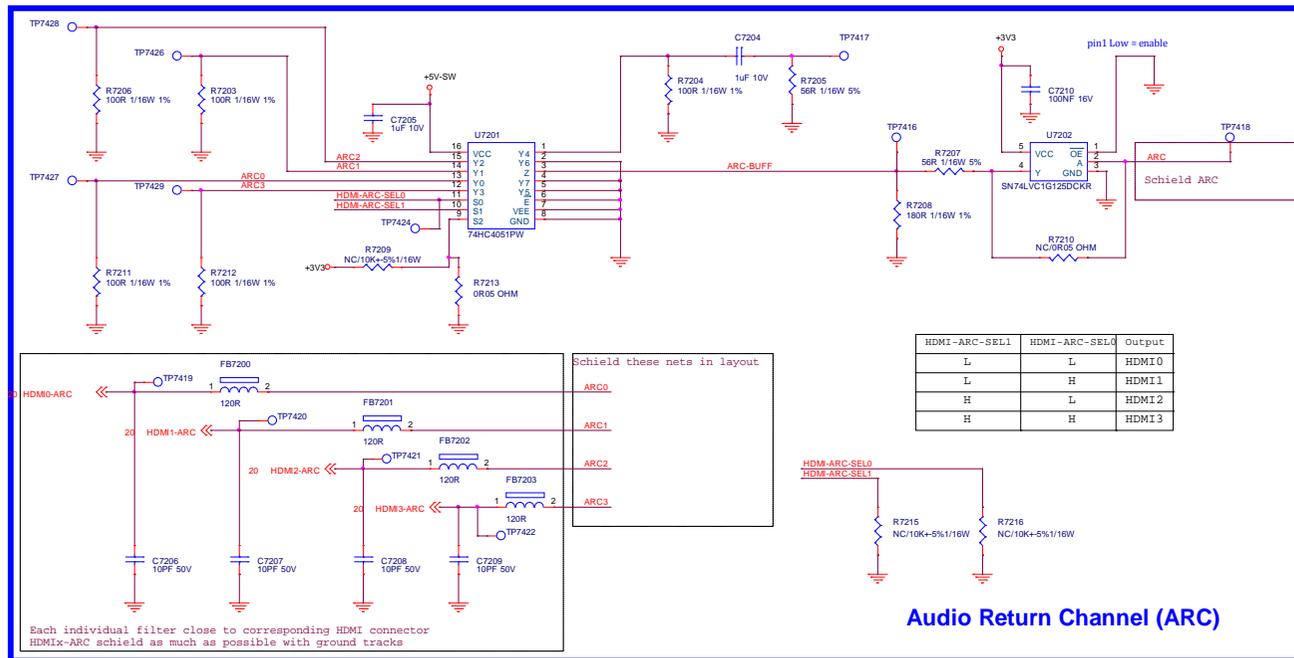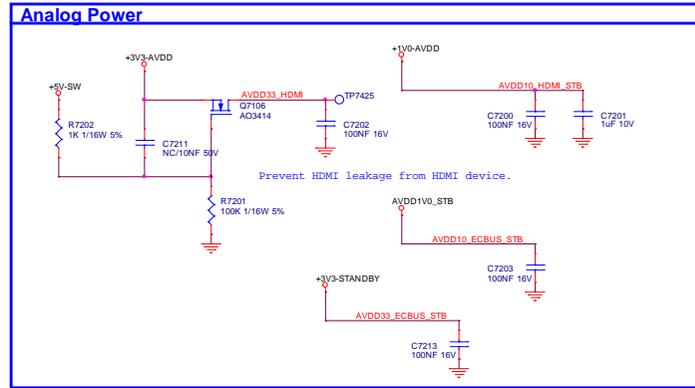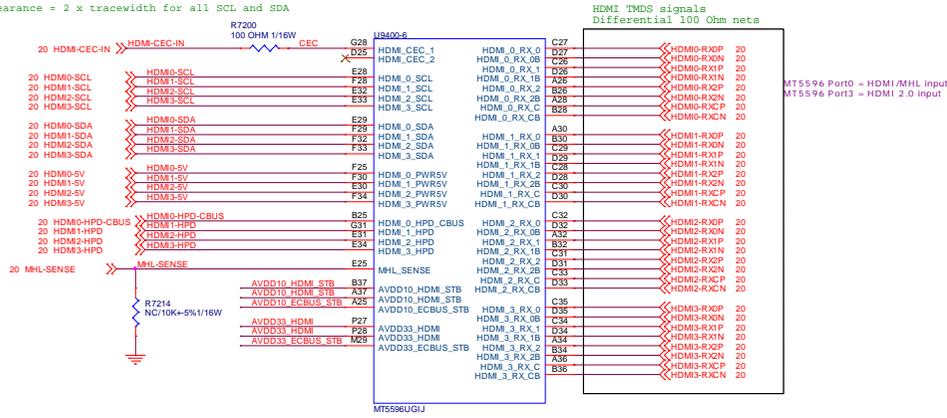



# 8-6-23 CTRL-CONNECTORS


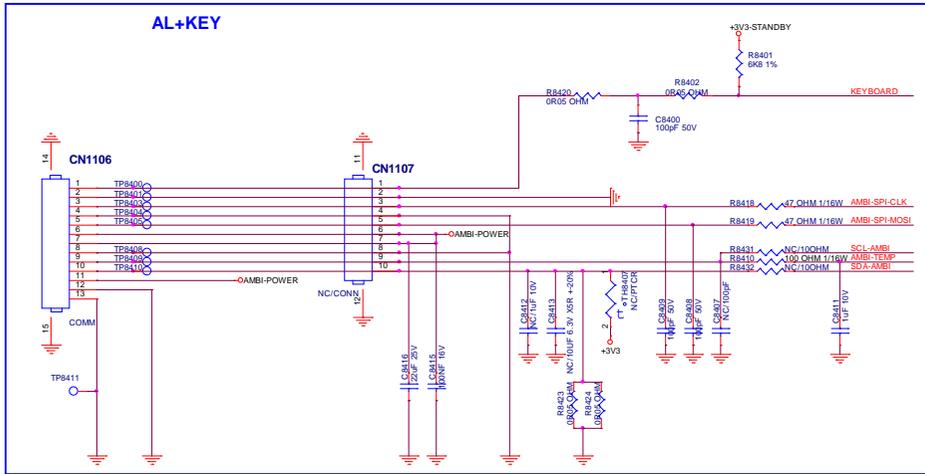


- AMBI-SPI-CLK <<> AMBI-SPI-CLK 8
- AMBI-SPI-MOSI <<> AMBI-SPI-MOSI 8
- AMBI-TEMP <<> AMBI-TEMP 19
- SCL-AMBI <<> SCL-AMBI 8
- SDA-AMBI <<> SDA-AMBI 8

- KEYBOARD <<> KEYBOARD 19
- RC-IR <<> RC-IR 2,25
- RC-HTV <<> RC-HTV 25

- SDA-SET <<> SDA-SET 2
- SCL-SET <<> SCL-SET 2

- LED1 <<> LED1 19
- LED2 <<> LED2 19

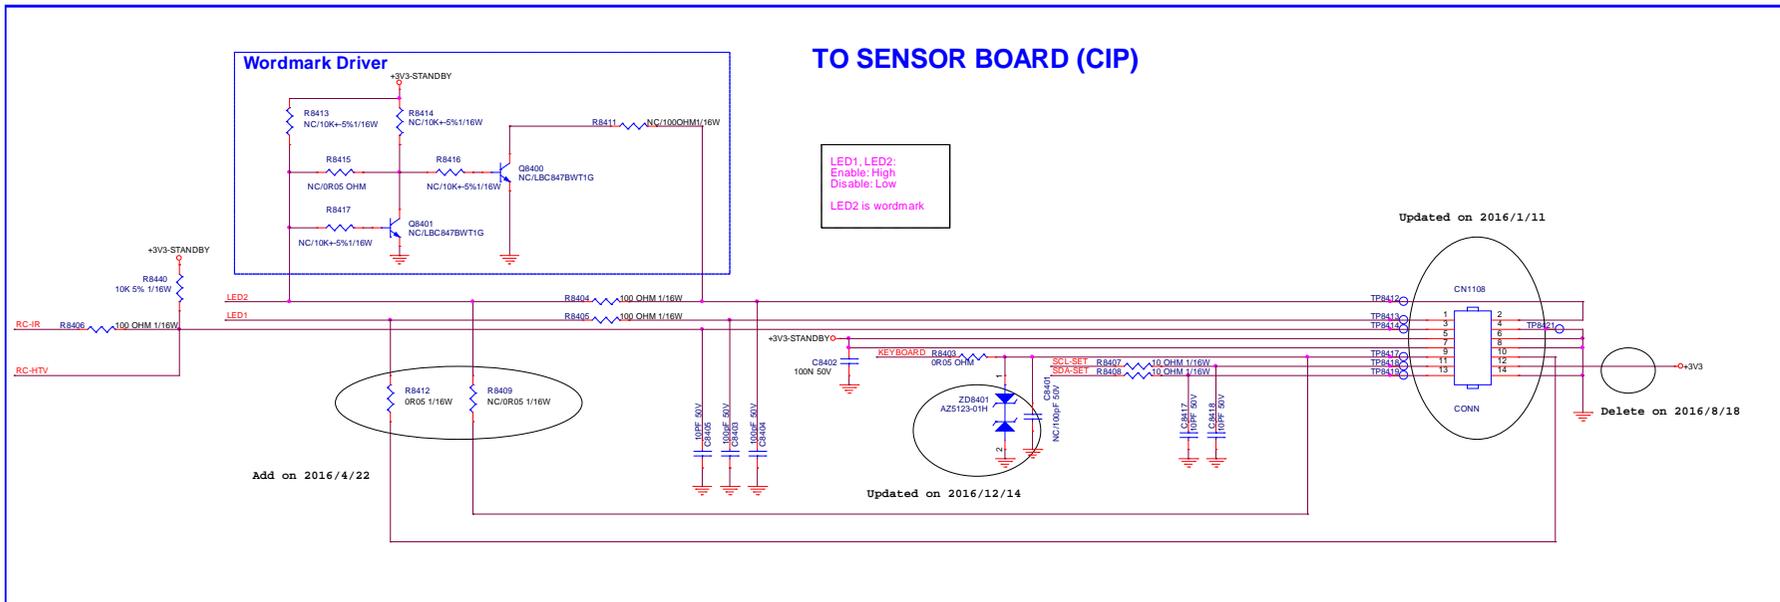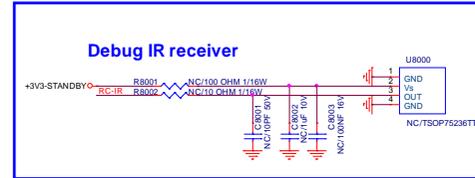

LED1: LED2:  
 Enable: High  
 Disable: Low  
 LED2 is wordmark

Updated on 2016/1/11

Add on 2016/4/22

Updated on 2016/12/14





Delete on 2016/8/18









## 8.7J 715G8694 IR/LED Panel

### 8-7-1 LED&IR&Light sensor

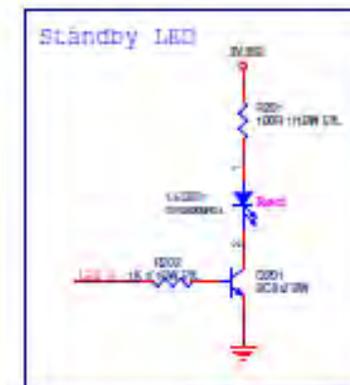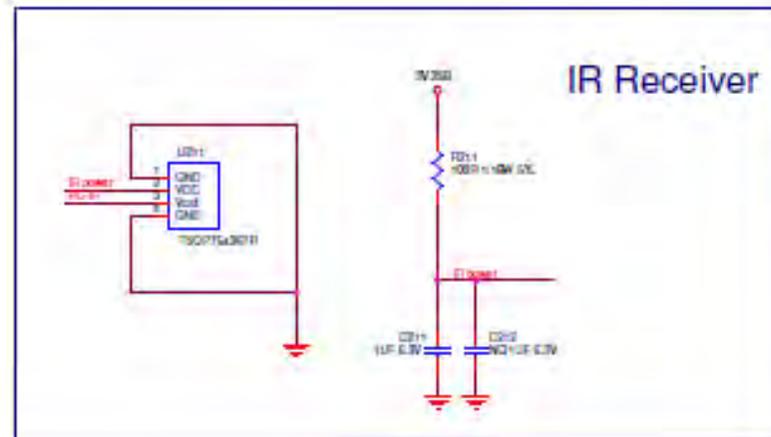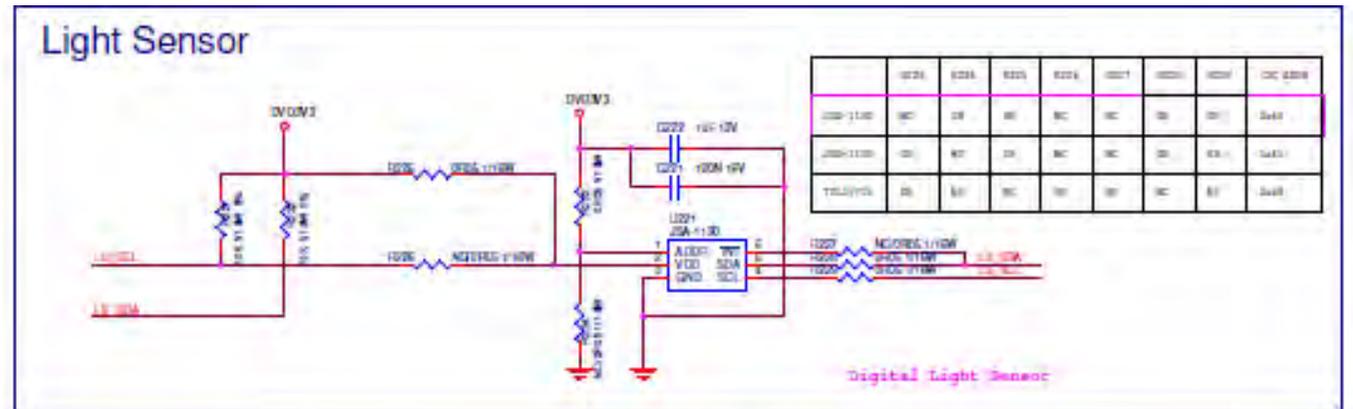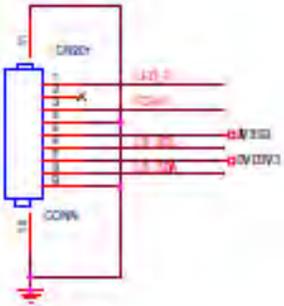



## 8.8 J 715G8623 IR/LED Panel

### 8-8-1 IR

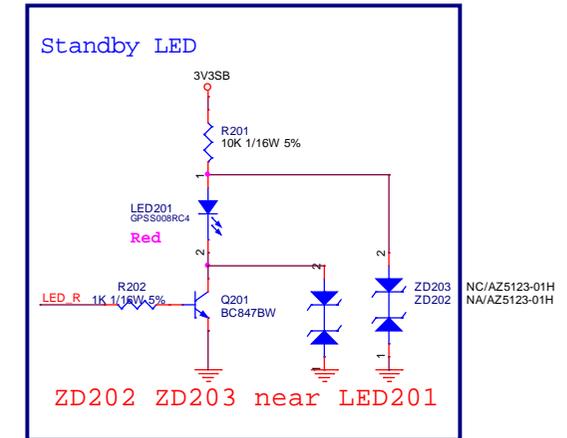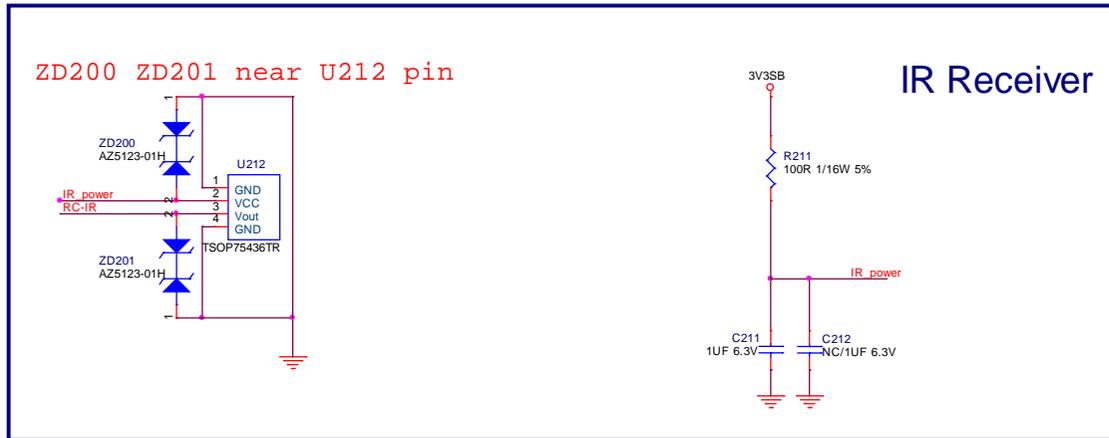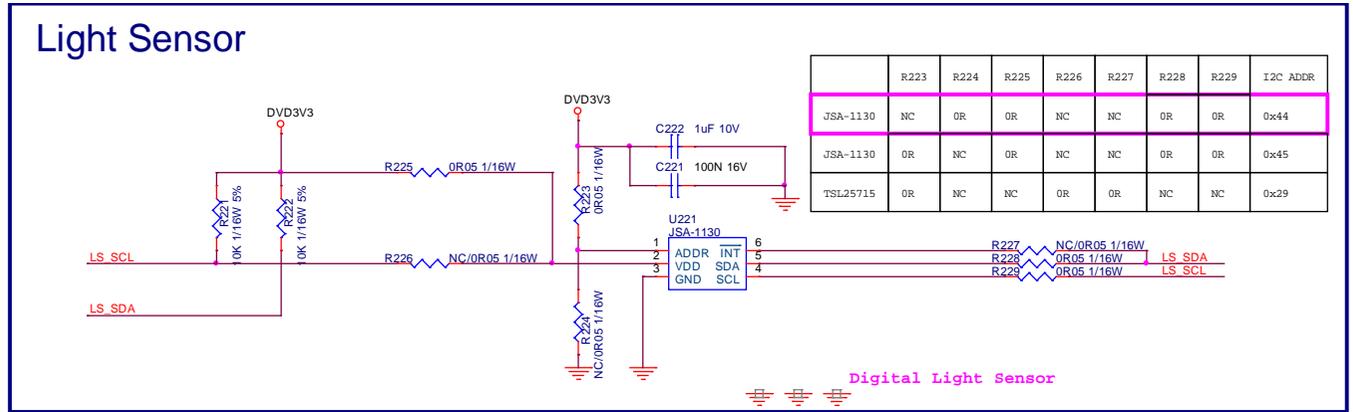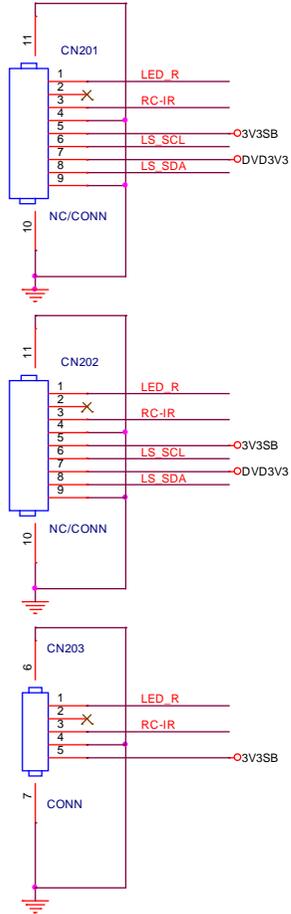

## 8.9 E 715G8555 Keyboard control panel

### 8-9-1 Key

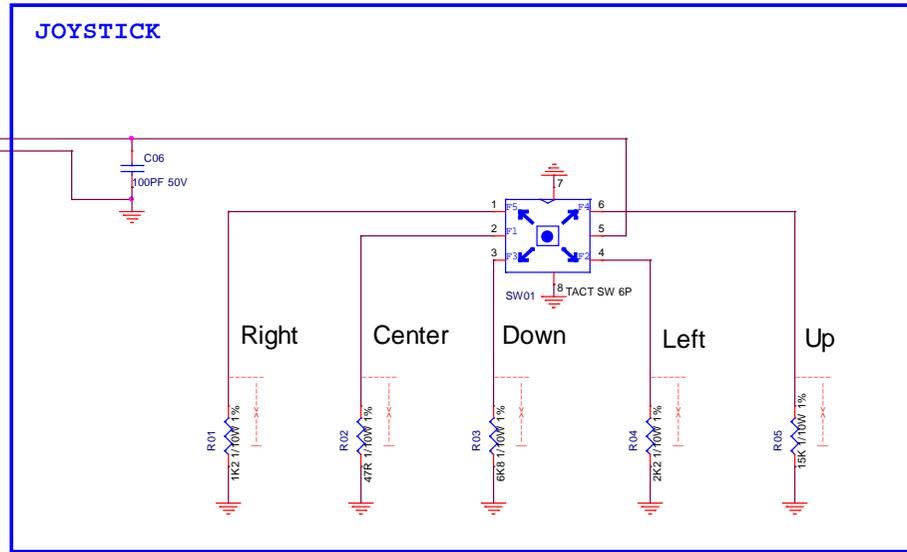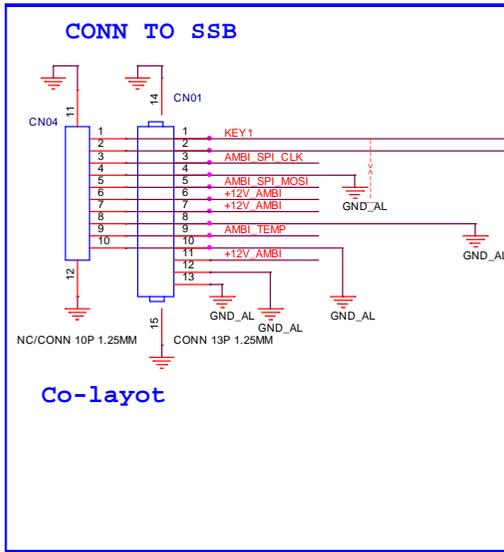

### Joystick key define


Direction	switch	Key function	Resistance	Voltage	Range
Center	2-5 short	Menu	0R	0V	0.0 to 0.22 V
Right	1-5 short	CH+	1K2	0.5V	0.39 to 0.60 V
Left	4-5 short	CH-	2K2	0.81V	0.67 to 0.95 V
Down	3-5 short	VOL-	6K8	1.65V	1.41 to 1.87 V
Up	6-5 short	VOL+	15K	2.27V	1.93 to 2.58 V
NA	NA	No function	NA	3.3V	3.135 to 3.465V

### Joystick circuit diagram

	pin1	pin2	pin3	pin4	pin5	pin6
F1		○			○	
F2				○	○	
F3			○		○	
F4					○	○
F5	○					○


### Joystick diversity for AL

	CN03	C07	R9	R10
AL2	N	N	N	N
AL3/AL4	Y	Y	Y	Y

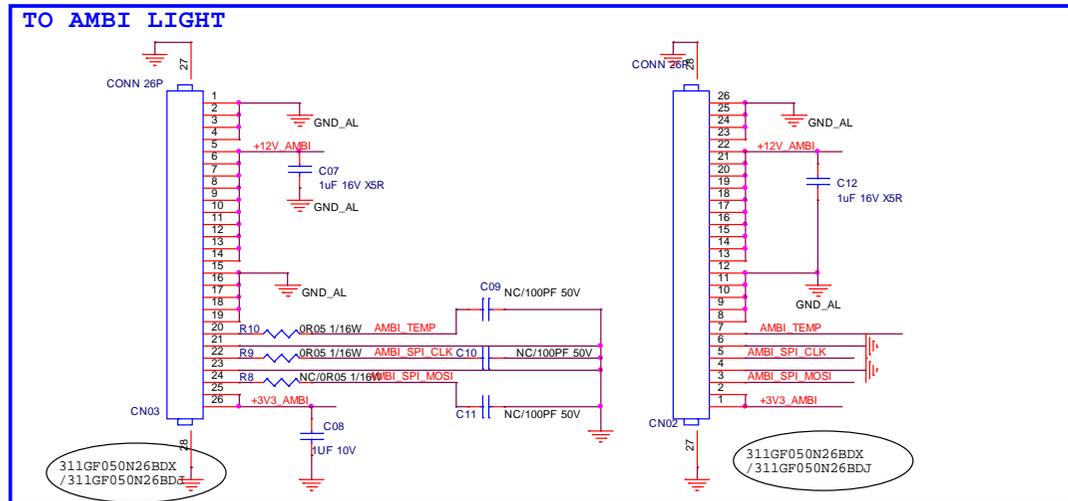


## 8.10 E 715G7088 Keyboard control panel

### 8-10-1 Key

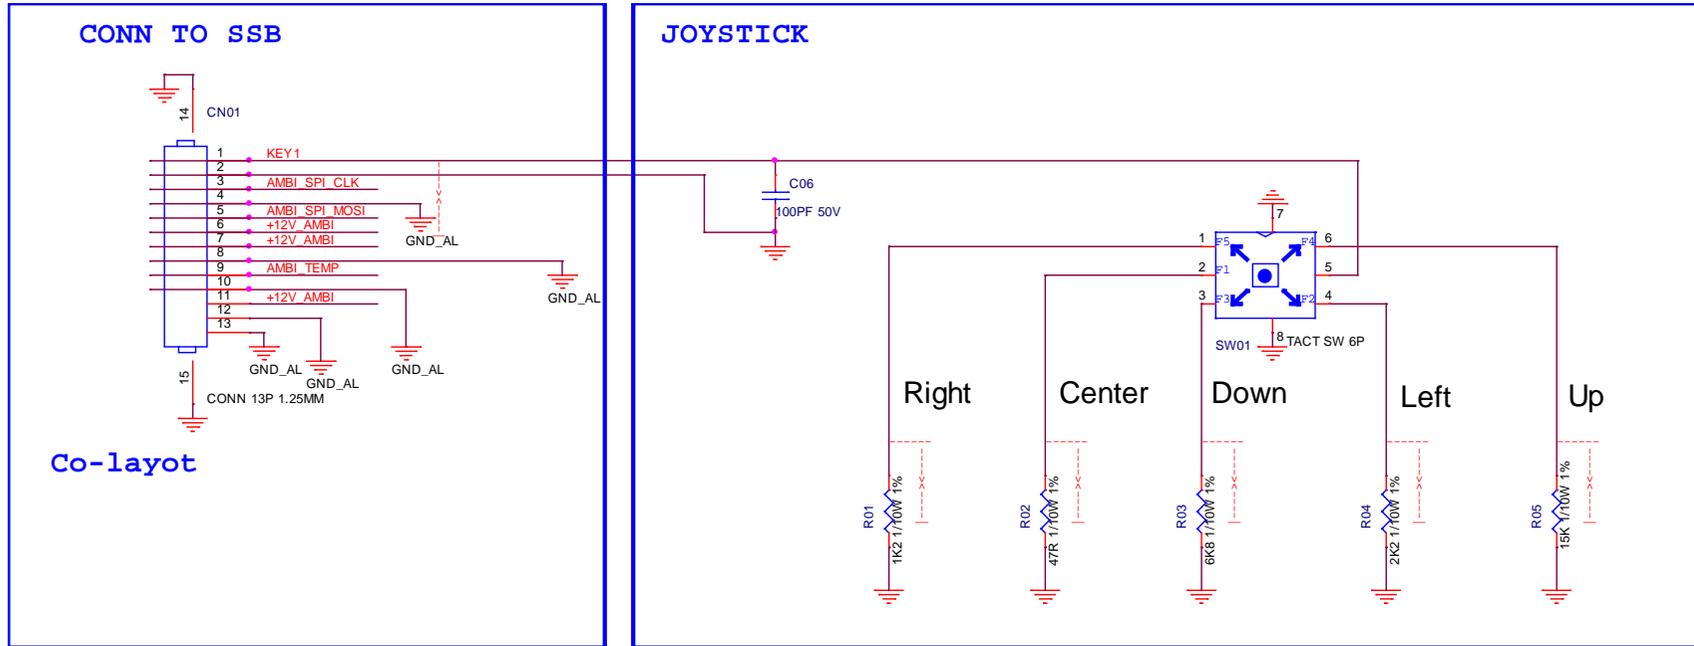


### TO AMBI LIGHT

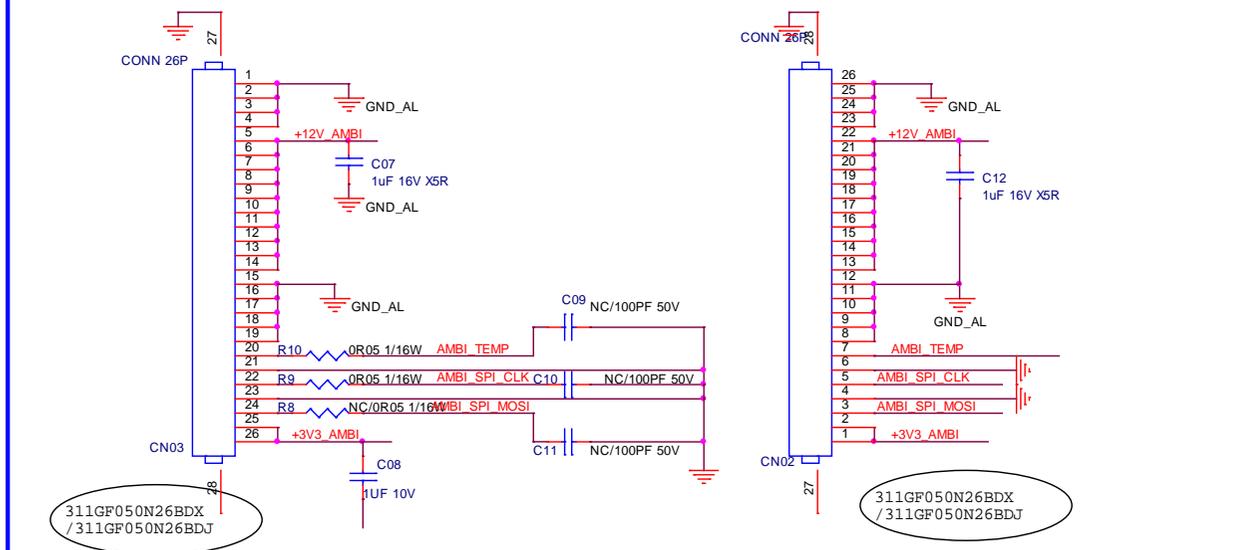


# 9. Styling Sheets

6412 series 43"

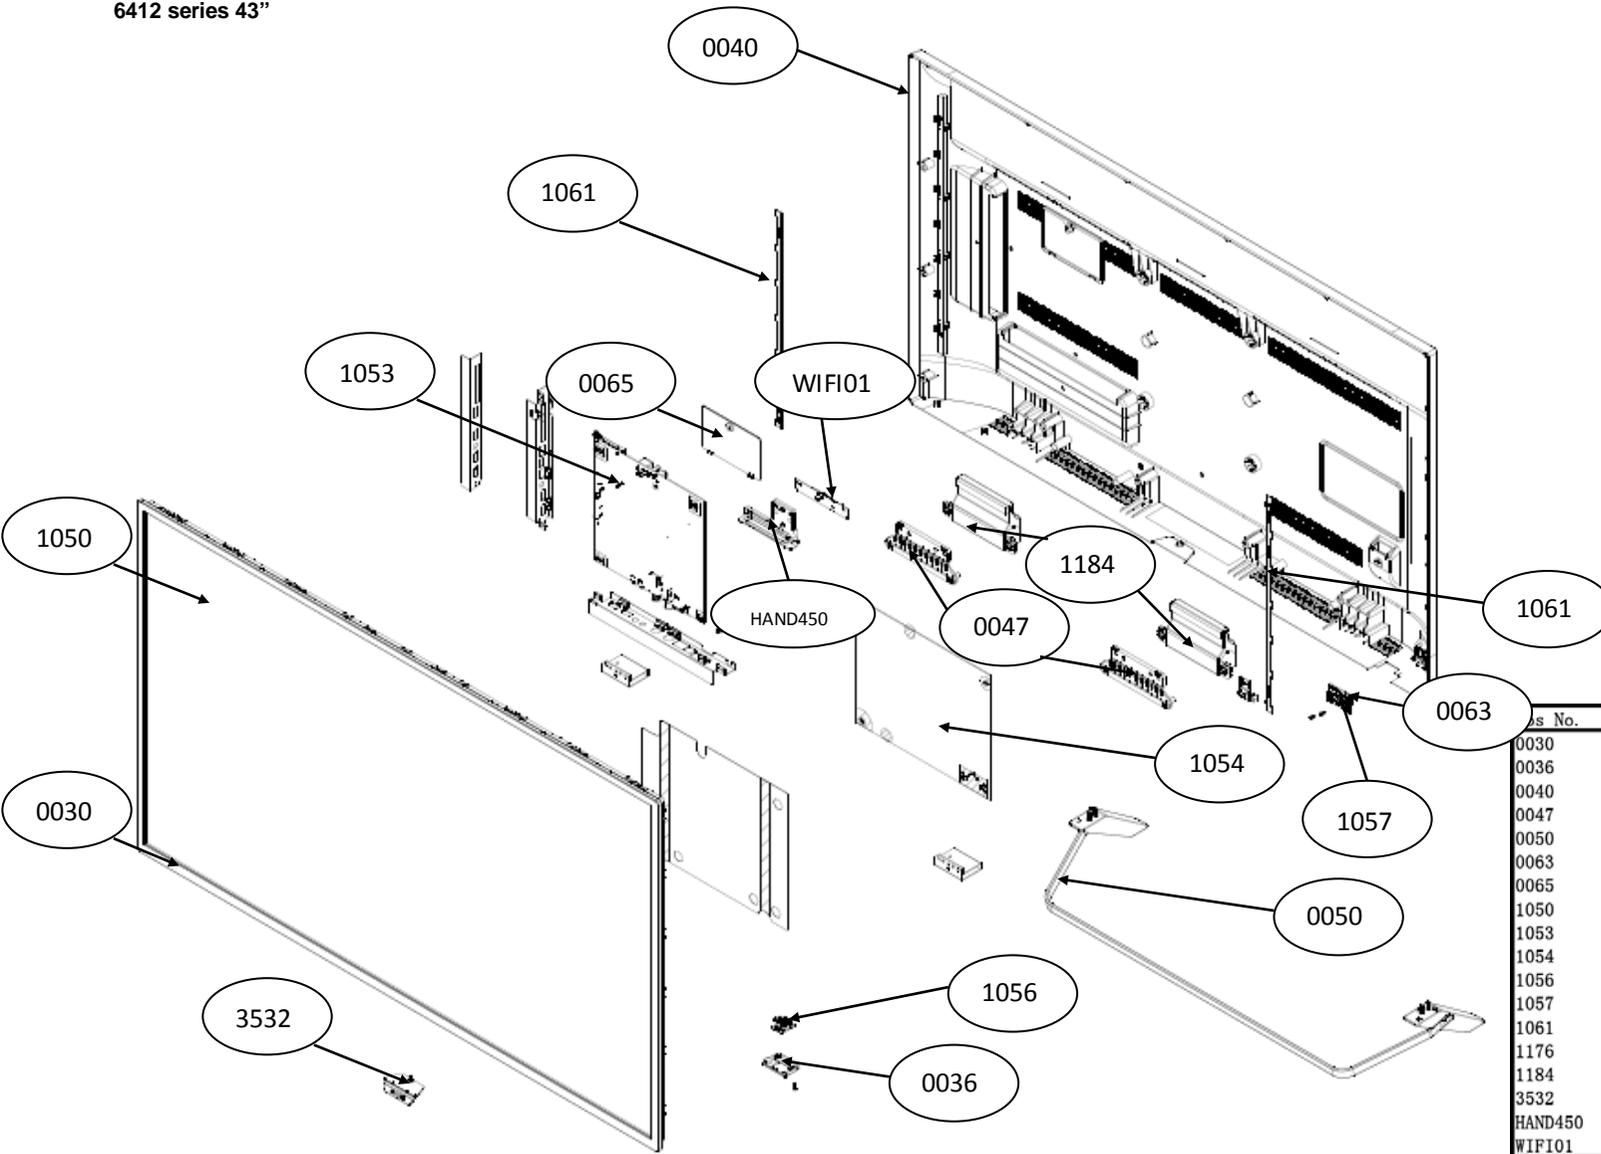


Part No.	Description	Remarks
0030	Bezel	
0036	LENS	
0040	Rear cover	
0047	HDD Holder	
0050	Stand	
0063	KEY_FUNCTION	
0065	COVER_CLOCK_REAR	
1050	Display panel	
1053	Panel SSB	
1054	Power Supply Unit	
1056	IR/LED panel	
1057	KEY BOARD ASSY	
1061	AMBILIGHT ASSY	
1176	Remote control	Not displayed
1184	Speakers	
3532	DECO_LOGO	
HAND450	Case_holder	
WIFI01	WIFI/BT USB	

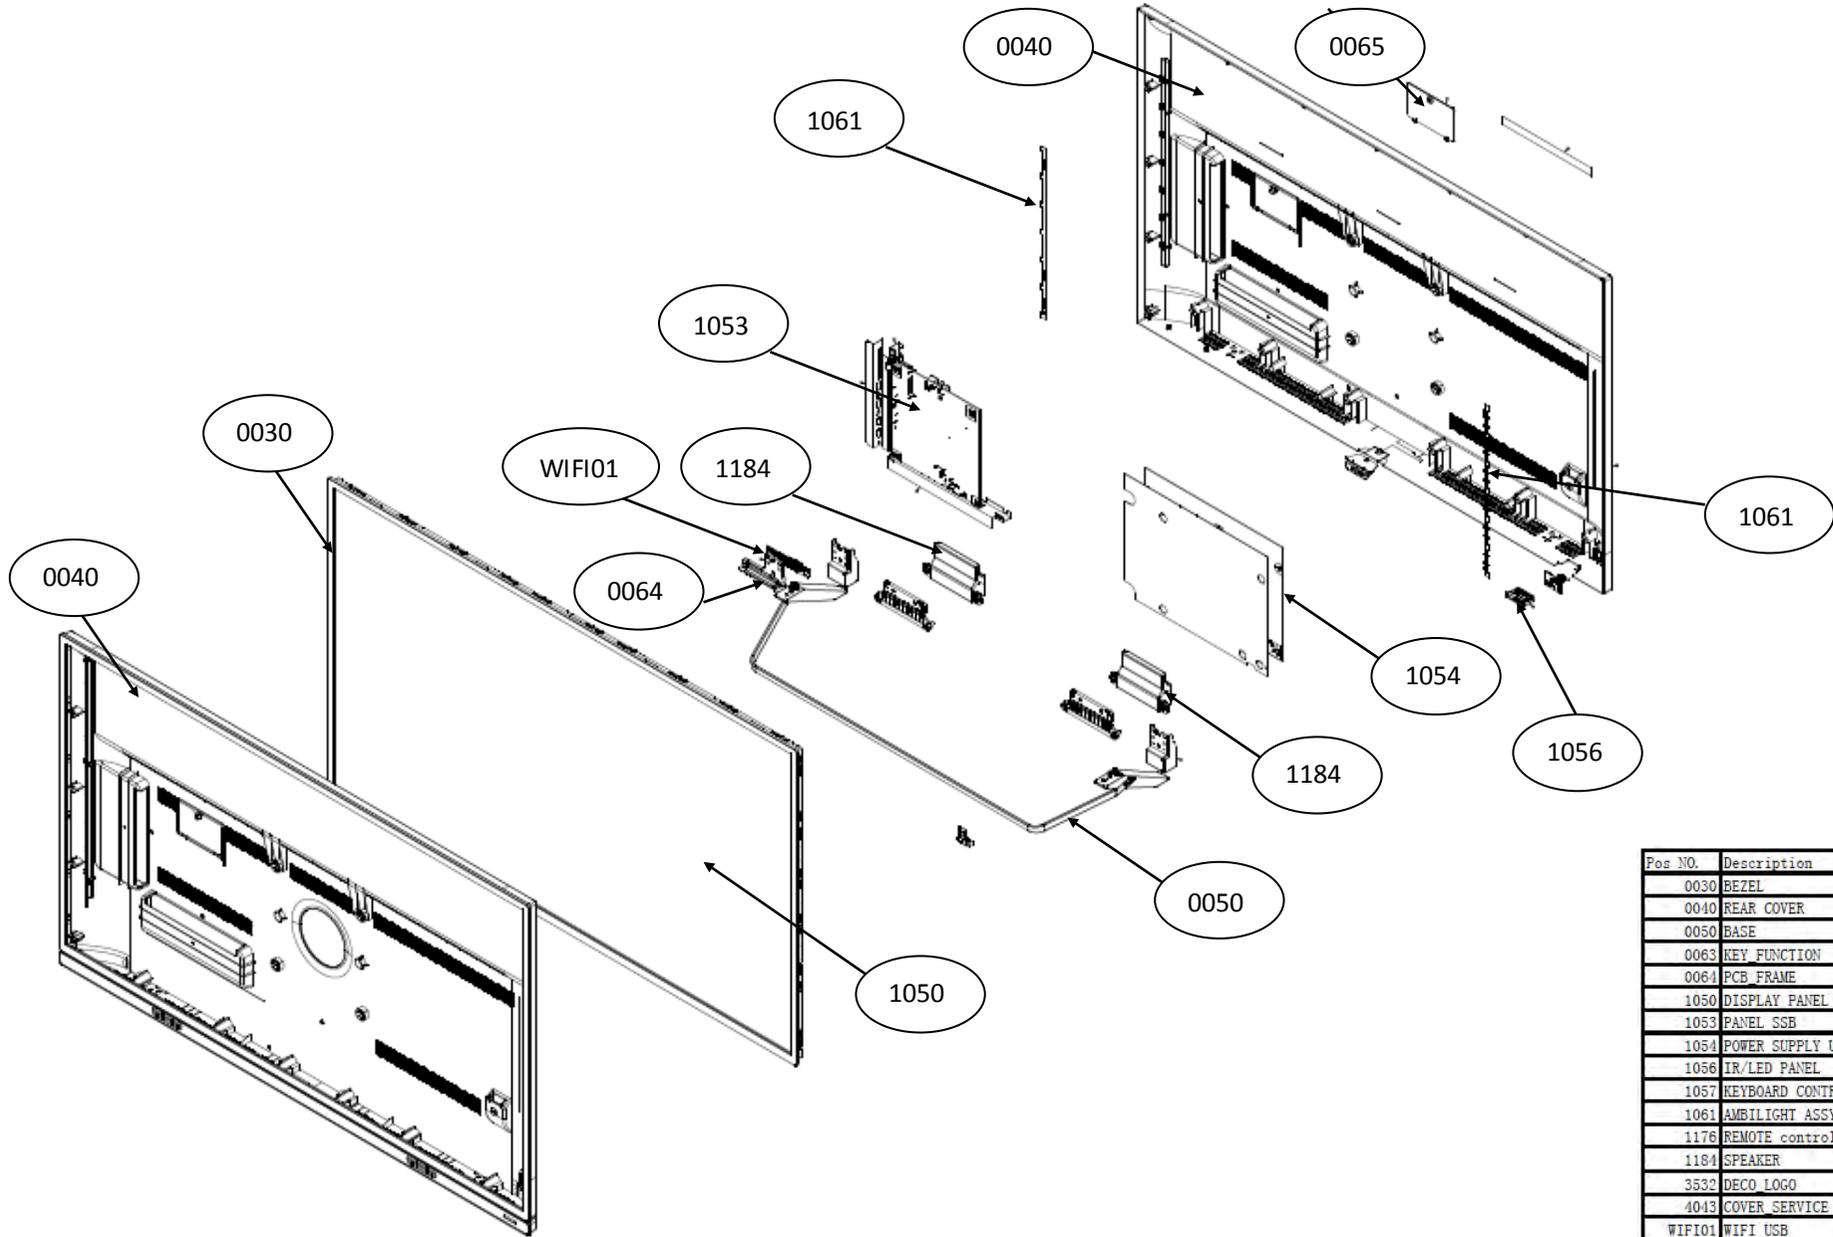


Pos NO.	Description	Remark
0030	BEZEL	
0040	REAR COVER	
0050	BASE	
0063	KEY_FUNCTION	
0064	PCB_FRAME	
1050	DISPLAY_PANEL	
1053	PANEL_SSB	
1054	POWER_SUPPLY_UNIT	
1056	IR/LED_PANEL	
1057	KEYBOARD_CONTROL_PANEL	
1061	AMBILIGHT_ASSY(LED_6)	
1176	REMOTE_control	Not displayed
1184	SPEAKER	
3532	DECO_LOGO	
4043	COVER_SERVICE	
WIFI01	WIFI_USB	

6412 series 65"

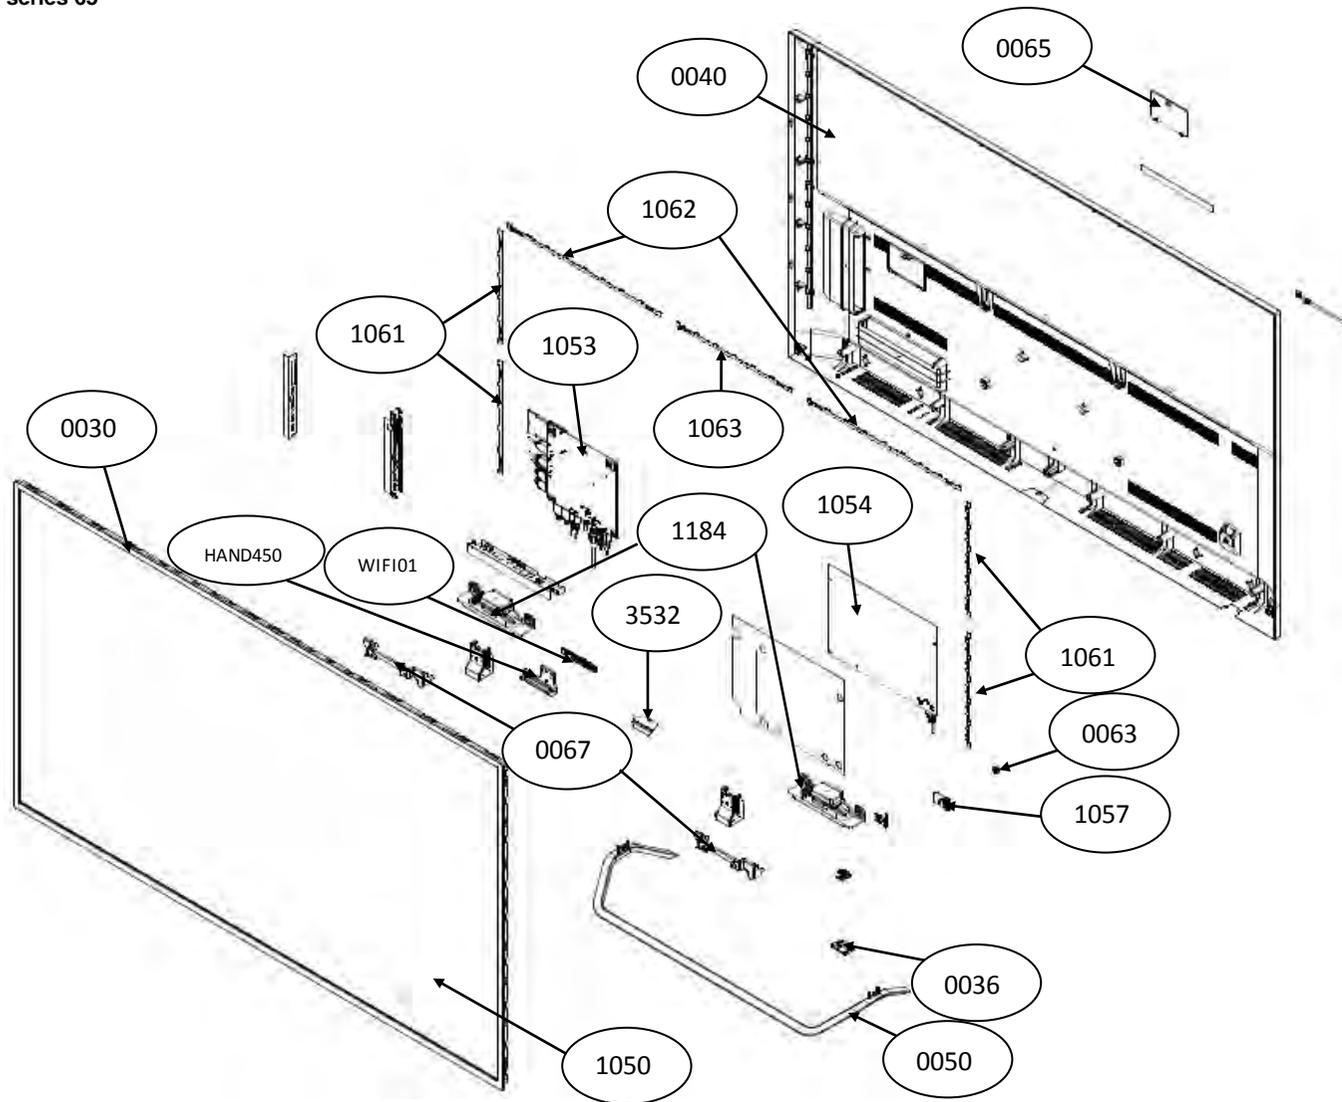


Pos No.	Description	Remarks
0030	Bezel	
0036	LENS	
0040	Rear cover	
0050	Stand	
0063	KEY_FUNCTION	
0065	COVER_CLOCK_REAR	
0067	COVER_SPK	
1050	Display panel	
1053	Panel SSB	
1054	Power Supply Unit	
1056	IR/LED panel	
1057	KEY BOARD ASSY	
1061	AMBILIGHT ASSY	
1062	AMBILIGHT ASSY	
1063	AMBILIGHT ASSY	
1176	Remote control	Not displayed
1184	Speakers	
3532	DECO_LOGO	
HAND450	Case_holder	
WIFI01	WIFI/BT USB	

6482 series 49"

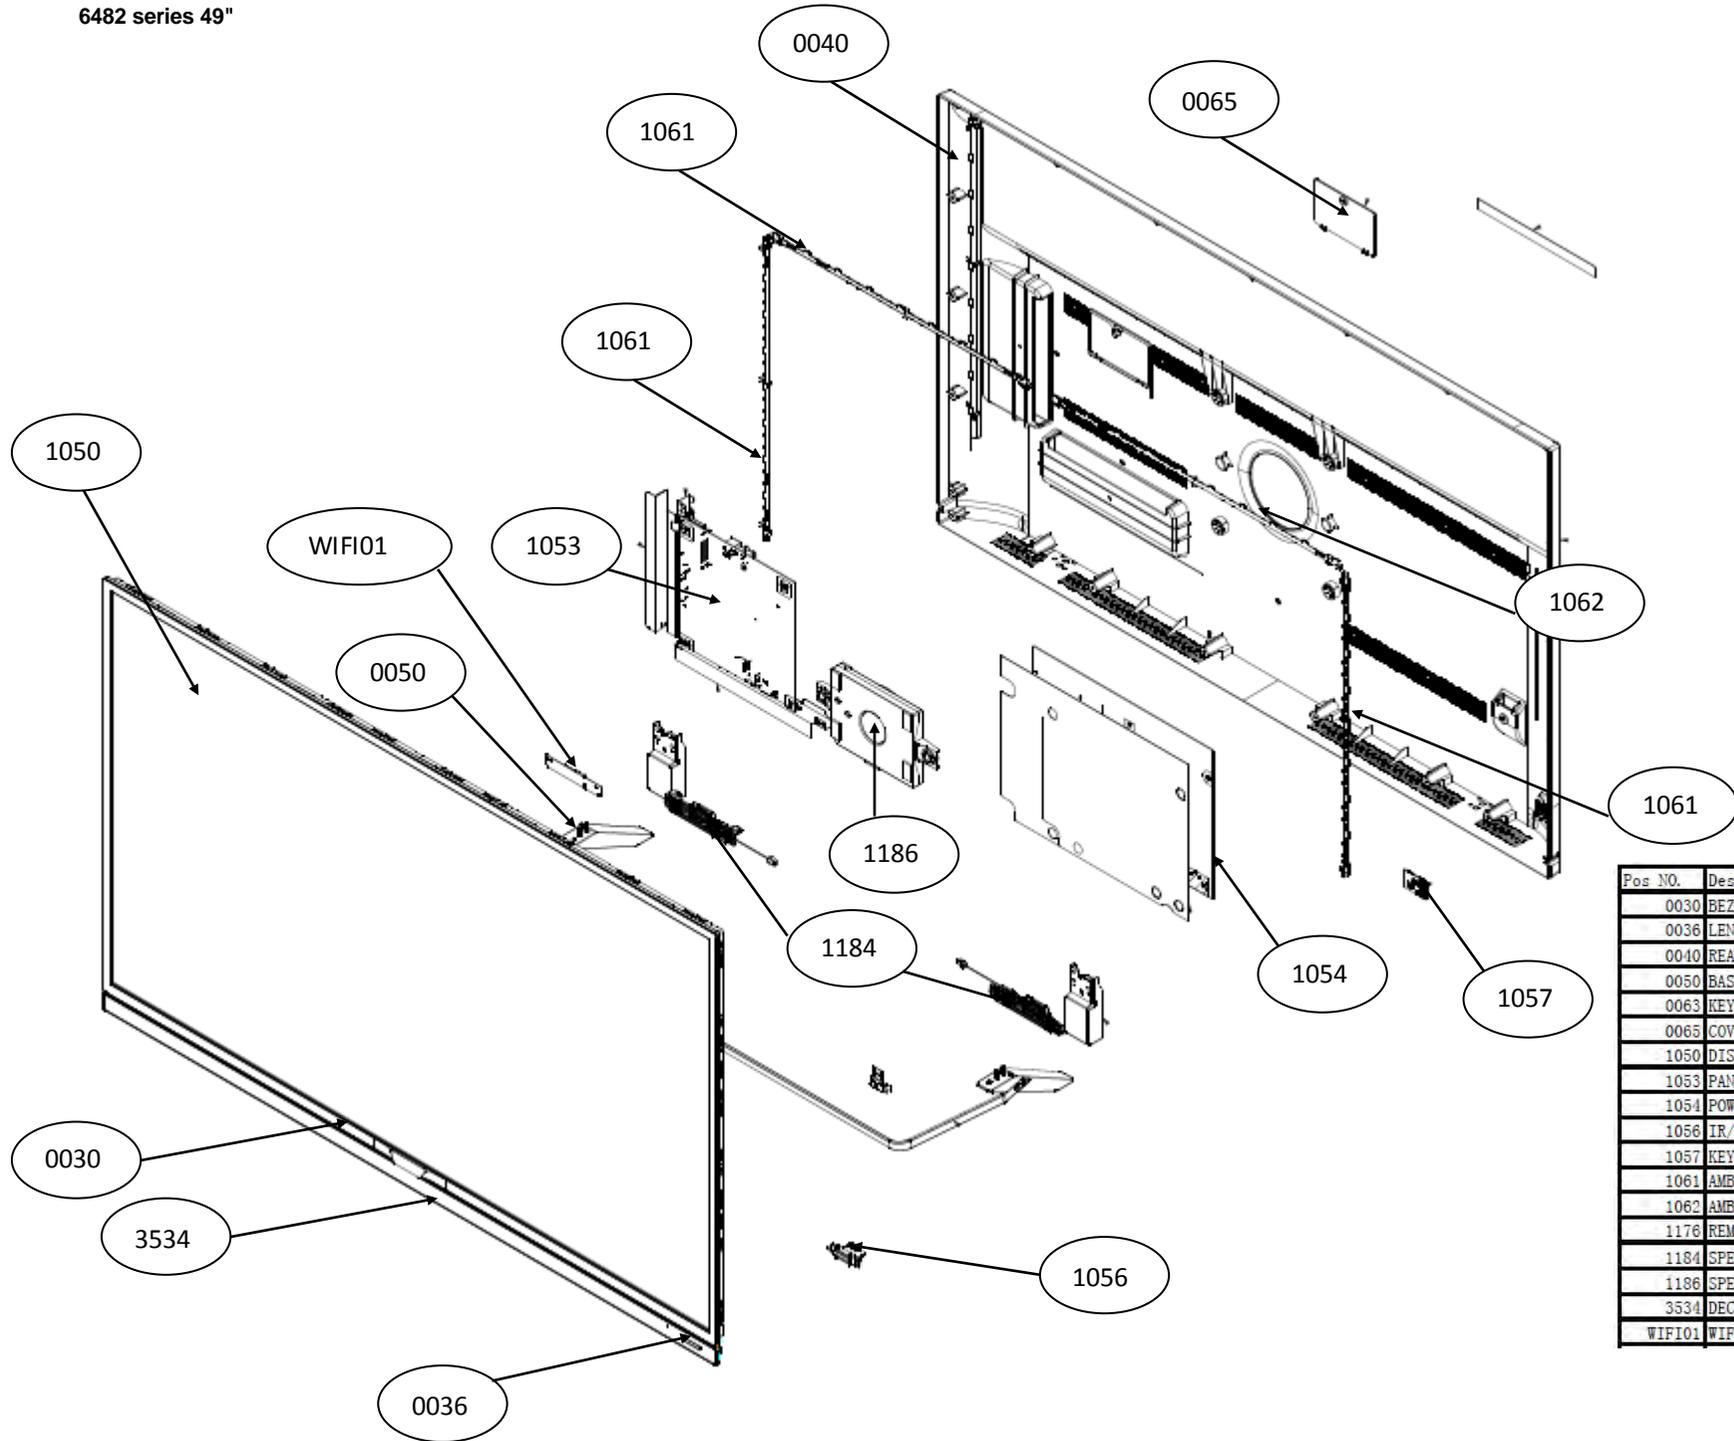

Pos NO.	Description	Remark
0030	BEZEL	
0036	LENS_IR	
0040	REAR COVER	
0050	BASE	
0063	KEY_FUNCTION	
0065	COVER CLOCK REAR	
1050	DISPLAY PANEL	
1053	PANEL SSB	
1054	POWER SUPPLY UNIT	
1056	IR/LED PANEL	
1057	KEYBOARD CONTROL PANEL	
1061	AMBILIGHT ASSY(LED 9)	
1062	AMBILIGHT ASSY(LED 10)	
1176	REMOTE control	Not displayed
1184	SPEAKER	
1186	SPEAKER	
3534	DECO SHEET	
WIFI01	WIPI USB	


7502 series 49"/55"

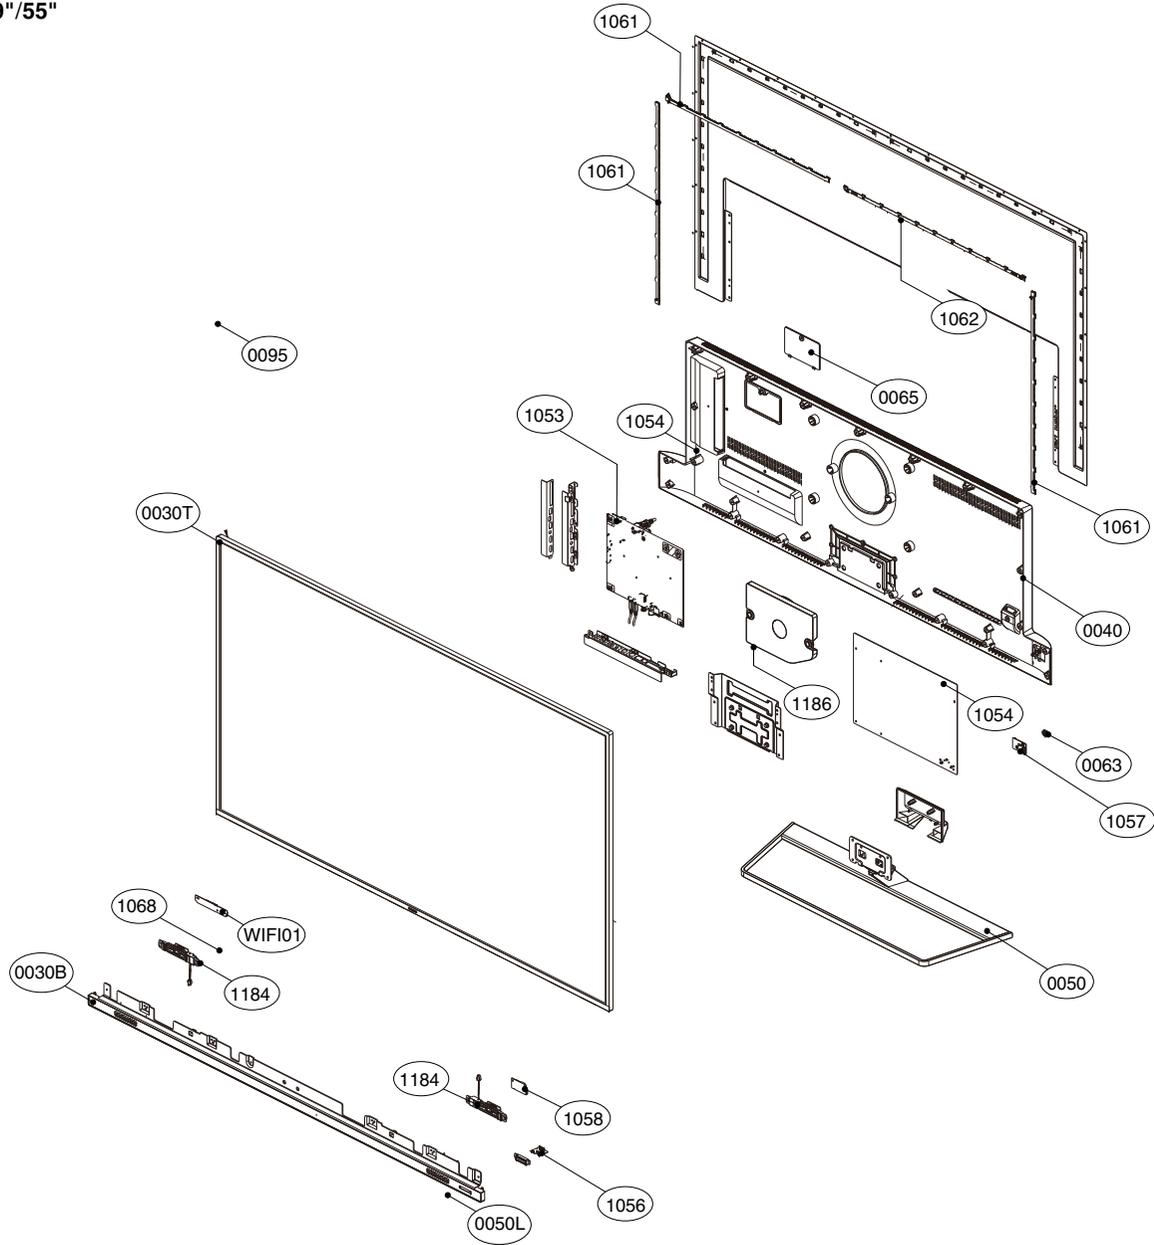

Pos No.	Description	Remarks
0030T	Bezel-TOP	
0030B	Bezel-BOTTOM	
0040	Rear cover	
0050	BASE	
0063	KEY_FUNCTION	
0065	COVER_LOCK_REAR	
1050	Display panel	
1053	Panel SSB	
1054	Power Supply Unit	
1056	IR/LED panel	
1057	Keyboard control panel	
1068	Option Board	
1061	LED Modules	
1062	LED Module	
1176	Remote control	Not displayed
1184	Speakers	
1186	Speaker	
WIFI01	WiFi_USB	


FOR ELECTRICAL PARTS/ASSEMBLIES SEE WIRING DIAGRAM CHAPTER 9

7502 series 65"

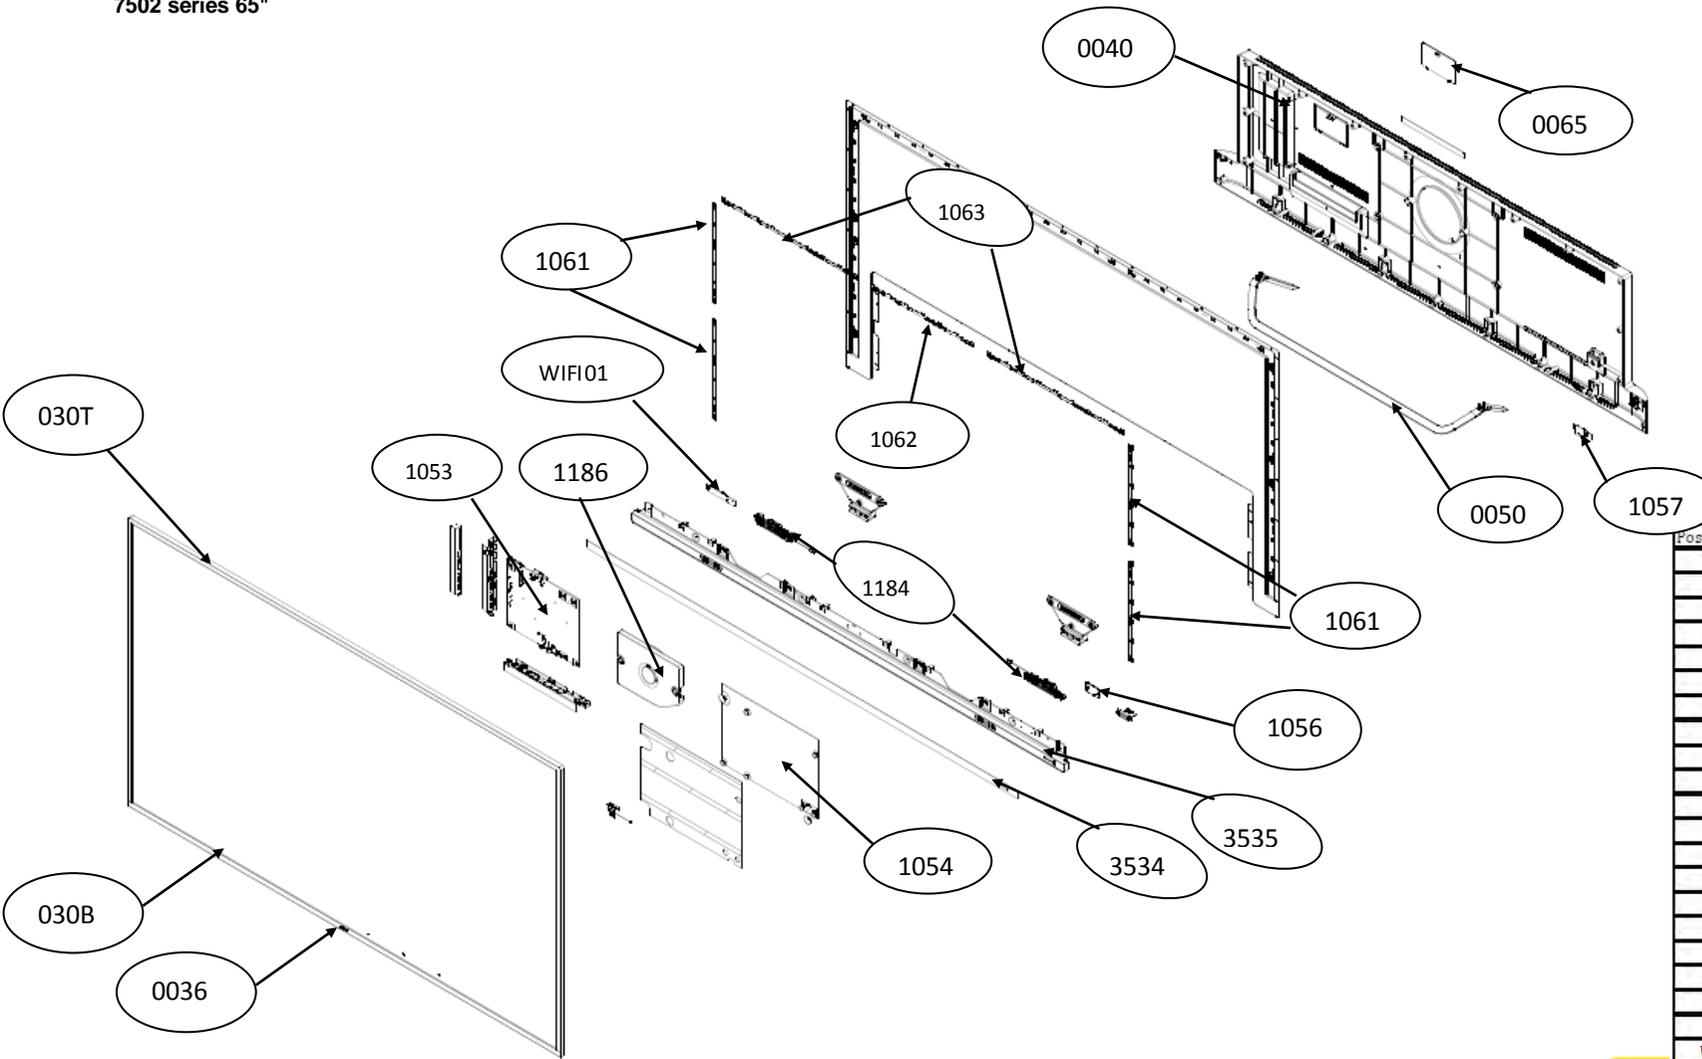

Pos NO.	Description	Remark
030T	BEZEL-TOP	
030B	BEZEL-BOTTOM	
0036	LENS_IR	
0040	REAR COVER	
0050	BASE	
0063	KEY_FUNCTION	
0065	COVER_CLOCK_REAR	
1050	DISPLAY PANEL	
1053	PANEL_SSB	
1054	POWER SUPPLY UNIT	
1056	IR/LED PANEL	
1057	KEYBOARD CONTROL PANEL	
1061	AMBILIGHT ASSY	
1062	AMBILIGHT ASSY	
1063	AMBILIGHT ASSY	
1176	REMOTE control	Not displayed
1184	SPEAKER	
1186	SPEAKER	
3534	DECO SHEET	
3535	DECO BEZEL	
WIFI01	WIFI USB	

9002 series 55"

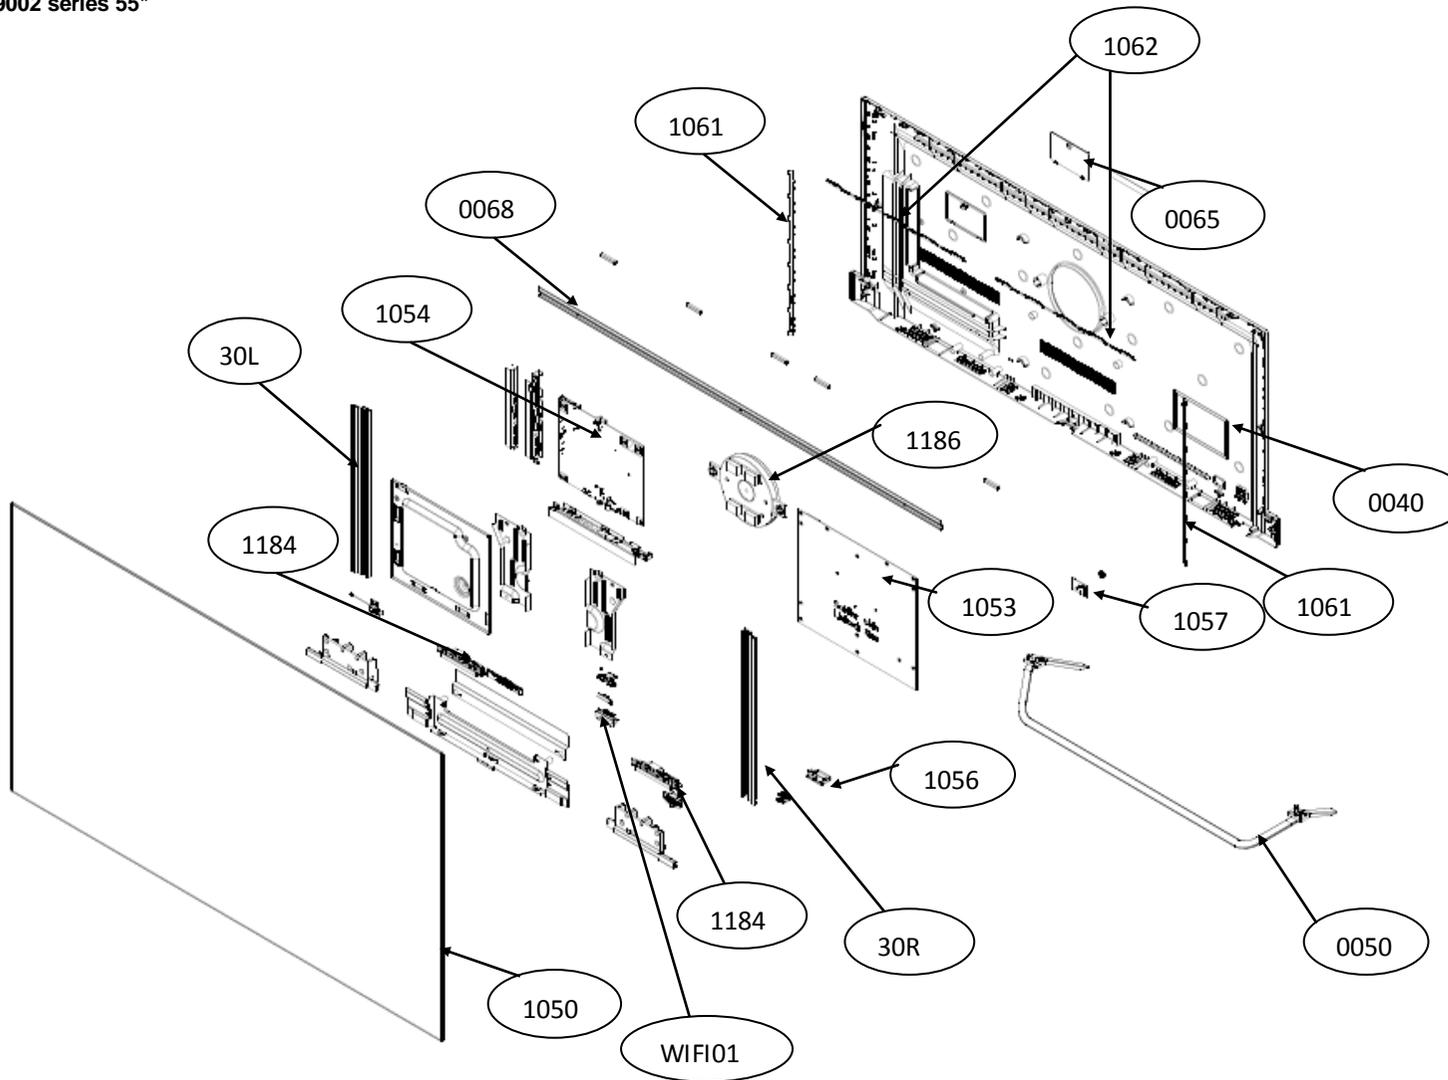

Pos NO.	Description	Remark
40	REAR_COVER	
50	BASE_ASSY	
65	COVER_CLOCK_REAR	
68	LIGHT_GUIDE	
1050	LCD LC550AQD-GJAB KR LGD	
1053	MB_ASSY	
1054	POWER_BOARD_ASSY	
1055	OPTION_BOARD_ASSY	
1056	IR_BOARD_ASSY	
1057	KEY_BOARD_ASSY	
1061	Ambilight ASSY(2)	
1062	Ambilight ASSY(2)	
1176	REMOTE Control	No displayed
1184	SPEAKER	
1186	SPEAKER WOOFER	
30L	Bezel_Plastic Front L	
30R	Bezel_Plastic Front R	
WIFI01	WIFI/BT USB	