


Instructions

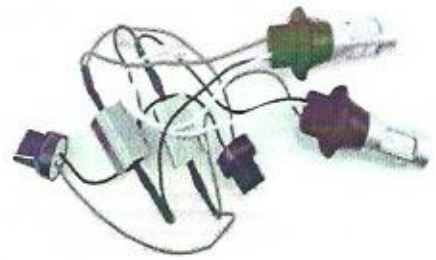

Product: T20 switchback leds
Voltage: 12v

1. Replace the regular bulbs for the switchback led [A].
2. Place the resistors somewhere to the metal body of the car. [A2]
3. Connect the connector [B] into the original connectors of the turn signal.
4. Install the red connector of the wire loom on one side to the switchback led [C]
5. Clamp with the blue clamp the open cable of the wire loom to the + of the parking light [D]
6. Install the last cable of the wire loom behind the crashbar to the other side to the switchback led [E]
7. Install the red connectors of the wire loom on one side to the switchback led [F]
8. Let's turn them on and enjoy ;)

